
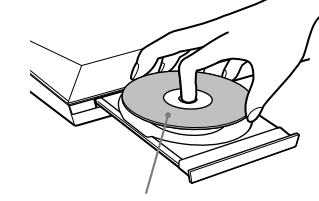
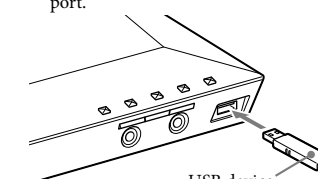


Playing a Disc	Using the Bluetooth function	Note	Other Playback Operations	To search for a title/chapter/track/scene, etc.	Selecting the Sound Effect
<ol style="list-style-type: none">Press DVD/CD. You can also select this function by pressing FUNCTION repeatedly.Press to open the disc tray.Place a disc on the tray, then press .  <p>With the label side up.</p> <ol style="list-style-type: none">Press to start playback.Press VOL +/- to adjust the volume.	<ol style="list-style-type: none">Press DVD/CD or USB. <ul style="list-style-type: none">DVD/CD: For a disc.USB: For a USB device. You can also select the function by pressing FUNCTION repeatedly.Load the source. <ul style="list-style-type: none">For a disc: Place a disc on the tray by pressing to open/close the disc tray.For a USB device: Connect a USB device to the (USB) port. Press to select a folder, then press and select a file.Press to start playback.Press VOL +/- to adjust the volume. <p>Note</p> <ul style="list-style-type: none">Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.Depending on the disc/USB device, files may not be played back.	<p>• This system can be paired with up to eight devices. If a further device is paired, the pairing information of the device with the oldest connection data is overwritten with new information.</p> <ul style="list-style-type: none">The connection history with this system is deleted on the connected device.The system is reset to its default status. <p>Pairing this system with a Bluetooth device</p> <p>Pairing is performed as described below.</p> <ol style="list-style-type: none">Place the system and a Bluetooth device within 1 meter of each other.Press BLUETOOTH. "BT READY" appears in the front panel display.Set the Bluetooth device in pairing mode. <p>For details on setting the Bluetooth device in pairing mode, refer to the operating instructions supplied with the device.</p>Select "SONY DVD HOME THEATRE SYSTEM" on the Bluetooth device display. <p>On some Bluetooth devices, the list may not be displayed.</p> <p>If a Paskey is requested, enter "0000". Perform this step within 5 minutes, otherwise pairing will be canceled.</p>Once pairing is completed, the device is automatically connected to the system. <p>When the Bluetooth connection is made correctly, the indicator of the front panel display lights and the pairing information is stored in the system.</p> <p>Note</p> <ul style="list-style-type: none">For details on operation of the connected devices, refer to the operating instructions supplied with the devices.The Bluetooth devices to be connected must support A2DP (Advanced Audio Distribution Profile). <p>About pairing</p> <p>Pairing is an operation where Bluetooth devices are registered with each other beforehand. Use the procedure below to pair the system with your Bluetooth device. Once a pairing operation is performed, it does not have to be performed again. However, pairing is to be repeated in the cases listed below.</p> <ul style="list-style-type: none">Pairing information is deleted by repairing the system.	<p>Press DISPLAY during playback to select the desired angle. (This applies to DVD VIDEOS only.)</p> <p>To display subtitles</p> <p>Press DISPLAY during playback to select the desired subtitle language. (This applies to DVD VIDEOS only.)</p> <p>To change the sound</p> <p>Press AUDIO repeatedly during playback to select the desired audio signal.</p> <p>— When the system is playing a DVD VIDEO recorded in multiple audio formats (PCM, Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language.</p> <p>— With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.</p> <p>To play a VIDEO CD with PBC functions</p> <p>When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.</p> <p>To play without using PBC</p> <p>In stop mode, press and hold SHIFT, then press the number buttons to select the track number you want.</p>	<p>To play repeatedly/shuffle, etc.</p> <p>Press and hold SHIFT, then press REPEAT repeatedly to select the desired playback mode. The selected mode appears in the front panel display.</p> <ul style="list-style-type: none">"REP CHP": Repeats the current chapter."REP TT": Repeats the current title."REP ALL": Repeats all titles."REP TRK": Repeats the current track."REP OFF": The system returns to normal playback mode."SHUFFLE": Plays the contents once in random order until all the contents have been played."SHUF REP": Repeats shuffle play."FOLDER": Plays the current folder."RANDOM": Plays all files in random order."SINGLE": Plays the current file."REP ONE": Repeats the current file."REP FLD": Repeats the current folder. <p>Note</p> <ul style="list-style-type: none">The selectable modes and their order differ depending on the disc or file.	<p>To select an equalizer setting</p> <p>Press EQ to display the current mode. While the current mode is displayed, press EQ repeatedly until the desired mode appears on the front panel display.</p> <ul style="list-style-type: none">"AUTO": Automatically selects the movie or music sound mode based on the disc type."MOVIE": Enjoyable, powerful bass and sound effects; recommended for movies."MUSIC": Well-balanced low and high range; recommended for music."T": Clear, mid-range vocals; recommended for watching dramas or comedies."GAME": Enhanced low and high range; recommended for action or shooting games, etc. <p>To select a surround setting</p> <p>Press SURROUND to display the current mode. While the current mode is displayed, press SURROUND repeatedly to select the desired surround audio output mode. The selected mode appears in the front panel display.</p> <ul style="list-style-type: none">"MULTI" (A.F.D. MULTI): When the source is 2-channel, sound is output from all speakers."STANDARD" (A.F.D. STANDARD): The system discriminates the sound format of the source and presents sound as it was recorded/encoded."DOLBY PL" (PRO LOGIC): Performs Dolby Pro Logic decoding."2CH ST" (2CH STEREO): All formats are downmixed to 2 channels. <p>Note</p> <ul style="list-style-type: none">Depending on the playback stream, the surround settings may not be effective.

Enjoying Karaoke

- Plug a microphone into the MIC Jack.

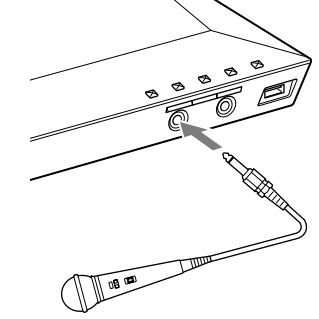

The system enters karaoke mode.

- Start audio playback following the Steps in "Playing a Disc" or "Playing Files on a Disc/USB Device".
- Sing along to the audio.

Press MIC VOL +/- to adjust the microphone volume.

- Note**
- Before connecting, press MIC VOL - to set the microphone volume to minimum.
 - Microphone sound is not output when:
 - the microphone is not connected to the unit properly.
 - the microphone volume is set to minimum.
 - you use a microphone other than the monaural dynamic type.

To add an echo effect
<ol style="list-style-type: none">Press KARAOKE. The Karaoke Setup menu appears.Press to select [Echo Level], then press .Press to change the echo level. To cancel the echo effect, select echo level "0". <p>Note</p> <ul style="list-style-type: none">If howling occurs: <ul style="list-style-type: none">Move the microphone away from the speakers.Lower the microphone volume or echo level.Lower the overall volume.

Changing the key of a song (Key Control)
<p>You can change the key to suit your vocal range, except when the system is in stop mode.</p> <ol style="list-style-type: none">Press KARAOKE. The Karaoke Setup menu appears.Press to select [Key Control], then press .Press to change the key. <p>Note</p> <ul style="list-style-type: none">Depending on the source, you may not be able to change the key.The key returns to the original when: <ul style="list-style-type: none">the unit is turned off.the playback source is changed.a disc or a USB device is removed.

Video Setup Page
<p>■ [HDMI Resolution]</p> <p>You can select the type of video signal that is output from the HDMI OUT jack.</p> <p>[Auto]: The system outputs the optimal video signal for the connected TV.</p> <p>[480p/576p]: The system outputs 720 × 480p* or 720 × 576p* video signals.</p> <p>[720p]: The system outputs 1280 × 720p* video signals.</p> <p>[1080i]: The system outputs 1920 × 1080i* video signals.</p> <p>[1080p]: The system outputs 1920 × 1080p* video signals.</p> <p>* i: interlace, p: progressive</p>

Preference Page
<p>■ [TV Type]</p> <p>The TV type default setting varies depending on the area.</p> <p>[PAL]: For a PAL-system TV.</p> <p>[NTSC]: For an NTSC-system TV.</p> <p>■ [Audio]</p> <p>You can select the preferred audio language for DVDs with multiple sound tracks.</p> <p>■ [Subtitle]</p> <p>You can switch the language of the subtitles recorded on a DVD VIDEO.</p> <p>■ [Disc Menu]</p> <p>You can switch the language for a disc's menu.</p> <p>■ [Parental]</p> <p>You can restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes.</p>

<ol style="list-style-type: none">Press to select a rating level from 1 to 8 or [Off], then press .Press and hold SHIFT, then press the number buttons to enter your 6-digit password. <p>■ [Default]</p> <p>This feature enables you to reset all the setup menu options and your personal settings to the factory defaults, except for your password for the [Password] and [Parental] items. Press to confirm the default reset.</p>	<p>■ [Password Setup Page]</p> <p>■ [Password]</p> <p>The default password is "000000". To change the password:</p> <ol style="list-style-type: none">Press and hold SHIFT, then press the number buttons to enter "000000" or your last set 6-digit password in the [Old Password] section.Press and hold SHIFT, then press the number buttons to enter a new 6-digit password in the [New Password] section.Press and hold SHIFT, then press the number buttons to enter the new 6-digit password again in the [Confirm PWD] section to confirm your entry.Press [OK] to exit the menu.
---	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

Specifications							
<p>Amplifier Section</p> <p>POWER OUTPUT (rated):</p> <p>Front L + Front R 100 W + 100 W (at 3 ohms, 1 kHz, 1% THD)</p> <p>POWER OUTPUT (reference):</p> <p>Front L/Front R/Center/Surround L/ Surround R: 167 W (per channel at 3 ohms, 1 kHz)</p> <p>Subwoofer: 165 W (at 3 ohms, 100 Hz)</p> <p>Inputs</p> <p>AUDIO IN and OPTICAL IN jacks</p> <p>CD/DVD System</p> <p>Laser Diode Properties</p> <table> <tr> <td>Emission</td><td>Duration:</td></tr> <tr> <td>Continuous</td><td>Laser Output*: Less than 44.6 μW</td></tr> </table> <p>* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.</p> <p>USB Section</p> <p> (USB) port:</p> <p>Maximum current: 500 mA</p> <p>Bluetooth Section</p> <p>Communication system</p> <table> <tr> <td>Bluetooth Specification version 2.1 + EDR (Enhanced Data Rate)</td><td></td></tr> </table> <p>Video Section</p> <p>Power Class 2</p> <p>Maximum communication range</p> <p>Line of sight approx. 10 m⁺¹</p>	Emission	Duration:	Continuous	Laser Output*: Less than 44.6 μW	Bluetooth Specification version 2.1 + EDR (Enhanced Data Rate)		
Emission	Duration:						
Continuous	Laser Output*: Less than 44.6 μW						
Bluetooth Specification version 2.1 + EDR (Enhanced Data Rate)							

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

Frequency band	2.4 GHz band (2.4000 GHz - 2.4835 GHz)
Modulation method	FHSS (Freq Hopping Spread Spectrum)
Compatible Bluetooth profiles ⁺¹	A2DP (Advanced Audio Distribution Profile)
Supported Codecs ⁺³	AVRCP 1.0 (Audio Video Remote Control Profile)
Transmission range (A2DP)	20 Hz - 20,000 Hz (Sampling frequency 44.1 kHz)
⁺¹ The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone, reception sensitivity, operating system, software application, etc.	
⁺² Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices.	
⁺³ Codec: Audio signal compression and conversion format	
⁺⁴ Subband Codec	
Tuner Section	
System	PLL quartz-locked digital synthesizer
Tuning range	87.5 MHz - 108.0 MHz (50 kHz step)
Antenna	FM lead antenna
Video Section	
Outputs	VIDEO: Pin jack HDMI OUT: HDMI 19-pin

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

To select a preset radio station
<ol style="list-style-type: none">Press FM.Press and hold TUNING +/- for 2 seconds to start tuning until you find the desired radio station. "SEARCH +" or "SEARCH -" appears in the front panel display until a radio station with sufficient signal strength is found.Press and hold SHIFT, then press PROGRAM. "P 01" flashes in the front panel display.Press and hold SHIFT, then press the number buttons to select a preset number.Press to store the station frequency.

To select a preset radio station
<ol style="list-style-type: none">Press FM.Press PRESET +/- to select a preset number. <p>You can also select a preset number by pressing and holding SHIFT, then pressing the number buttons.</p> <p>If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.</p> <p>Press AUDIO.</p> <p>"STEREO": Stereo reception.</p> <p>"MONO": Monaural reception.</p>

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
--	--

<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. <p>■ [On cleaning discs]</p> <ul style="list-style-type: none">Before playing, clean the disc with a cleaning cloth.Wipe the disc from the center out.Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.	<p>■ [On cleaning discs, disc/lens cleaners]</p> <ul style="list-style-type: none">Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction. <p>■ [On your TV's color]</p> <p>IMPORTANT NOTICE</p> <p>Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen.</p> <p>Projection televisions are especially susceptible to this.</p> <p>■ [On moving the system]</p> <p>Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).</p> <p>■ [On handling discs]</p> <ul style="list-style-type: none">To keep the disc clean, handle the disc by its edge. Do not touch the surface.Do not stick paper or tape on the disc.Do not expose the disc to direct sunlight
--	--