



Television

Reference Guide	GB
參考指南	CT

BRAVIA

Table of Contents

Safety information	2
Precautions	6
Parts and Controls	8
Controls and Indicators	8
Using Remote Control	9
Remote Control Parts Description	9
Connection Diagram	11
Installing the TV to the Wall	14
Using the supplied Wall-Mount Bracket (KD-75X9400D, KD-65/55X9300D only) ...	14
Using the optional Wall-Mount Bracket ...	15
SU-WL500 (KD-75X9400D only)	17
SU-WL450 (KD-65/55X9300D, KD-65/55X8500D only)	20
Troubleshooting	24
Troubles and Solutions	24
Specifications	25

Introduction

Thank you for choosing this Sony product.
Before operating the TV, please read this manual thoroughly and retain it for future reference.

Note

- Before operating the TV, please read the "Safety information" (page 2).
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.

Location of the Setup Guide

Setup Guide is placed on top of the cushion inside the TV carton.

Help Guide

Help Guide explains the information on how to use the TV's features. To display Help Guide on the TV, press **HELP** on the remote control and select [Help Guide].

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

For models with supplied AC adapter:

Labels for the AC adapter Model No. and Serial No. are located on the bottom of the AC adapter.

This television is designed for use in Hong Kong and ensured the usage in Hong Kong only.

Safety information

WARNING

Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Installation/Set-up


Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electric shock or damage and/or injuries.

Installation


- The TV set should be installed near an easily accessible AC power outlet (mains socket).
- Place the TV on a stable, level surface to prevent it from falling over and causing personal injury or property damage.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Only qualified service personnel should carry out wall-mount installations.

- For safety reasons, it is strongly recommended that you use Sony accessories, including:
 - Supplied Wall-Mount Bracket (KD-75X9400D, KD-65/55X9300D only)
 - Wall-Mount Bracket SU-WL500 (KD-75X9400D only)
 - Wall-Mount Bracket SU-WL450 (Except KD-75X9400D)
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set. The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket. The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.
 - Supplied Wall-Mount Bracket


KD-75X9400D only

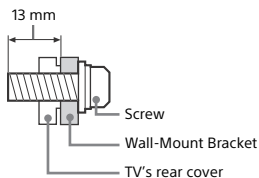


KD-65/55X9300D only

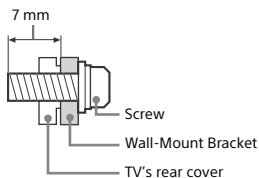

- Optional Wall-Mount Bracket
- #### KD-75X9400D, KD-65/55X9300D only

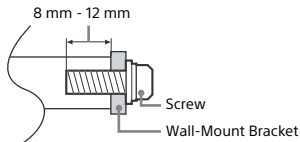


Except KD-75X9400D, KD-65/55X9300D

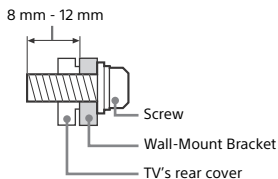


Transporting

- Before transporting the TV set, disconnect all cables.
- Two or three people are needed to transport a large TV set.
- When transporting the TV set by hand, hold it as shown below. Do not put stress on the LCD panel and the frame around the screen.

KD-75X9400D, KD-65/55X9300D only

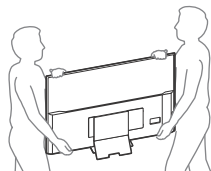



Except KD-75X9400D, KD-65/55X9300D

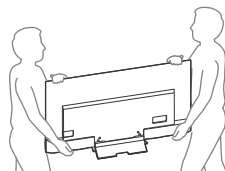


- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

Topple prevention


KD-75X9400D, KD-65/55X9300D

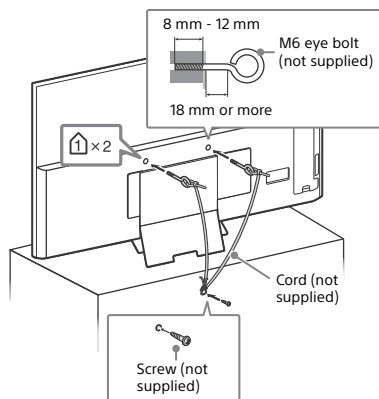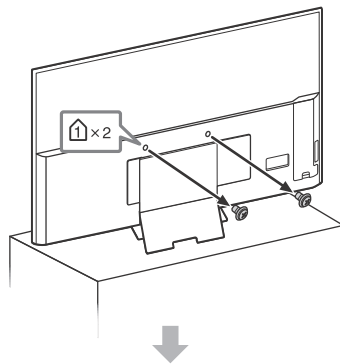

KD-65X8500D

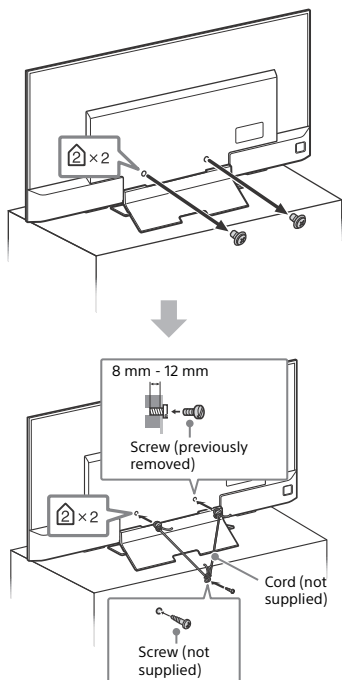


KD-55X8500D

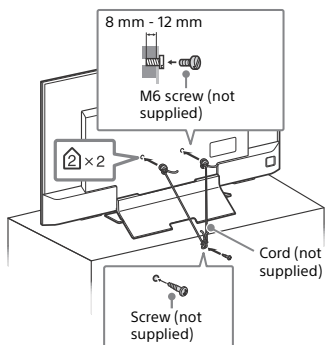


Ventilation

- Never cover the ventilation holes or insert anything in the cabinet.
- Leave space around the TV set as shown below.
- It is strongly recommended that you use a Sony Wall-Mount Bracket in order to provide adequate air circulation.

Installed on the wall

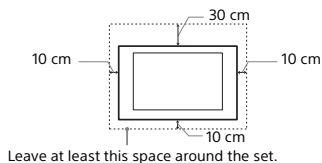


Installed with stand

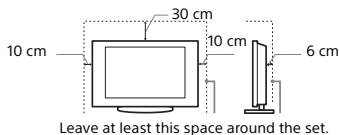

- To ensure proper ventilation and prevent the collection of dirt or dust:
 - Do not lay the TV set flat, install upside down, backwards, or sideways.
 - Do not place the TV set on a shelf, rug, bed or in a closet.
 - Do not cover the TV set with a cloth, such as curtains, or items such as newspapers, etc.
 - Do not install the TV set as shown below.

Air circulation is blocked.

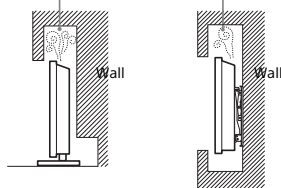

AC power cord (mains lead)

Handle the AC power cord (mains lead) and outlet (mains socket) as follows in order to avoid any risk of fire, electric shock or damage and/or injuries:

- Use only Sony supplied AC power cords (mains lead), not those of other brands.
- Insert the plug fully into the AC power outlet (mains socket).
- Operate the TV set on a 220 V - 240 V AC supply only.
- When wiring cables, be sure to unplug the AC power cord (mains lead) for your safety and take care not to catch your feet on the cables.
- Disconnect the AC power cord (mains lead) from the AC power outlet (mains socket) before working on or moving the TV set.
- Keep the AC power cord (mains lead) away from heat sources.
- Unplug the AC power plug (mains plug) and clean it regularly. If the plug is covered with dust and it picks up moisture, its insulation may deteriorate, which could result in a fire.

Note

- Do not use the supplied AC power cord (mains lead) on any other equipment.
- Do not pinch, bend, or twist the AC power cord (mains lead) excessively. The core conductors may be exposed or broken.
- Do not modify the AC power cord (mains lead).
- Do not put anything heavy on the AC power cord (mains lead).
- Do not pull on the AC power cord (mains lead) itself when disconnecting the AC power cord (mains lead).
- Do not connect too many appliances to the same AC power outlet (mains socket).
- Do not use a poor fitting AC power outlet (mains socket).

NOTE ON AC ADAPTER (models with supplied AC adapter only)

Warning

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus. Do not install this equipment in a confined space, such as a bookshelf or similar unit.

- Please ensure that the AC power outlet (mains socket) is installed near the equipment and shall be easily accessible.
- Be sure to use the supplied AC adapter and AC power cord (mains lead). Otherwise it may cause a malfunction.
- Connect the AC adapter to an easily accessible AC power outlet (mains socket).
- Do not coil the AC power cord (mains lead) around the AC adapter. The core wire may be cut and/or it may cause a malfunction of the TV.



- Do not touch the AC adapter with wet hands.
- If you notice an abnormality in the AC adapter, disconnect it from the AC power outlet (mains socket) immediately.
- The set is not disconnected from the AC source as long as it is connected to the AC power outlet (mains socket), even if the set itself has been turned off.
- As the AC adapter will become warm when it is used for a long time, you may feel hot when touching it by hand.

Prohibited Usage

Do not install/use the TV set in locations, environments or situations such as those listed below, or the TV set may malfunction and cause a fire, electric shock, damage and/or injuries.

Location:

- Outdoors (in direct sunlight), at the seashore, on a ship or other vessel, inside a vehicle, in medical institutions, unstable locations, near water, rain, moisture or smoke.
- If the TV is placed in the changing room of a public bath or hot spring, the TV may be damaged by airborne sulfur, etc.



- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor colour. Should this occur, allow moisture to evaporate completely before powering the TV on.


Environment:

- Do not install the TV in places that are hot, humid, or excessively dusty; where insects may enter; where it might be exposed to mechanical vibration, near flammable objects (candles, etc.). The TV set shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the TV.
- Do not place the TV in a humid or dusty space, or in a room with oily smoke or steam (near cooking tables or humidifiers). Fire, electric shock, or warping may result.
- Do not install the TV in places subject to extreme temperature, such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such conditions which can cause deformation of the enclosure and/or TV malfunction.



Situation:

- Do not use when your hands are wet, with the cabinet removed, or with attachments not recommended by the manufacturer. Disconnect the TV set from AC power outlet (mains socket) and antenna (aerial) during lightning storms.
- Do not install the TV so that it sticks out into an open space. This may result in injury or damage from a person or object bumping into the TV.

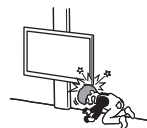

Broken pieces:

- Do not throw anything at the TV set. The screen glass may break by the impact and cause serious injury.
- If the surface of the TV set cracks, do not touch it until you have unplugged the AC power cord (mains lead). Otherwise this may cause an electric shock.

When not in use

- If you will not be using the TV set for several days, the TV set should be disconnected from the AC power (mains) for environmental and safety reasons.
- As the TV set is not disconnected from the AC power (mains) when the TV set is just turned off, pull the plug from the AC power outlet (mains socket) to disconnect the TV set completely.
- Some TV sets may have features that require the TV set to be left in standby to work correctly.

For children

- Do not allow children to climb on the TV set.
- Keep small accessories out of the reach of children, so that they are not mistakenly swallowed.

If the following problems occur...

Turn off the TV set and unplug the AC power cord (mains lead) immediately if any of the following problems occur.

Ask your dealer or Sony service centre to have it checked by qualified service personnel.

When:

- AC power cord (mains lead) is damaged.
- Poor fitting of AC power outlet (mains socket).
- TV set is damaged by being dropped, hit or having something thrown at it.
- Any liquid or solid object falls through openings in the cabinet.

About LCD TV Temperature

When the LCD TV is used for an extended period, the panel surrounds become warm. You may feel hot when touching there by the hand.

WALL-MOUNT BRACKET (models with supplied Wall-Mount Bracket only)

Below information shows the correct handling of the Wall-Mount Bracket. Be sure to read this information thoroughly and use the Wall-Mount Bracket correctly.

To Customers:



Be sure to observe the following precautions for safety to prevent a serious injury through fire, electric shock, the product toppling over, or the product dropping.

- Be sure to subcontract the installation to licensed contractors and keep small children away during installation.
- Be sure to subcontract moving or dismounting of the TV to licensed contractors.
- Do not remove screws, etc., after mounting the TV.
- Do not make alterations to the parts of the Wall-Mount Bracket.
- Do not mount any equipment other than the specified product.
- Do not apply any load other than the TV on the Wall-Mount Bracket.
- Do not lean on or hang from the TV.
- Do not handle the TV with excessive force during cleaning or maintenance.


To Sony Dealers and Contractors:

The following instructions are for Sony dealers and contractors only. Be sure to read safety precautions described below and pay special attention to safety during the installation, maintenance and checking of this product.

- When handling or mounting the TV set, hold it on the sides. Do not lift the TV by the U-shaped Bar.

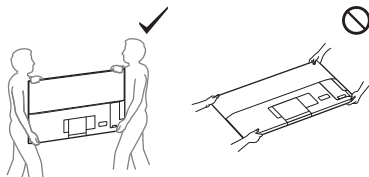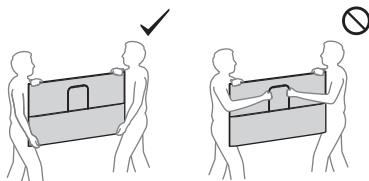


 
- When handling or mounting the TV set, do not lay down the TV.



- Do not install the Wall-Mount Bracket on wall surfaces where the corners or the sides of the TV are protruding away from the wall surface.



- Do not install the TV over or under an air conditioner.
- Be sure to install the Wall-Mount Bracket securely to the wall following the instructions in the supplied Wall-Mount Bracket Installation Guide. If any of the screws are loose or fall out, the Wall-Mount Bracket may fall and cause injury or property damage.
- Be sure to use the supplied screws and attachment parts properly following the instructions given in the supplied Wall-Mount Bracket Installation Guide. If you use substitute items, the TV may fall and cause bodily injury to someone or damage to the TV.
- Be sure to assemble the bracket properly following the instructed procedure explained in the supplied Wall-Mount Bracket Installation Guide.
- Be sure to tighten the screws securely in the designated position.
- Be careful not to subject the TV to shock during installation.
- Be sure to install the TV on a wall that is both perpendicular and flat.
- After proper installation of the TV, secure the cables properly.
- Do not allow the AC power cord (mains lead) or the connecting cables to be pinched as the internal conductors may become exposed and cause a short circuit or an electrical break.

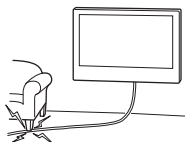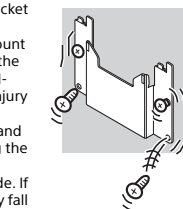

Precautions

Viewing the TV

- View the TV in moderate light, as viewing the TV in poor light or during long period of time, strains your eyes.
- When using headphones, adjust the volume so as to avoid excessive levels, as hearing damage may result.

(3D compatible models only)

- Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of any other device or media used with this television and (ii) our website (<http://www.sony-asia.com/support>) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.
- Do not use, store, or leave the 3D Glasses or battery near a fire, or in places with a high temperature, e.g., in direct sunlight, or in sun-heated cars.

LCD Screen

- Although the LCD screen is made with high-precision technology and 99.99 % or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD screen and is not a malfunction.
- Do not push or scratch the front filter, or place objects on top of this TV set. The image may be uneven or the LCD screen may be damaged.
- If this TV set is used in a cold place, a smear may occur in the picture or the picture may become dark. This does not indicate a failure. These phenomena disappear as the temperature rises.
- Ghosting may occur when still pictures are displayed continuously. It may disappear after a few moments.
- The screen and cabinet get warm when this TV set is in use. This is not a malfunction.
- The LCD screen contains a small amount of liquid crystal. Follow your local ordinances and regulations for disposal.

Handling and cleaning the screen surface/cabinet of the TV set

Be sure to unplug the AC power cord (mains lead) connected to the TV set from AC power outlet (mains socket) before cleaning. To avoid material degradation or screen coating degradation, observe the following precautions.

- To remove dust from the screen surface/cabinet, wipe gently with a soft cloth. If dust is persistent, wipe with a soft cloth slightly moistened with a diluted mild detergent solution.
- Never spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts and enter the TV set, and may cause damage to the TV set.



- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the screen surface and cabinet material.
- Do not touch the TV if your hand is covered in any chemical substance such as hand cream or sunblock.
- Periodic vacuuming of the ventilation openings is recommended to ensure proper ventilation.
- When adjusting the angle of the TV set, move it slowly so as to prevent the TV set from moving or slipping off from its table stand.

Optional Equipment

Keep optional components or any equipment emitting electromagnetic radiation away from the TV set. Otherwise picture distortion and/or noisy sound may occur.

Wireless Function of the unit

- Do not operate this unit near medical equipment (pacemaker, etc.), as this may result in the malfunction of the medical equipment.
- Although this unit transmits/receives scrambled signals, be careful of unauthorised interception. We cannot be responsible for any trouble as a result.

Caution about handling the remote control

- Observe the correct polarity when inserting batteries.
- Do not use different types of batteries together or mix old and new batteries.
- Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.
- Handle the remote control with care. Do not drop or step on it, or spill liquid of any kind onto it.
- Do not place the remote control in a location near a heat source, a place subject to direct sunlight, or a damp room.

WALL-MOUNT BRACKET (models with supplied Wall-Mount Bracket only)


- If you use the TV installed on the Wall-Mount Bracket for a long time, the wall behind or above the TV may become discoloured or the wallpaper may come unglued, depending on the material of the wall.
- If the Wall-Mount Bracket is removed after installing it on the wall, the screw holes remain.
- Do not use the Wall-Mount Bracket in a place where it is subjected to mechanical vibration.

Parts and Controls

Controls and Indicators

KD-75X9400D, KD-65/55X9300D only

Except KD-75X9400D, KD-65/55X9300D

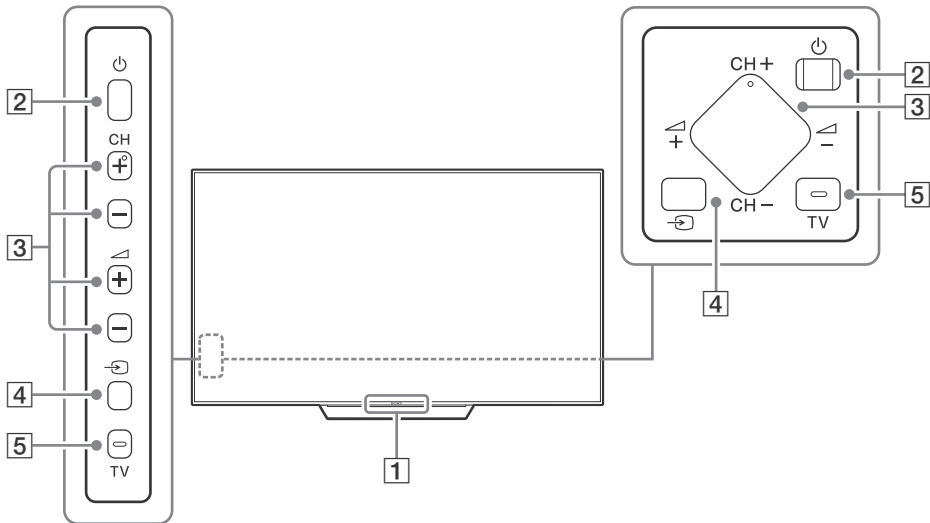


1 Remote Control sensor*1 / Light sensor*1 / Illumination LED / 3D Sync Transmitter*1*2

The illumination LED lights up or blinks according to the status of the TV.

- White
When turning on the TV/picture off mode/software update, etc.
- Cyan
When connecting with a mobile device wirelessly.
- Amber
Timer is set.

2 (Power)

3 CH +/- (Channel)

 +/- (Volume)

4 (Input select)

Display and select the input source.

5 TV

Switch to a TV channel or input from other applications.


*1 Do not place anything near the sensor.

*2 Only on limited region/country/TV model.

Using Remote Control

Remote Control Parts Description

The remote control shape, location, availability and function of remote control button may vary depending on your region/country/TV model.

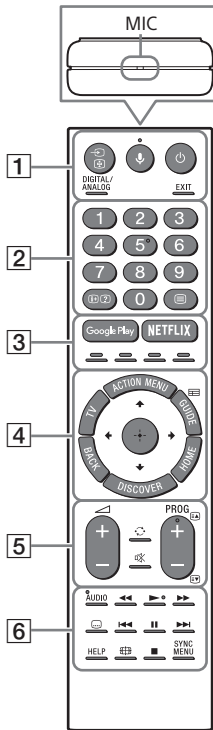

GB

1 (Input select/Text hold)

In TV mode: Display and select the input source.

In Text mode: Hold the current page.

(Microphone)

Use Voice Function. (e.g., Search various content by voice.)

(TV standby)

Turn on or turn off the TV (standby mode).

DIGITAL/ANALOG

Switch between digital and analogue mode.

EXIT

Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service.

2 Number buttons

/ (Info/Text reveal)

Display information.

(Text)

Display text information.

[3] Google Play

Access the "Google Play" online service.

NETFLIX (Only on limited region/ country/TV model)

Access the "NETFLIX" online service.

Colour buttons

Execute corresponding function at that time.

[4] ACTION MENU

Display a list of contextual functions.

TV

- Switch to a TV channel or input from other applications.
- Turn on the TV to display TV channel or input.

GUIDE/

Display the digital programme guide.

BACK

Return to previous screen.

HOME

Display the TV Home Menu.

DISCOVER

Bring up the Content Bar to search for content.

↑/↓/↔/↔/⊕ (Item select/Enter)

[5] +/- (Volume)

Adjust the volume.

(Jump)

Jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

(Muting)

Mute the sound. Press again to restore the sound.

PROG +/-/⏮/⏭

In TV mode: Select the channel.

In Text mode: Select the next (⏮) or previous (⏭) page.

[6] AUDIO

Change the language for the programme currently being viewed.



Operate media contents on TV and connected BRAVIA Sync-compatible device.

(Subtitle setting)

Turn subtitles on or off (when the feature is available).

HELP

Display Help Menu. Help Guide can be accessed from here.

(Wide mode)

Change the screen format.


SYNC MENU

Display the BRAVIA Sync Menu.


Connection Diagram

For more information on connections, refer to the Help Guide (page 2).

KD-75X9400D, KD-65/55X9300D only

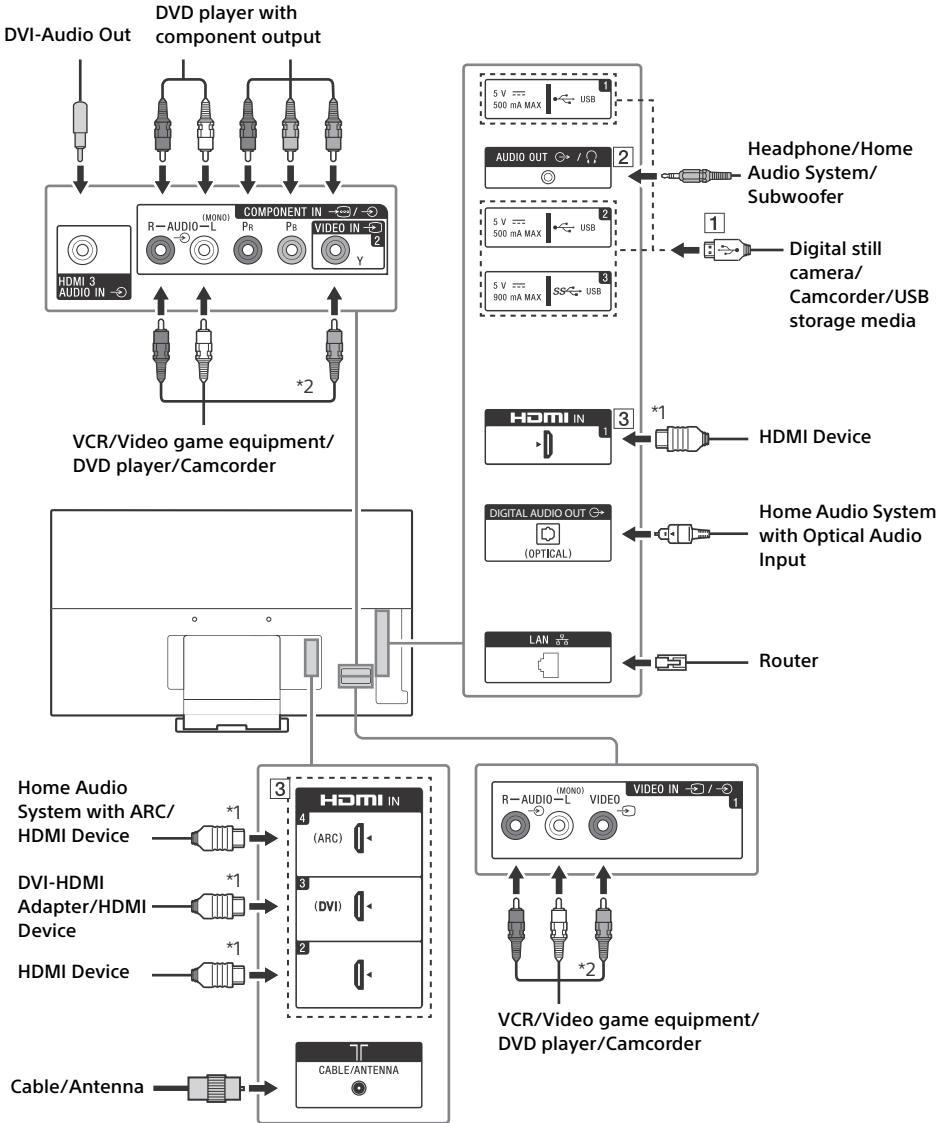

Except KD-75X9400D, KD-65/55X9300D

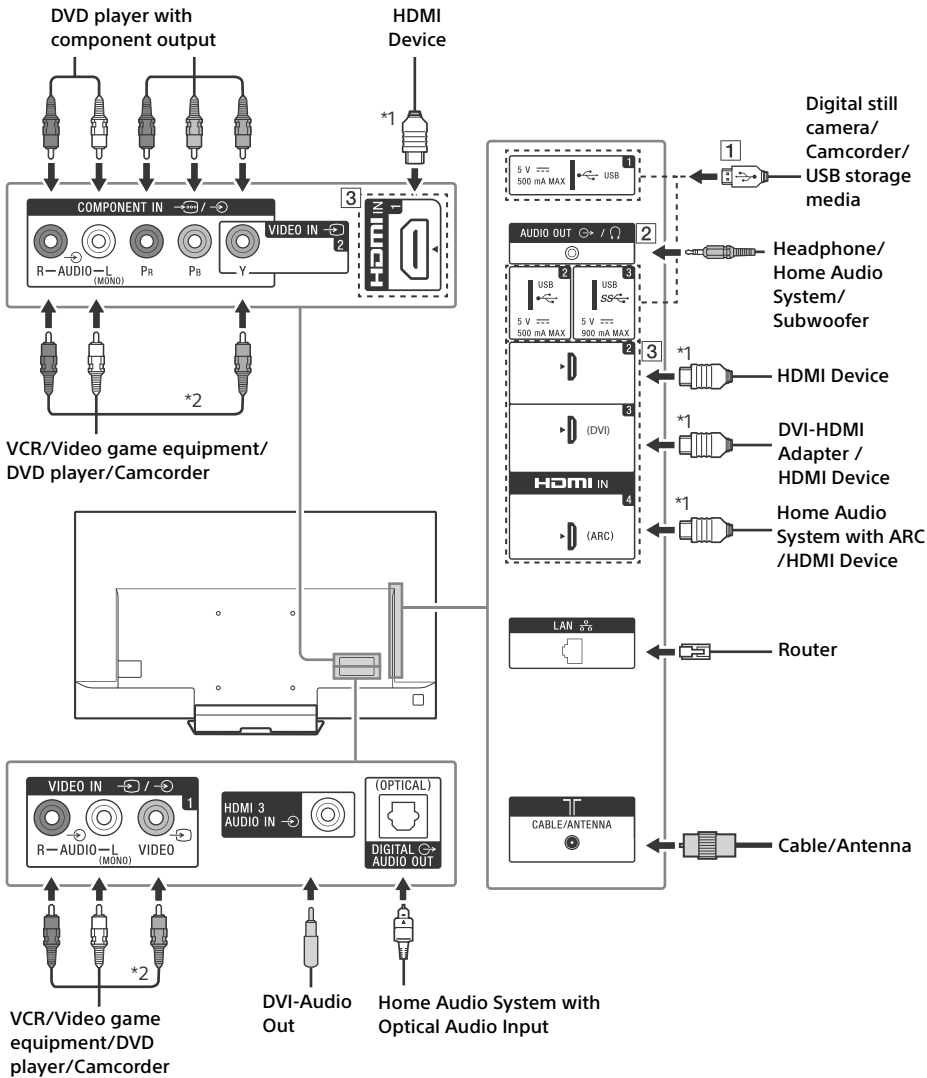

1 **USB 1/2**, **USB 3**

 
- Connecting a large USB device may interfere with other connected devices beside it.
- When connecting a large USB device, connect to the USB 1 port.

2 **AUDIO OUT**^{*3}

- To listen to the TV's sound through the connected equipment, press **HOME**. Select [Settings] → [Sound] → [Headphone/Audio out] and then select the desired item.

3 **HDMI IN 1/2/3/4**

- If the device has a DVI jack, connect it to HDMI IN 3 through a DVI - HDMI adaptor interface (not supplied), and connect the device's audio out jack to HDMI 3 AUDIO IN.
- If connecting a digital audio system that is compatible with Audio Return Channel (ARC) technology, use HDMI IN 4. If not, an additional connection with DIGITAL AUDIO OUT (OPTICAL) is necessary.



*2 When connecting mono equipment, connect to the L (MONO) audio jack (socket).

*3 Supports 3-pole stereo mini jack only.

GB

Picture Quality

- AV composite cable
- Antenna (aerial) cable

- Component cable

- HDMI cable



Standard definition (SD) videos have picture signals with a vertical resolution of 480 (NTSC) or 576 (PAL/SECAM) lines.



High definition (HD) videos have picture signals with a vertical resolution of 720 or 1,080 lines. (For 4K vertical resolution: 2,160 lines)

Installing the TV to the Wall

Using the supplied Wall-Mount Bracket (KD-75X9400D, KD-65/55X9300D only)

To Customers

Sufficient expertise is required for installing this product. Be sure to subcontract the installation to Sony dealers or licensed contractors and pay special attention to safety during the installation. Sony is not liable for any damages or injury caused by mishandling or improper installation, or installing any other than the specified product. Your Statutory Rights (if any) are not affected.

To Sony Dealers and Contractors

Sufficient expertise is required for installing this product. Be sure to read this instruction manual thoroughly to do the installation work safely. Sony is not liable for any damages or injury caused by mishandling or improper installation.

Note

- See page 2 (Safety information) and page 6 (Precautions) on WALL-MOUNT BRACKET before carrying out Wall-Mount Bracket installation.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.
- Make sure that the wall has enough space for the TV and is capable of supporting a weight of at least four times that of the TV. See page 25-26 (Specifications) for the TV's weight.



For instructions on Wall-Mount Bracket installation of your TV model, refer to the supplied Wall-Mount Bracket Installation Guide.

Using the optional Wall-Mount Bracket

This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall.

To Customers:

For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

GB

Sufficient expertise is required for installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.

Use the Wall-Mount Bracket SU-WL500 (not supplied) (KD-75X9400D) or SU-WL450 (not supplied) (KD-65/55X9300D, KD-65/55X8500D) to install the TV to the wall.

When installing the Wall-Mount Bracket, also refer to the Operating Instructions and Installation Guide supplied with the Wall-Mount Bracket.


Note

- Be sure to store the removed screws in a safe place, keeping them away from children.


KD-75X9400D, KD-65/55X9300D only

1 Remove the stand cover and terminal covers.


KD-75X9400D

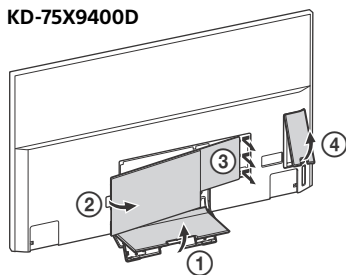

KD-65/55X9300D

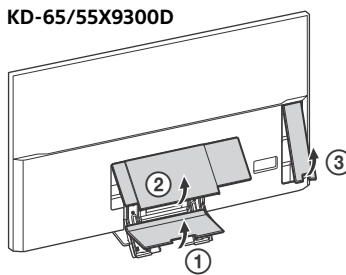


2 Remove the screws from the rear of the TV.

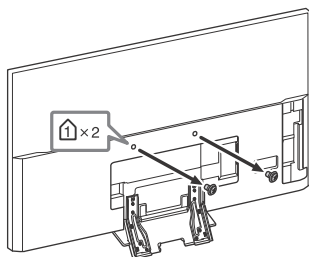


3 Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).

KD-75X9400D

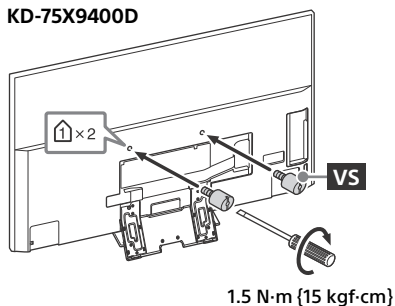

KD-65/55X9300D

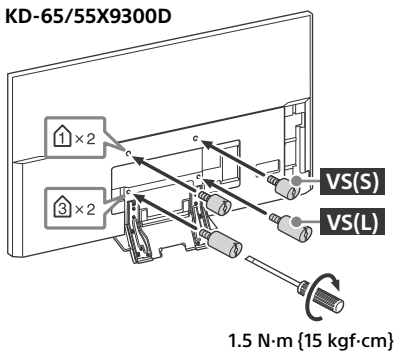


Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m {15 kgf·cm}.
- Be sure to fasten the Wall-Mount Attachment when attaching them to the TV.
Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV.


Except KD-75X9400D, KD-65/55X9300D

Remove the screws from the rear of the TV.


KD-65X8500D

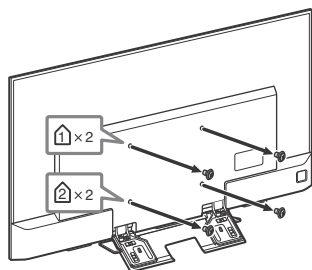

KD-55X8500D

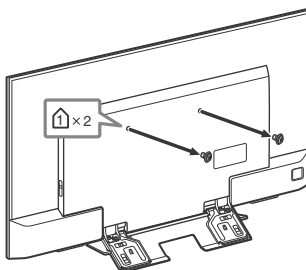

1 Remove the screws.

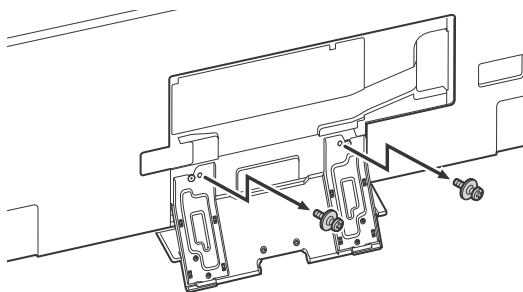


GB


2 Attach the Mounting Hook using the four screws supplied with the Wall-Mount Bracket.

Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m {15 kgf·cm}.
- Be sure to store the unused parts in a safe place for future use. Retain this manual for future reference.

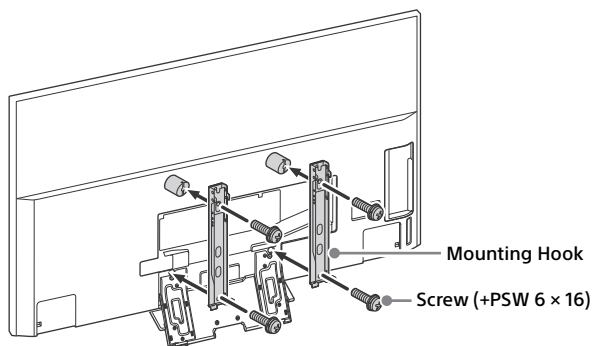

3 Make sure that the wall has enough space for the TV and is capable of supporting a weight of at least four times that of the TV. Refer to the following table on installing the TV to the wall. See page 25-26 (Specifications) for the TV's weight.

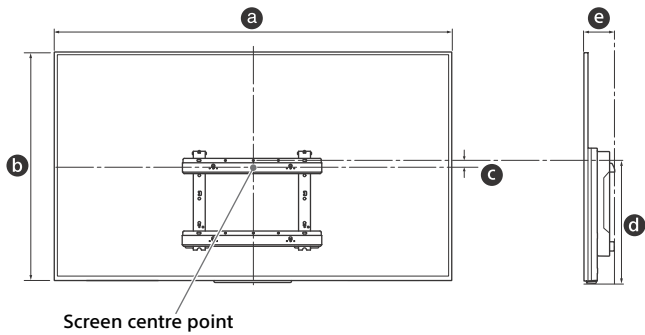

Unit: mm

Model Name KD-	Display dimensions		Screen centre dimension	Length for mounting	
				Angle (0°)	
	a	b		d	e
75X9400D	1,672	960	29	514	113

Note


- Only applicable for 0° for this TV model.
- Figures in the table may differ slightly depending on the installation.

4 Connect necessary cables to the TV.

Note

- You cannot access to any terminal after installing the TV to the wall.

5 Detach the Table-Top Stand from the TV.

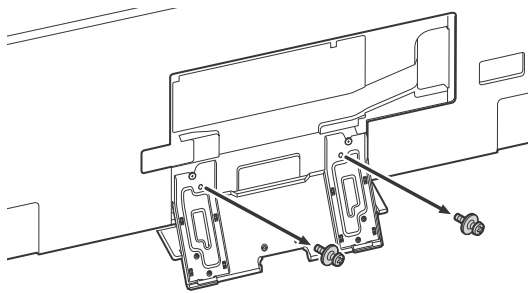


6 Install the TV on the wall.

Model Name KD-	Screw location	Hook location
75X9400D	e, j	a


Screw location

When installing the Mounting Hook on the TV.

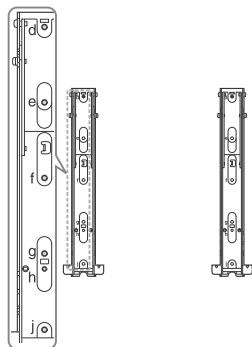

Hook location

When installing the TV onto the Base Bracket.

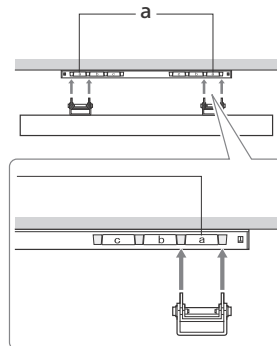


Refer to the instructions supplied with the Wall-Mount Bracket for your model to install the TV on the wall.

GB

SU-WL450 (KD-65/55X9300D, KD-65/55X8500D only)

- 1 Make sure that the wall has enough space for the TV and is capable of supporting a weight of at least four times that of the TV.
Refer to the following table on installing the TV to the wall. See page 25-26 (Specifications) for the TV's weight.

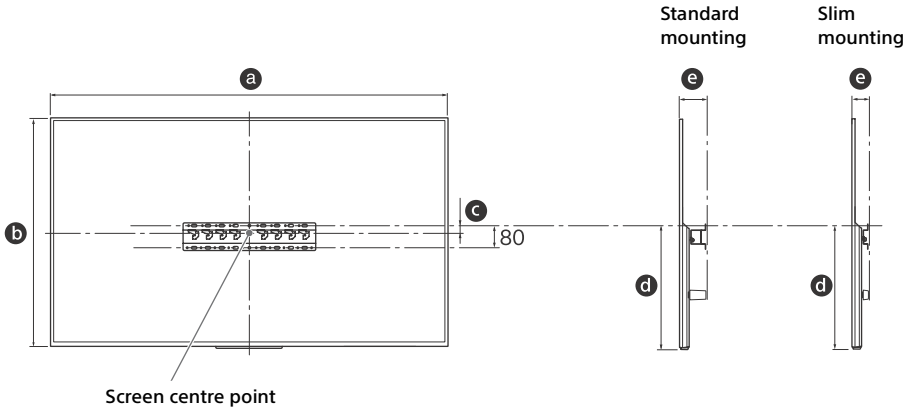

Unit: mm

Model Name KD-	Display dimensions		Screen centre dimension	Length for mounting		
	a	b	c	d	e	
					Standard mounting	Slim mounting
65X9300D	1,458	839	25	449	102	61
65X8500D	1,454	842	56	483	102	60
55X9300D	1,239	717	87	450	102	61
55X8500D	1,231	717	129	494	102	60

Note

- Figures in the table may differ slightly depending on the installation.
- When your TV is installed on the wall, the upper side of the TV slightly leans forward.


2 Attach the Attachment parts for Wall-Mount Bracket. Check the Attachment parts by referring to "1" of the Wall-Mount Bracket Installation Guide.

Note


- If using an electric screwdriver, set the torque at approximately 1.5 N·m (15 kgf·cm).
- Be sure to store the unused parts in a safe place for future use. Retain this manual for future reference.

Standard mounting

KD-65/55X9300D

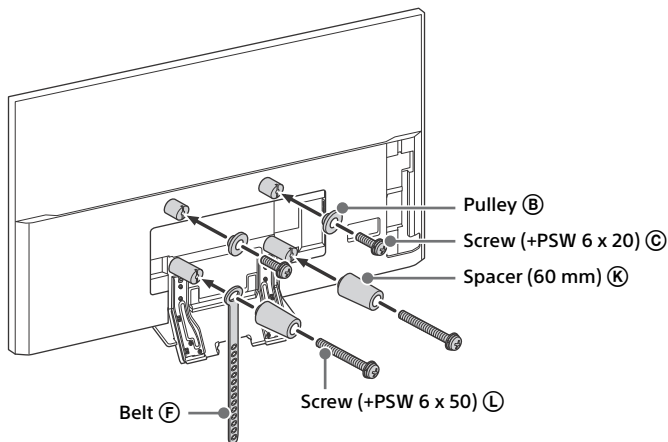

KD-65/55X8500D

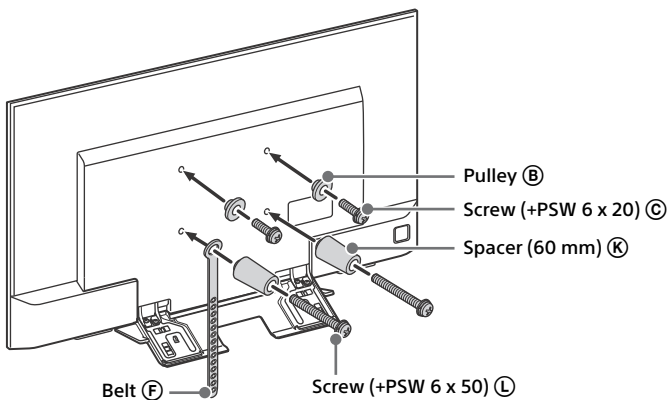


Slim mounting


Note

- You cannot use some of the terminals on the rear of the TV when using this mounting style.


KD-65/55X9300D

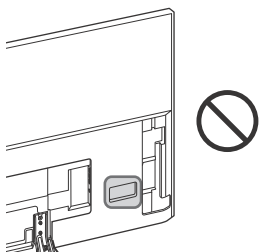


KD-65/55X8500D

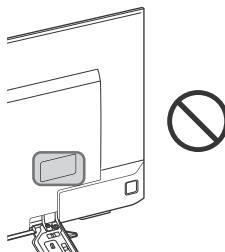

KD-65/55X9300D

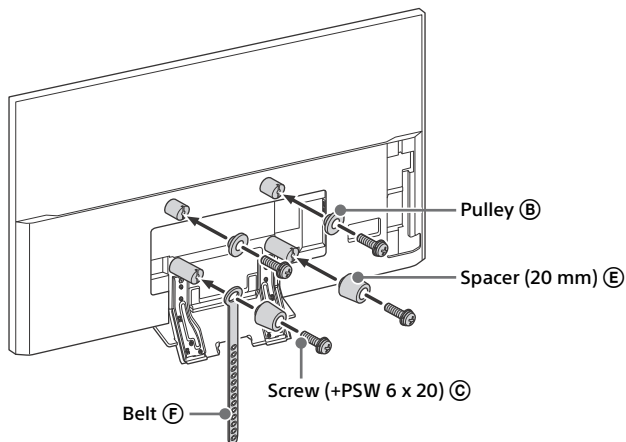

KD-65/55X8500D

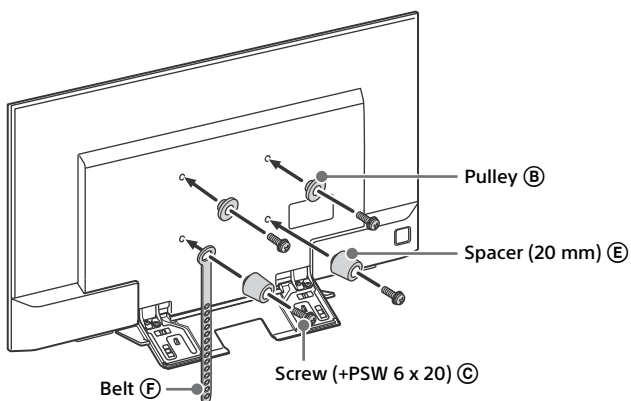


3 Connect necessary cables to the TV.

Note


- You cannot access to any terminal after installing the TV to the wall.

4 Detach the Table-Top Stand from the TV.

KD-65/55X9300D

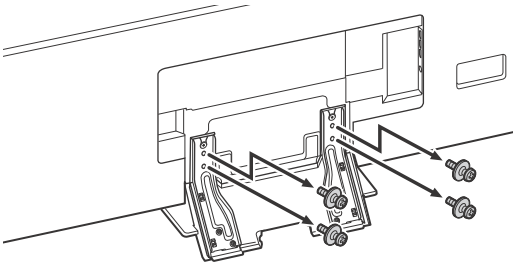


KD-65/55X8500D

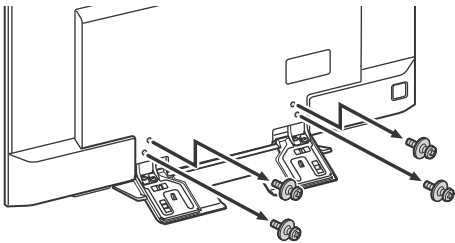

5 Install the TV to the Base. Refer to “5” of Installation Guide and “Installing the TV to the Wall” of Operating Instructions supplied with the Wall-Mount Bracket.

Model Name KD-	Hook location
65X9300D	b
65X8500D	
55X9300D	
55X8500D	c

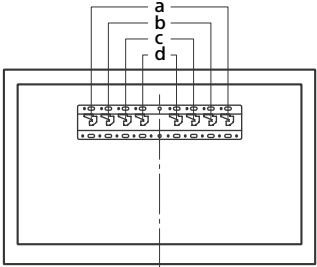


Refer to the instructions supplied with the Wall-Mount Bracket for your model to install the TV on the wall.

Troubleshooting

In order to keep your TV software up-to-date, it is necessary to download the latest software information via the digital broadcasting system or internet and to update the software. Select [Update Now] to start a software update. The illumination LED flashes white while the software is updating.

The following screen with [Updating...] will appear while software is updating.

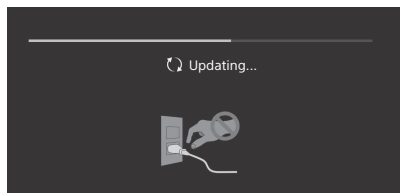

Do not unplug the AC power cord (mains lead) during the software update. If you do, the software update may not finish completely, and it may cause a software malfunction. Software updates can take up to 30 minutes. If you do not wish to update the software automatically, press **HOME** and select [Help] → [System software update] → [Automatic software download] → [Off].

When you plug in TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV, because it takes time to initialize the system. Wait for about one minute, then operate it again. When you turn on by pressing the power button on the remote control or the TV, it takes some time to turn on the illumination LED and for the remote control to be functional.

When the illumination LED is flashing in red, count how many times it flashes (interval time is three seconds).

If the illumination LED flashes red, reset the TV by disconnecting the AC power cord (mains lead) for two minutes, then turn on the TV.

If the problem persists, contact your dealer or Sony service centre with the number of times the illumination LED flashes red (interval time is three seconds). Disconnect the AC power cord (mains lead), and inform your dealer or Sony service centre.

When the illumination LED is not flashing, check the items as follows.

You can also refer to troubleshooting in the Help Guide or perform self-diagnosis by selecting [Help] → [Self diagnostics]. If the problem persists, have your TV serviced by qualified service personnel.

Troubles and Solutions

There is no picture (screen is dark) and no sound.

- Check the antenna (aerial)/cable connection.
- Connect the TV to the AC power (mains), and press **ON** on the TV or remote control.

Some programmes cannot be tuned.

- Check the antenna (aerial)/cable connection.

The remote control does not function.

- Replace the batteries.

The [Parental lock] password has been forgotten.

- Enter 9999 for the PIN code. Update PIN code by selecting [Settings] → [Parental lock] → [Change PIN code].

The TV surrounds become warm.

- When the TV is used for an extended period, the TV surrounds become warm.
You may feel hot when touching there by the hand.


Frozen audio or video, a blank screen, or the TV does not respond to TV or remote control buttons.

- Perform a simple reset of the TV by unplugging the AC power cord (mains lead) for two minutes, then plug it in again.


The , CH+/-, +/-, and TV buttons cannot be located on the TV.

- See below illustration for location of the buttons on the TV.

KD-75X9400D, KD-65/55X9300D only

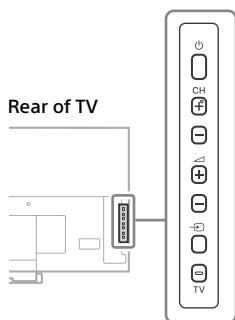


Except KD-75X9400D, KD-65/55X9300D

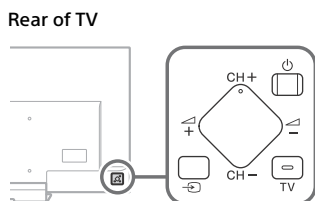

The illumination LED is turned on.

- If you do not wish to light up the illumination LED, you can turn it off.
Press **HOME**, then select [Settings] → [Illumination LED] → [Off].

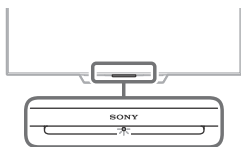

Cannot connect to a wireless router by WPS (Wi-Fi Protected Setup).

- If you use WEP security, select [Easy] → [Wi-Fi] → [Connect by scan list]. Then, select the network name (SSID) you want to connect.

Cannot find the required network name in network setup.

- Select [[Manual entry]] and press to enter network name.

Specifications

System

Panel system

LCD (Liquid Crystal Display) Panel, LED Backlight

TV system

Analogue: I, D/K, B/G, M

Digital: DTMB

Colour/video system

Analogue: PAL, SECAM, NTSC3.58, NTSC4.43

Digital: Refer to the Help Guide

Channel coverage

Analogue: UHF/VHF/Cable

Digital: UHF

Sound output

KD-75X9400D, KD-65/55X9300D:

7.5 W + 7.5 W + 7.5 W + 7.5 W

KD-65/55X8500D: 10 W + 10 W

Wireless technology

Protocol IEEE802.11ac/a/b/g/n

Bluetooth Version 4.1

Input/Output jacks

Antenna (aerial)/cable

75 ohm external terminal for VHF/UHF

/ VIDEO IN 1

Video/Audio input (phono jacks)

/ COMPONENT IN

YPbPr (Component Video): 1080p (50, 60 Hz), 1080i (50, 60 Hz), 720p (50, 60 Hz), 576p, 576i, 480p, 480i

Audio input (phono pin jack)

VIDEO IN 2

Video input (common phono pin with Y input)

HDMI IN 1, 2, 3, 4 (support 4K resolution,

HDCP 2.2-compatible)

Video (2D):

4096 × 2160p (50, 60 Hz)*, 4096 × 2160p (24 Hz)*, 3840 × 2160p (50, 60 Hz), 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 576i, 480p, 480i, PC Formats

*3840 × 2160p is displayed when 4096 × 2160p is input

GB

Video (3D) (3D compatible models only):

Frame Packing: 1080p (30 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p
Side-by-Side: 1080p (50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (50, 60 Hz)
Over-Under: 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (50, 60 Hz)

Audio: 5.1 channel linear PCM: 32, 44.1, 48, 88.2, 96, 176.4 and 192 kHz, 16, 20 and 24 bits, Dolby Digital and DTS


 
ARC (Audio Return Channel) (HDMI IN 4 only)

 DIGITAL AUDIO OUT (OPTICAL)

Digital optical jack (Two channel linear PCM, Dolby Digital, DTS)

HDMI 3 AUDIO IN 

Analogue audio input (Stereo mini jack)

AUDIO OUT  /  (Stereo mini jack)

Headphone, Audio output, Subwoofer

•  1,  2,  3

 
USB port 1 and 2 support High Speed USB (USB2.0).

USB port 3 supports Super Speed USB (USB3.0)

 LAN

10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.)

 DC IN 24 V (KD-65/55X9300D only),

 DC IN 19.5 V (KD-55X8500D only)

AC adapter input

Others

Optional accessories

Wall-Mount Bracket: SU-WL500

(KD-75X9400D only)

Wall-Mount Bracket: SU-WL450

(Except KD-75X9400D)

Wireless subwoofer: SWF-BR100

Active 3D Glasses: TDG-BT500A

(KD-75X9400D, KD-65/55X9300D only)



Operating temperature

0 °C – 40 °C

Operating humidity

10 % – 80 % RH (non-condensing)

Power and others

Power requirements

except models with supplied AC adapter

220 V - 240 V AC, 50 Hz

models with supplied AC adapter only

24 V DC with AC adapter (KD-65/55X9300D)

19.5 V DC with AC adapter (KD-55X8500D)

Rating: Input 220 V - 240 V AC, 50 Hz

Screen size (measured diagonally) (Approx.)

KD-75X9400D: 75 inches / 189.3 cm

KD-65X9300D: 65 inches / 163.9 cm

KD-65X8500D: 65 inches / 163.9 cm

KD-55X9300D: 55 inches / 138.8 cm

KD-55X8500D: 55 inches / 138.8 cm

Display resolution

3,840 pixels (horizontal) × 2,160 lines (vertical)

Power consumption

Indicated on the rear of the TV

Output Rating

USB 1/2: 5 V, 500 mA MAX

USB 3: 5 V, 900 mA MAX

Dimensions (Approx.) (w × h × d)

with Table-Top Stand

KD-75X9400D: 1,672 × 1,017 × 327 mm

KD-65X9300D: 1,458 × 891 × 275 mm

KD-65X8500D: 1,454 × 894 × 279 mm

KD-55X9300D: 1,239 × 769 × 261 mm

KD-55X8500D: 1,231 × 770 × 263 mm

without Table-Top Stand

KD-75X9400D: 1,672 × 960 × 52 mm

KD-65X9300D: 1,458 × 839 × 36 mm

KD-65X8500D: 1,454 × 842 × 44 mm

KD-55X9300D: 1,239 × 717 × 36 mm

KD-55X8500D: 1,231 × 717 × 44 mm

Mass (Approx.)

with Table-Top Stand

KD-75X9400D: 43.2 kg

KD-65X9300D: 32.1 kg

KD-65X8500D: 23.9 kg

KD-55X9300D: 24.9 kg

KD-55X8500D: 18.6 kg

without Table-Top Stand

KD-75X9400D: 38.7 kg

KD-65X9300D: 28.9 kg

KD-65X8500D: 20.3 kg

KD-55X9300D: 22.0 kg

KD-55X8500D: 15.1 kg

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

Trademark information

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Manufactured under license from Dolby Laboratories.
Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.
- "BRAVIA" and BRAVIA are trademarks of Sony Corporation.
- Gracenote, Gracenote eyeQ, Gracenote VideoID, Gracenote Video Explore, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.
- Opera® Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA. All rights reserved.
- Wi-Fi, Wi-Fi Direct, Miracast, Wi-Fi Protected Setup and Wi-Fi CERTIFIED Logo are trademarks or registered trademarks of Wi-Fi Alliance.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc.
DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- ©2016 RealNetworks, Inc. Patents Pending. All rights reserved. RealNetworks logo is a trademark of RealNetworks, Inc.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- USB-IF SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc. 



4K

Actual resolution:
3840 x 2160 pixels.

目錄

安全資訊	2
預先注意事項	6
組件及控件	7
控件及指示燈	7
使用遙控器	8
遙控器組件說明	8
連接圖	10
將電視機安裝在牆上	13
使用隨附的壁掛式支架（僅限 KD-75X9400D、KD-65/55X9300D）	13
使用選購的壁掛式支架	14
SU-WL500（僅限 KD-75X9400D）	16
SU-WL450（僅限 KD-65/55X9300D、 KD-65/55X8500D）	19
故障排除	23
故障及解決方案	23
規格	24

簡介

感謝您購買這項 Sony 產品。
使用電視機之前，請詳閱本手冊，並保留下來以便將來參考。

註

- 使用電視機之前，請詳讀“安全資訊”（第 2 頁）。
- 有關“將電視機安裝在牆上”的指令已包含在這台電視機的使用說明書。
- 設定指南和本說明書中使用的影像和插圖僅作參考並可能與實際產品不同。

設定指南的位置

設定指南位於電視機包裝箱內部膠墊的頂部。

說明指南

說明指南解釋如何使用電視機功能的資訊。要在電視機上顯示說明指南，按下遙控器上的 **HELP（說明）** 按鈕並選擇 [說明指南]。

識別標籤的位置

電視機型號和電源等級的標籤位於電視機背面。

隨附 AC 轉接器的型號：

AC 轉接器型號和系列號的標籤位於 AC 轉接器底部。

本電視設計在香港使用，只保證能在香港使用。

安全資訊

警告

不可將電池曝露於如陽光、火或類似的過熱源。
切勿將電視安置在不穩定的地方。電視可能跌落、造成嚴重人身傷害或導致死亡。為避免尤其是對孩童造成傷害，可採取簡單的預先注意事項，如：

- 使用電視製造商推薦的機櫃或支架。
 - 僅使用可安全支撐電視的傢俱。
 - 確保電視不會置於支撐傢俱的邊緣處。
 - 未將傢俱與電視固定在合適的支架上時，勿將電視置於較高的傢俱（如櫥櫃或書櫃）之上。
 - 切勿在電視與支撐傢俱之間擺放布料或其他材料。
 - 教育孩童攀爬傢俱去觸摸電視或其控制器是相當危險的。
- 如果您現有的電視仍在使用且已重新安放，則同樣適用上述注意事項。

安裝 / 設定

為了避免火災、觸電或損壞及 / 或受傷等危險，請遵照下列指示來安裝和使用電視機。


安裝

- 應將電視機安裝在易於插拔的 AC 電源插座附近。
- 將電視機放在一個穩定的平面，以防止墜落和引起個人傷害或財產損壞。
- 應將電視機安裝在不容易被拉、推或碰倒之處。
- 僅可由合格的維修人員執行掛壁安裝。
- 為了安全起見，強烈建議您使用 Sony 配件，包括：
 - 隨附的壁掛式支架（僅限 KD-75X9400D、KD-65/55X9300D）
 - 壁掛式支架 SU-WL500（僅限 KD-75X9400D）
 - 壁掛式支架 SU-WL450（KD-75X9400D 除外）


- 將掛鉤（底座）／壁掛式支架安裝於電視機上時，務必要使用隨附於壁掛式支架的螺絲。隨附螺絲如插圖所示設計從掛鉤（底座）／壁掛式支架安裝表面量起。
- 螺絲的直徑和長度會因為壁掛式支架的型號而有所不同。
- 使用隨附螺絲以外的螺絲可能會造成電視機內部損壞或者掉落等等。

— 隨附的壁掛式支架

僅限 KD-75X9400D

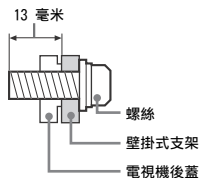


僅限 KD-65/55X9300D

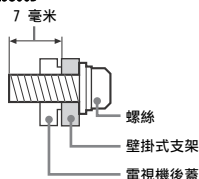


— 選購的壁掛式支架

僅限 KD-75X9400D, KD-65/55X9300D

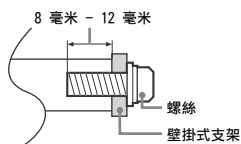


KD-75X9400D, KD-65/55X9300D 除外

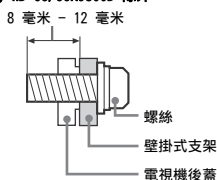


搬動

- 搬動電視機之前，請斷開所有訊號線的連接。
- 大尺寸電視機需要兩到三人搬動。
- 用手搬動電視機時，請如下圖所示抓握。請勿對液晶面板以及螢幕周圍的框邊施加壓力。

僅限 KD-75X9400D、KD-65/55X9300D

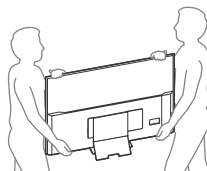


KD-75X9400D、KD-65/55X9300D 除外


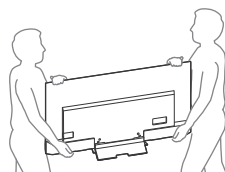


- 搬動電視機時，請勿使其受到搖晃或過度震動。
- 搬動電視機以進行維修或移動時，請使用原有的紙箱和包裝材料進行包裝。

防止傾倒

KD-75X9400D、KD-65/55X9300D

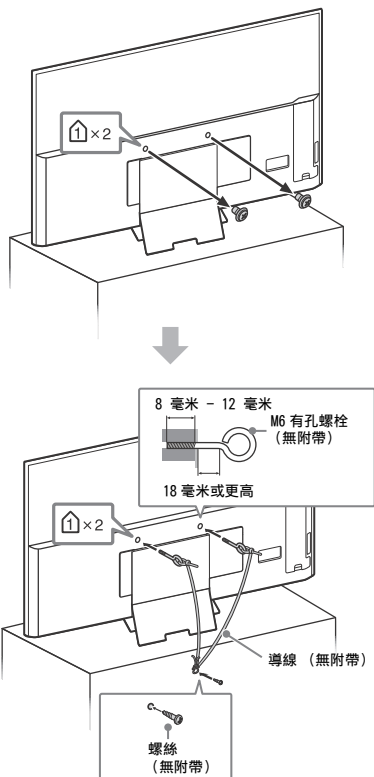


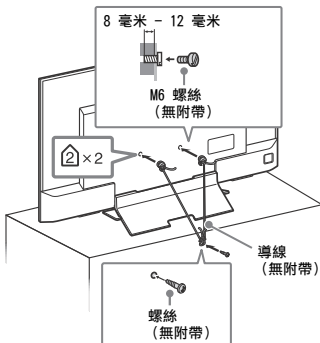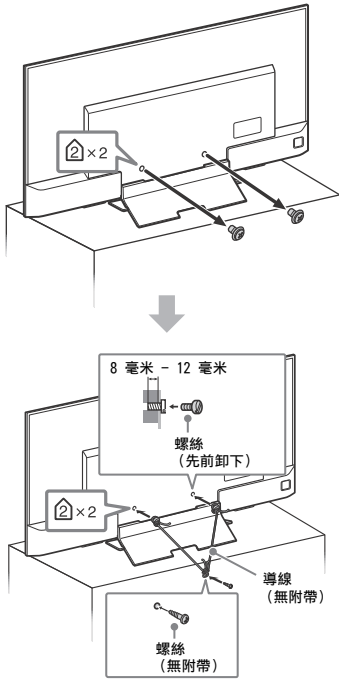


通風

- 切勿遮擋通風孔或將任何物體插入機殼內。
- 如下圖所示，在電視機周圍保留通風空間。
- 強烈建議您使用 Sony 壁掛式支架以確保足夠的空氣流通。

安裝在牆壁上

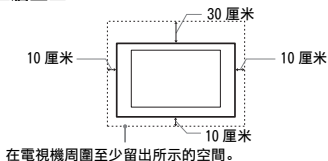


安裝在底座上

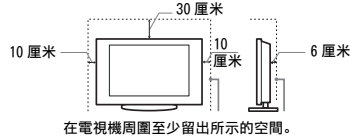

- 為了確保正確通風及防止髒物或灰塵堆積：
 - 請勿將電視機平放、上面朝下安裝、向後安裝或側面安裝。
 - 請勿將電視機放置於架子、地毯、床或壁櫥中。
 - 請勿用布（如窗簾）或物件（如報紙等）覆蓋電視機。
 - 請勿如下圖所示安裝電視機。

空氣流通被阻擋。

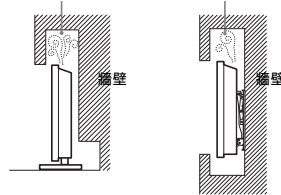

AC 電源線

為了避免火災、觸電或損壞及 / 或受傷等危險，請遵照下列指示來處理 AC 電源線和插座：

- 僅使用 Sony 隨附的 AC 電源線，不能使用其他品牌的電源線。
- 將插頭完全插入 AC 電源插座。
- 僅可在 220 V - 240 V AC 電源上使用電視機。
- 連接訊號線時，為了安全起見請務必拔下 AC 電源線，以免被訊號線絆到腳。
- 在進行作業或移動電視機之前，請從 AC 電源插座上斷開 AC 電源線的連接。
- 保持 AC 電源線遠離熱源。
- 拔下 AC 電源插頭，定期進行清潔。如果插頭上有積灰並帶有濕氣，則其絕緣品質可能已經劣化，並可能造成火災。

註

- 請勿將隨附的 AC 電源線用於任何其他設備。
- 請勿過度擰捏、彎曲或扭轉 AC 電源線。否則線芯可能會曝露在外或折斷。
- 請勿改裝 AC 電源線。
- 請勿將任何重物放在 AC 電源線上。
- 斷開 AC 電源線連接時，請勿拉扯 AC 電源線。
- 請勿在相同的 AC 電源插座上連接太多設備。
- 請勿使用不適當的 AC 電源插座。

AC 轉接器注意事項（僅限隨附 AC 轉接器的型號）

警告

為了避免火災或觸電造成危險，請勿將本機暴露於雨水或濕氣。為了避免火災或觸電，請勿將裝有液體的物體（例如花瓶）置於本機上。請勿將本機安裝到封閉區域，例如書架或相似裝置上。

- 請確保將 AC 電源插座安裝到裝置附近並方便操作。
- 確保使用隨附的 AC 轉接器和 AC 電源線。否則會引起故障。
- 將 AC 轉接器連接到方便操作的 AC 電源插座。
- 請勿將 AC 電源線纏繞在 AC 轉接器周圍。否則線芯會被切斷和 / 或會引起電視機故障。



- 請勿用濕手觸摸 AC 轉接器。
- 如果您注意到 AC 轉接器內有異常，則立即從 AC 電源插座上將其斷開。
- 即使已經關閉本機，只要連接 AC 電源插座，本機也從未從交流電源上斷開。
- 由於 AC 轉接器在長時間使用後會變熱，在用手觸摸時會感到發燙。

使用限制

請勿在下列地點、環境或情況條件下安裝 / 使用電視機，否則電視機可能會發生故障並造成火災、觸電、損壞及 / 或受傷等危險。

地點：

 
- 室外（在直射的陽光中），海邊，船上或其他船艦上，車內，醫療機構中，不穩定的場所，靠近水、雨、濕氣或煙霧的地方。
- 如果放置電視機在公共浴室或溫泉的更衣室內，電視機可能會被空降硫磺等損壞。



- 若要獲得最佳的畫面品質，請勿將螢幕放在直射光源或陽光下。
- 避免將電視機從寒冷的區域移至溫熱的區域。突然的室溫變化可能導致濕氣凝結。這可能造成電視機顯示劣質圖像及 / 或暗淡的顏色。如果發生這種情形，讓濕氣完全蒸發之後才開啟電視機。

環境：

- 請勿將電視機安裝在炎熱、潮濕或太多灰塵的地方；昆蟲可能進入的地方；可能受到機械式震動的地方；靠近易燃物體（蠟燭等）的地方。不應該讓液體滴濕或噴濕電視機，而且裝滿液體的物體（例如花瓶）不應該擺在電視機上。
- 不要放置電視機在潮濕或多塵的空間，或有油煙或蒸氣的場所（靠近灶台或加濕器）。這可能導致火災、觸電或本機彎曲。
- 請勿將電視機安裝在會遭受極端溫度的位置，如陽光直射、靠近散熱器或加熱裝置通風孔的地方。電視機在這種環境下可能會過熱而導致外殼變形及 / 或電視機故障。



情況條件：

- 手濕，機殼拆除或採用非製造商所建議的配件時切勿使用本電視機。出現雷電時請將電視機電源線從 AC 電源插座和天線拔下。
- 不要把電視機安裝在延伸出開放的空間。這樣會由於人員或物體撞擊電視機而引起傷害或損壞。



打破電視機螢幕：

- 請勿將任何物品丟向電視機。否則螢幕可能會因為受到撞擊而破裂並造成嚴重傷害。
- 如果電視機的表層破裂，在拔下 AC 電源線以前請勿觸摸它。否則會引起觸電。

不使用時

- 如果您不使用電視機數天，為了環保和安全原因，應將電視機電源線從 AC 電源插座上拔下。
- 關閉電視機電源時，電視機並未與 AC 電源斷開連接，請將插頭從 AC 電源插座上拔下以完全斷開電視機的電源連接。
- 某些電視機可能具有需要將電視機保持在待機模式下才能正常工作的特點。

對於兒童

- 請勿讓兒童爬上電視機。
- 將體積小的配件放在兒童拿不到的地方，以便不會被兒童誤吞。

如果出現下列問題...

如果出現以下任何問題，請立刻**關閉**電視機並拔下 AC 電源線。請諮詢您的經銷商或 Sony 服務中心以交由合格的服務人員進行檢查。

當：

- AC 電源線損壞。
- AC 電源插座不適當。
- 電視機由於跌落、敲擊或撞擊而損壞。
- 任何液體或固體物件通過開口處掉入機殼內。

關於液晶電視機溫度

長時間使用液晶電視機時，面板周圍溫度會升高。用手觸摸這些地方時可能會覺得很燙。

壁掛式支架（僅限隨附壁掛式支架的型號）

以下資訊說明壁掛式支架的正確使用方式。請務必詳盡地閱讀這些資訊並正確使用壁掛式支架。



致客戶：

- 請務必遵守以下的安全預先注意事項，以預防因火災、觸電、產品翻倒或產品掉落造成嚴重傷害。
- 請務必將安裝的工作委託授權承包商進行並在安裝進行時確保兒童遠離安裝地點。
- 請務必將搬運或拆卸電視機的工作委託授權承包商進行。
- 安裝電視機之後，請勿拆下螺絲等。
- 請勿改造壁掛式支架的部件。
- 請勿安裝指定產品以外的任何設備。
- 請勿在壁掛式支架上施加電視機以外的任何負重。
- 請勿倚靠在電視機上或懸空緊握電視機。
- 請勿在清潔或維修電視機時過度施力於電視機。


致 Sony 經銷商和承包商：

以下指示僅適用於 Sony 經銷商和承包商。請務必閱讀以下所述的 safety 預先注意事項。在安裝、維修和檢查本產品時，請格外小心。

• 搬運或安裝電視機時，請抓握其側面。請勿抓握 U 形桿以擡起電視機。

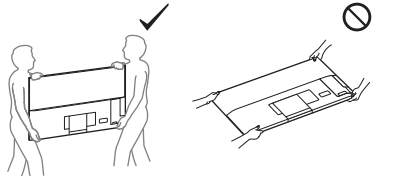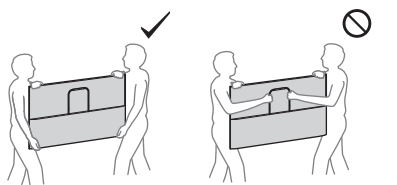

- 在搬運或安裝電視機時，不要將其平放。

 


- 請勿將壁掛式支架安裝在使電視機角落或邊緣突出的牆面。




- 請勿將電視機安裝在空調機之上或之下。

- 請務必按照隨附的壁掛式支架安裝指南中的指示將壁掛式支架牢固地安裝至牆壁。如果任何螺絲鬆開或脫落，壁掛式支架可能掉落並導致受傷或財物損失。
- 請務必按照隨附的壁掛式支架安裝指南中的指示正確地使用隨附的螺絲和附件。如果您使用替代用品，則電視機會墜落並造成人身傷害或損壞電視機。
- 請務必按照隨附的壁掛式支架安裝指南中解釋的指導程序正確地裝配支架。
- 請務必在指定的位置鎖緊螺絲。
- 小心不要讓電視機在安裝過程中承受震動。

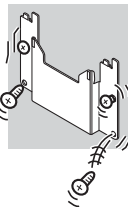

- 請務必將電視機安裝在垂直和平坦的牆上。
- 在正確安裝電視機之後，妥當地固定纜線。
- 不要讓 AC 電源線或連接線材受到擠壓，內部導體可能因此裸露並導致短路或遭電擊穿。

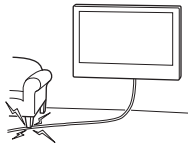

預先注意事項

觀賞電視

- 請在適當光線條件下觀賞電視，因為在光線不足條件下或長時間觀賞電視會損傷您的眼睛。
- 使用耳機時，請調整音量以免音量過高損傷聽力。

(僅限 3D 兼容型號)

- 在觀看 3D 視訊影像或打立體的 3D 電玩期間，有些人可能會感到不適（如眼睛疲勞、疲累或噁心）。Sony 建議所有觀賞者在觀看 3D 視訊影像或打立體的 3D 電玩期間要定期休息。休息的長度和頻率因人而異。由您自行決定。若您感到任何不適，請停止觀看 3D 視訊影像或打立體的 3D 電玩，直到不適感消失；若有必要，請就醫。關於最新資訊，也請您參閱 (i) 用於電視機的其他設備或媒體的使用說明書，以及 (ii) 我們的網站 (<http://www.sony-asia.com/support>)。兒童（尤其是低於六歲的兒童）的視力還在發育。讓兒童觀看 3D 視訊影像或打立體的 3D 電玩前，請諮詢醫師（如小兒科醫師或眼科醫師）。成人應監督兒童，確保他們遵守上述建議事項。
- 不要在靠近火源或高溫地方如直射陽光或太陽曬熱的汽車內使用、貯存或留下 3D 眼鏡或電池。

LCD 螢幕

- 雖然 LCD 螢幕採用最精密技術製造且 99.99 % 以上的畫素有效，但還是可能會出現黑點或 LCD 螢幕上可能會經常出現亮點（紅、藍或綠色）。這是 LCD 螢幕的結構特性，並不是故障。
- 請勿按壓或刮傷前述光面板或在電視機頂部放置物件。畫面可能會不均，或者 LCD 螢幕可能會損壞。
- 如果在寒冷地點使用本電視機，畫面上可能會出現模糊或變暗。這並不是故障。溫度上升後這些現象就會消失。
- 畫面靜止不動將會產生重影。片刻後該現象將消失。
- 電視機使用過程中，螢幕和機殼會變熱。這不是故障。
- LCD 螢幕包含少量液晶。請按照您當地的法規進行廢棄物處理。

使用和清潔電視機的螢幕表層 / 機殼

清潔前，務必將電視機的 AC 電源線從 AC 電源插座上斷開連接。為了避免物質或螢幕塗層剝離，請遵照下列預先注意事項。

- 若要擦去螢幕表層 / 機殼上的灰塵，請用軟布輕輕擦拭。如果灰塵較難除去，請用稍稍蘸有稀釋中性清潔劑的軟布進行擦拭。
- 絕對不能將水或清潔劑直接噴灑在電視上。液體可能滴落在螢幕的底部或外部零件上並滲入電視內，而毀壞電視。



- 切勿使用任何類型的磨砂墊、鹼性 / 酸性清潔劑、擦洗粉或揮發溶劑，如酒精、汽油、稀釋劑或殺蟲劑。使用上述材料或與橡膠或乙烯材料長時間接觸可能會造成螢幕表層和機殼材料的損壞。
- 如果手上塗有任何化學品，例如手霜或防曬霜，請勿觸摸電視機。
- 建議您定期使用真空吸塵清理通風口以確保通風順暢。
- 當調整電視機的角度時，請慢慢地調動以防電視機從其桌面底座移動或滑落。

選購設備

將產生電磁輻射的選購元件或任何其他設備遠離電視機。否則可能會造成畫面失真及 / 或噪聲。

本機的無線功能

- 請勿在醫療設備（心臟起搏器等）附近操作本機，因為會引起醫療設備故障。
- 雖然本機發送 / 接收干擾信號，請小心未經授權的截取。我們不對此造成的任何問題負責。

注意有關處理遠程控制

- 安裝電池時請注意正確的極性位置。
- 請勿同時使用不同類型的電池或混合使用新舊電池。
- 請以符合環境保護規定的方式來丟棄電池。特定地區可能有制訂廢棄電池的相關規定。請向您當地的主管機關查詢。
- 請小心拿取遙控器。請勿讓遙控器掉落或踩在遙控器上，或是讓任何液體溅到遙控器。
- 請勿將遙控器放置在接近熱源的地方，放置在受日光直射地方或潮濕的房間。

壁掛式支架（僅限隨附壁掛式支架的型號）


- 如果您長時間使用壁掛式支架安裝電視機，視牆壁的材料而定，位於電視機後方或上方的牆面可能變色或壁紙失去黏性。
- 如果拆下原來安裝在牆上的壁掛式支架，牆面上將留下螺絲孔痕跡。
- 請勿在容易受到振動的地方使用壁掛式支架。

組件及控件

控件及指示燈

僅限 KD-75X9400D、KD-65/55X9300D

KD-75X9400D、KD-65/55X9300D 除外

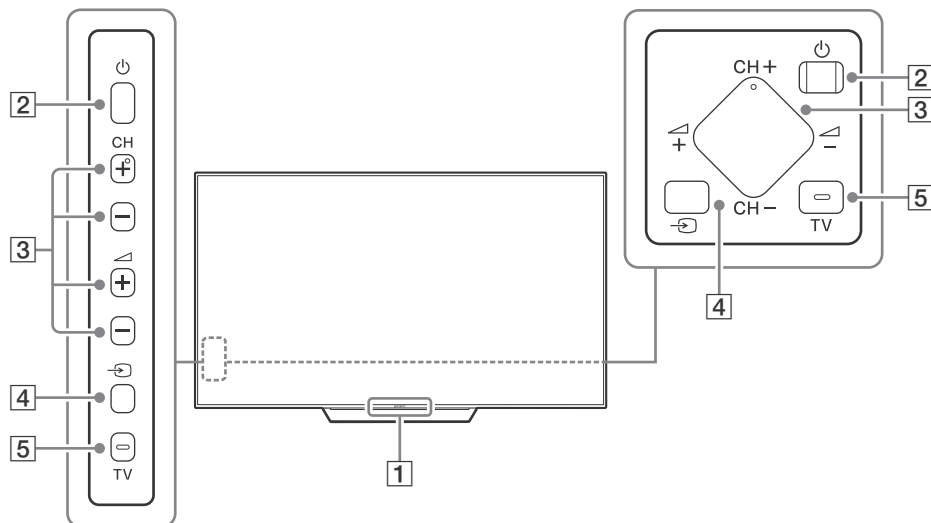

1 遙控器感應器 *1 / 光感應器 *1 / 照明 LED / 3D 同步發射機 *1*2

根據電視機的狀態，光飾 LED 會亮起或閃爍。

- 白色
開啟電視機 / 關閉畫面模式 / 軟體更新等時。
- 青色
無線連接行動裝置時。
- 琥珀色
計時器已設定。

*1 請勿在感應器附近放置任何物品。

*2 僅限有限的區域 / 國家 / 電視機型號。

2 電源

3 CH +/- (頻道)

△ +/- (音量)

4 輸入選擇

顯示並選擇輸入來源。


5 TV

切換至一個電視頻道或從其他應用程式輸入。

使用遙控器

遙控器組件說明

遙控器外形、按鈕的位置、可用性與功能視您的國家 / 區域 / 電視機型號而可能略有不同。

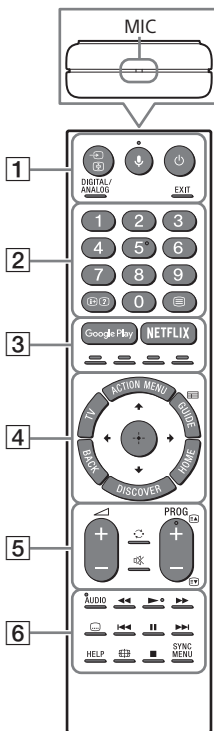

1 (輸入選擇 / 文字保留)

電視模式：顯示並選擇輸入來源。

文字模式：保留當前頁面。

(麥克風)

使用語音功能。(例如，透過語音搜尋各種內容。)

(電視待機)

開啟或關閉電視機 (待機模式)。

DIGITAL/ANALOG

在數位及類比模式之間切換。

EXIT

返回至上一個畫面，或從選單退出。如果交互式應用服務可供使用，按下即可退出服務。

2 數字按鈕

(顯示資訊 / 文字)

顯示資訊。

(文字)

顯示文字資訊。

3 Google Play

訪問 “Google Play” 線上服務。

NETFLIX (僅限限制的區域 / 國家 / 電視機型號)

訪問 “NETFLIX” 線上服務。

顏色按鈕

屆時執行相應的功能。

4 ACTION MENU

顯示情境功能清單。

TV

- 切換至一個電視頻道或從其他應用程式輸入。
- 開啟電視機顯示電視通道或輸入。

GUIDE/

顯示數位節目指南。

BACK






返回上一個畫面。

HOME

顯示電視主選單。

DISCOVER

調出內容列，搜尋內容。

     (項目選擇 / 輸入)

5 +/- (音量)

調節音量。

(跳轉)


 
在兩個頻道或兩次輸入之間前後跳轉。電視在當前頻道 / 輸入以及選擇的上一個頻道 / 輸入之間交替切換。

(靜音)

將聲音消除。再次按下可恢復聲音。

PROG +/-/

電視模式：選擇頻道。

文字模式：選擇下一個 () 或上一個 () 頁面。

6 AUDIO

變更目前觀看之節目的語言。

運行電視機和相連的 BRAVIA Sync 相容裝置上操作媒體內容。

(字幕設定)

開啟或關閉字幕 (此功能可用時)。

HELP

顯示說明選單。可以從此處訪問說明指南。

(寬螢幕模式)

變更螢幕格式。


SYNC MENU

顯示 BRAVIA 同步選單。


連接圖



有關連接的更多資訊，請參閱說明指南（第 2 頁）。

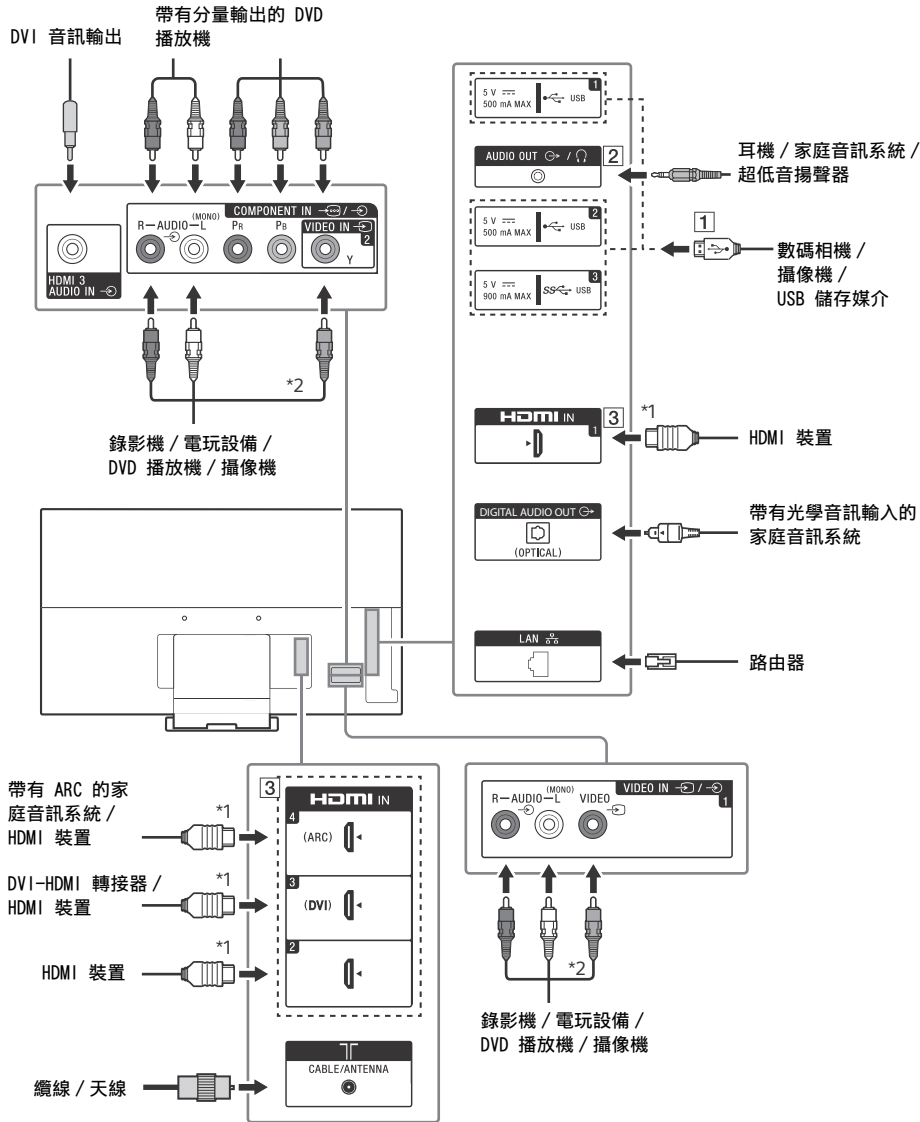
 
僅限 KD-75X9400D、KD-65/55X9300D

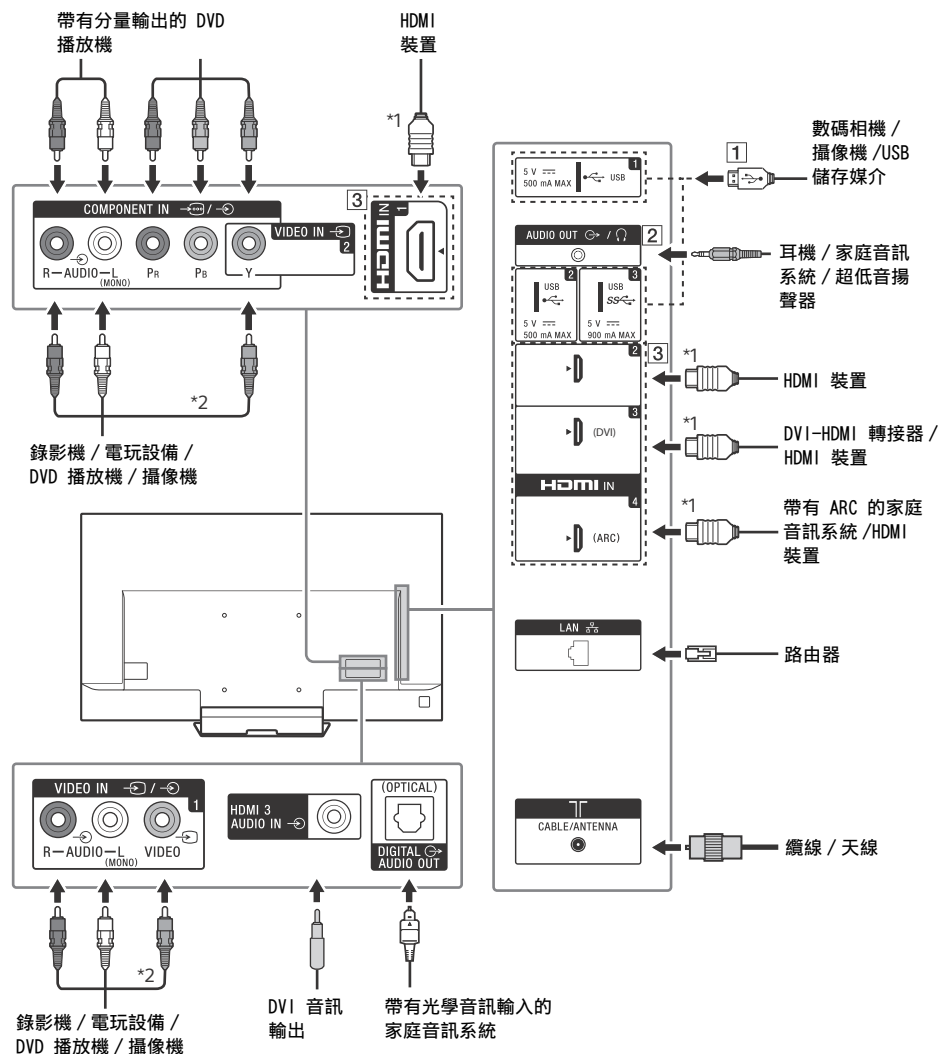


KD-75X9400D、KD-65/55X9300D 除外



- ❶  **USB 1/2**,  **USB 3**
- 連接大型 USB 裝置可能會干擾旁邊連接的其他裝置。
 - 連接大型 USB 裝置時，請連接至 USB 1 埠。

- ❷ **AUDIO OUT**^{*3}  
- 如需透過相連設備聆聽電視聲音，請按 **HOME**。選擇 [設定] → [聲音設定] → [耳機 / 聲音輸出]，並選擇所需的項目。

 - ❸ **HDMI IN 1/2/3/4**
- 如果裝置擁有 DVI 插孔，請透過 DVI - HDMI 轉接器接口（無附帶）將其連接至 HDMI IN 3，並將裝置的音訊輸出插孔連接至 HDMI 3 AUDIO IN。
 - 如果連接與音訊回傳信道（ARC）技術相容的數位音訊系統，請使用 HDMI IN 4。否則，必須額外連接 DIGITAL AUDIO OUT（OPTICAL）。



*2 連接單聲道裝置時，請連接 L（MONO）音訊插孔。

*3 僅支援 3 極立體聲聲迷你插孔。

圖像品質

- AV 複合訊號線
- 天線的連接訊號線

- 色差訊號線

- HDMI 訊號線



標準清晰度（SD）視訊圖像 視訊圖像信號的垂直解析度為 480（NTSC）或 576（PAL/SECAM）條線。



高清晰度（HD）視訊圖像信號的垂直解析度為 720 或 1080 條線。
（對於 4K 垂直解析度：2160 行）

將電視機安裝在牆上

使用隨附的壁掛式支架（僅限 KD-75X9400D、KD-65/55X9300D）

致客戶

安裝本產品要求具備充足的專業知識。務必委託 Sony 經銷商或授權的承包商安裝本產品，並在安裝期間充分注意安全。對於因錯誤操作或安裝不當或者安裝指定產品以外的任何產品引致的任何損壞或傷害，Sony 概不負責。您的法定權利（如有）不受影響。

致 Sony 經銷商和承包商

安裝本產品要求具備充足的專業知識。確保仔細閱讀本使用說明書以安全開展安裝工作。對於因錯誤操作或安裝不當引致的任何損壞或傷害，Sony 概不負責。

註

- 開展壁掛式支架安裝之前，請參閱壁掛式支架的第 2 頁（安全資訊）和第 6 頁（預先注意事項）。
- 再次連接桌面底座時，確保將螺絲（先前卸下的）緊固到電視機背面的以前孔洞中。
- 確保牆壁有足夠空間以及能支撐至少電視機四倍的重量。請參閱第 24-25 頁（規格）有關電視機的重量。



有關您的電視機型號的壁掛式支架安裝的說明，請參閱隨附的壁掛式支架安裝指南。

CT

使用選購的壁掛式支架

本電視機的使用說明書僅顯示安裝至牆壁之前的電視機安裝準備工作。

致客戶：

出於產品保護及安全原因，Sony 強烈建議由 Sony 經銷商或授權的承包商安裝電視機。請勿嘗試自行安裝電視機。

致 Sony 經銷商和承包商：

安裝、定期維護及檢查本產品時，請充分注意安全。

安裝本產品須具備充足的專業知識，確定牆壁是否能夠承受電視重量時尤為如此。務必委託 Sony 經銷商或授權的承包商將本產品安裝至牆壁上，並在安裝期間充分注意安全。對於因錯誤操作或安裝不當引致的任何損害，Sony 概不負責。

使用壁掛式支架 SU-WL500（無附帶）（KD-75X9400D）或 SU-WL450（無附帶）（KD-65/55X9300D、KD-65/55X8500D）將電視機安裝到牆上。

安裝壁掛式支架時，亦請參閱壁掛式支架附帶的使用說明書及安裝指南。


註

- 務必將取下的螺絲存放在兒童接觸不到的安全位置。


僅限 KD-75X9400D、KD-65/55X9300D

1 卸下支架蓋和端子蓋。


KD-75X9400D

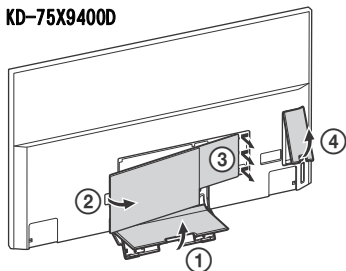

KD-65/55X9300D

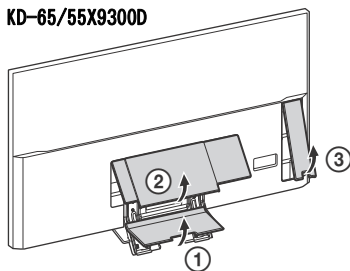


2 從電視機背面卸下螺絲。

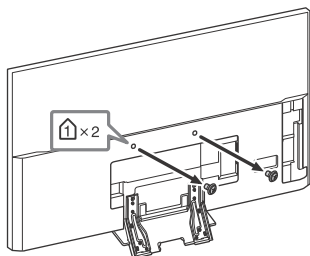


3 將掛壁安裝連接件（電視機隨附）連接到電視機後部（使其與牆壁平行）。

KD-75X9400D

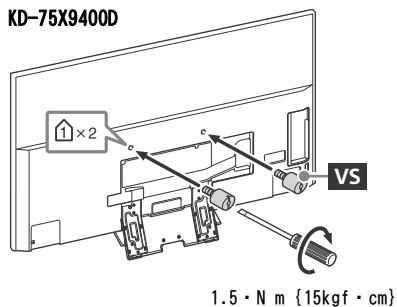

KD-65/55X9300D

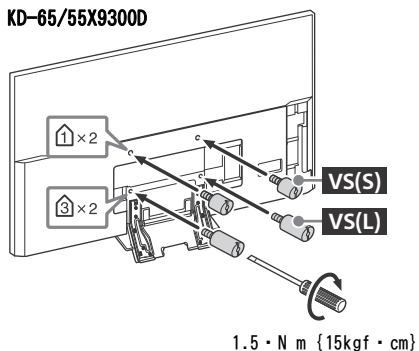


註

- 使用電動螺絲刀時，請將扭力設定為約 1.5 N · m {15 kgf · cm}。
 - 將其連接到電視機時，確保緊固掛壁安裝連接件。
- 僅使用平頭螺絲刀安裝掛壁安裝連接件。使用其他工具會造成掛壁安裝連接件扭矩過大和損壞電視機。


KD-75X9400D, KD-65/55X9300D 除外

從電視機背面卸下螺絲。


KD-65X8500D

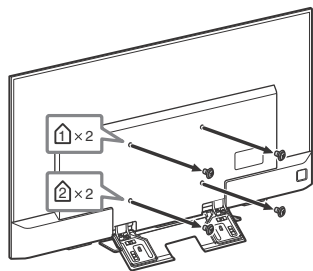

KD-55X8500D

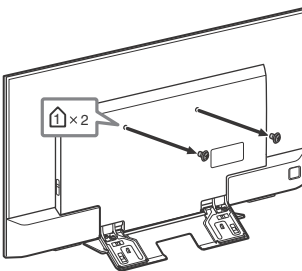


1 卸下螺絲。

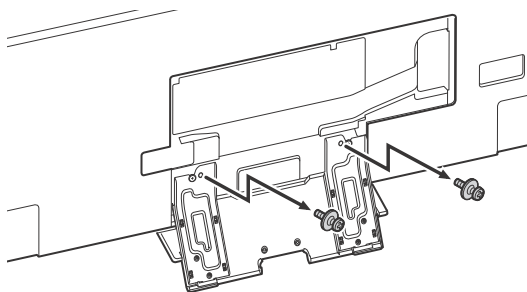


2 使用壁掛式支架隨附的四個螺絲連接掛鉤。

註

- 使用電動螺絲刀時，請將扭力設定為約 $1.5 \text{ N} \cdot \text{m}$ { $15 \text{ kgf} \cdot \text{cm}$ }。
- 務必將未使用的組件存放於安全位置，以備日後使用。保管好本說明書，以供日後參考。

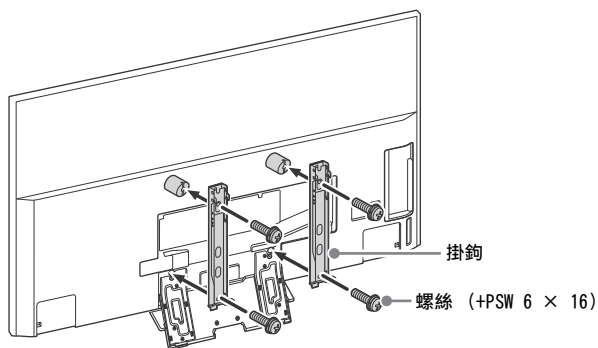

- 3 確保牆壁有足夠空間以及能支撐至少電視機四倍的重量。請參閱以下列表有關在牆上安裝電視機。請參閱第 24-25 頁（規格）有關電視機的重量。

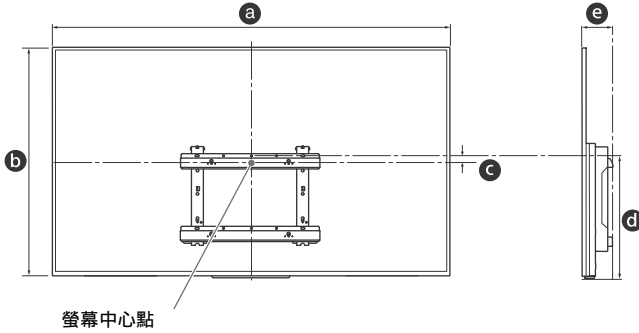

單元：毫米

型號名稱 KD-	顯示幕	螢幕中心	安裝的長度		
			角度 (0°)		
	a	b	c	d	e
75X9400D	1672	960	29	514	113

註


- 本電視機型號僅限 0°。
- 製表內的數字視安裝而可能略有不同。

- 4 將必要的連接線連接至電視機。

註

- 將電視機安裝至牆壁後，無法存取任何端子。

- 5 從電視機拆卸桌面底座。

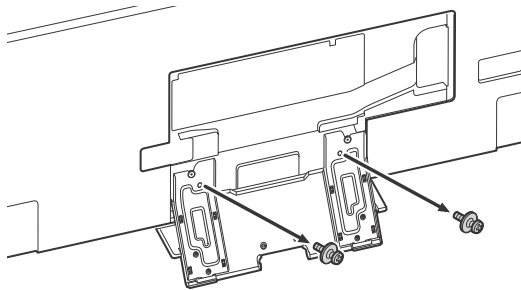


6 將電視機安裝在牆上。

型號名稱 KD-	螺絲位置	掛鉤位置
75X9400D	e, j	a


螺絲位置

將掛鉤安裝到電視機上。

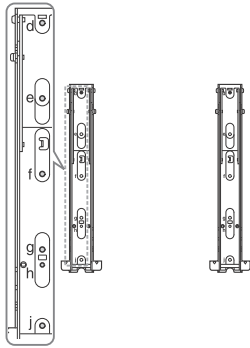

掛鉤位置


將電視機安裝到底座支架上。

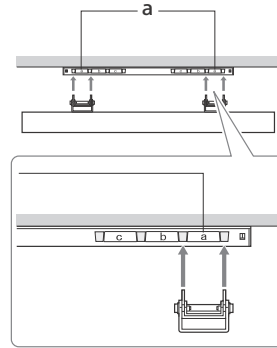

請參閱您所擁有機型之壁掛式支架附帶的說明書，將電視機安裝至牆壁。

SU-WL450（僅限 KD-65/55X9300D、KD-65/55X8500D）

- 1 確保牆壁有足夠空間以及能支撐至少電視機四倍的重量。
請參閱以下列表有關在牆上安裝電視機。請參閱第 24-25 頁（規格）有關電視機的重量。

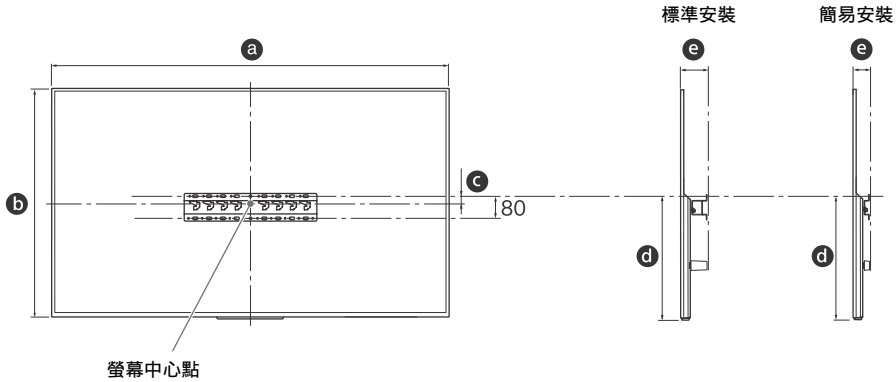

單元：毫米

型號名稱 KD-	顯示幕		螢幕中心		安裝的長度	
	a	b	c	d	e	
					標準安裝	簡易安裝
65X9300D	1458	839	25	449	102	61
65X8500D	1454	842	56	483	102	60
55X9300D	1239	717	87	450	102	61
55X8500D	1231	717	129	494	102	60

註

- 製表內的數字視安裝而可能略有不同。
- 將電視機安裝至牆壁上後，電視機的上側略微前傾。

CT


2 安裝壁掛式支架的附件組件。參閱壁掛式支架安裝指南之“1”，檢查附件組件。

註


- 使用電動螺絲刀時，請將扭力設定為約 $1.5 \text{ N} \cdot \text{m}$ { $15 \text{ kgf} \cdot \text{cm}$ }。
- 務必將未使用的組件存放於安全位置，以備日後使用。保管好本說明書，以供日後參考。

標準安裝

KD-65/55X9300D

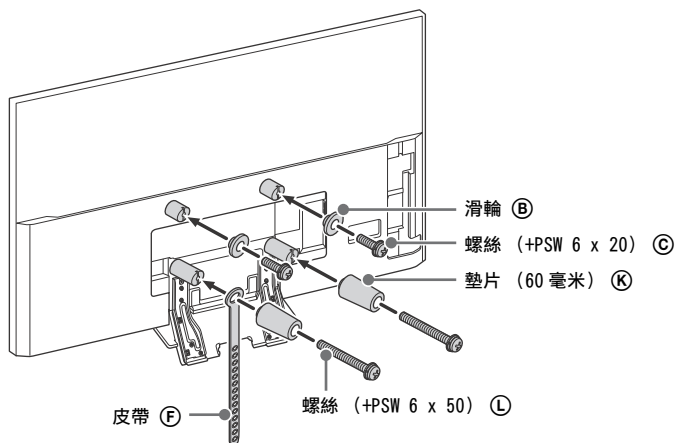

KD-65/55X8500D

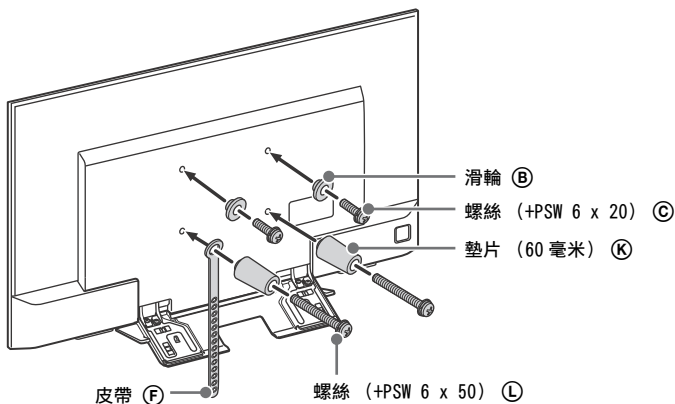



簡易安裝

註

- 選用此安裝樣式，則無法使用電視機後面的某些端子。


KD-65/55X9300D

KD-65/55X8500D

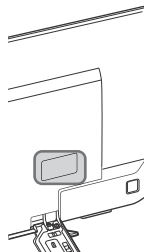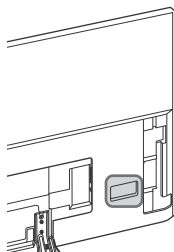


CT

KD-65/55X9300D

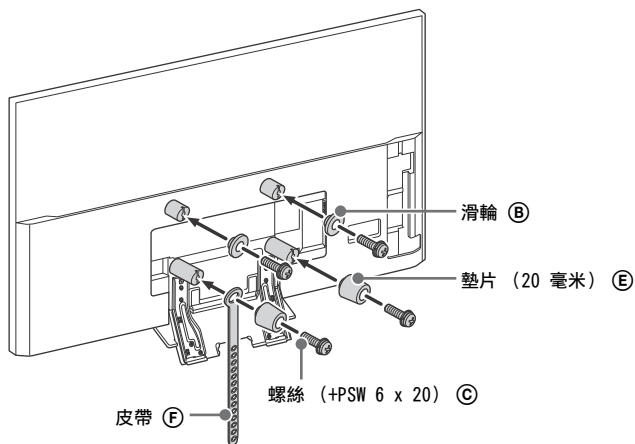

KD-65/55X8500D

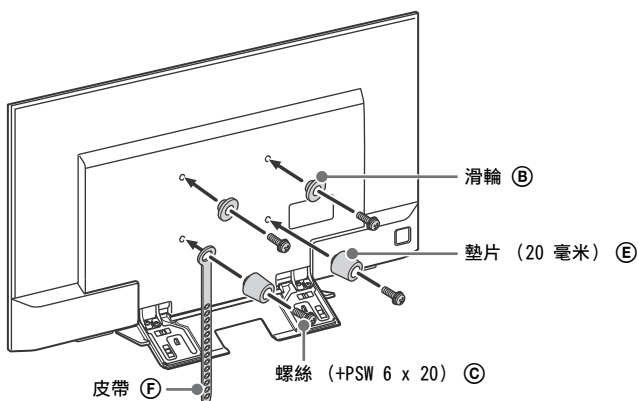


3 將必要的連接線連接至電視機。

註


- 將電視機安裝至牆壁後，無法存取任何端子。

4 從電視機拆卸桌面底座。

KD-65/55X9300D

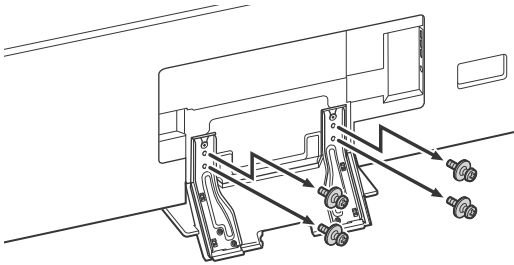


KD-65/55X8500D

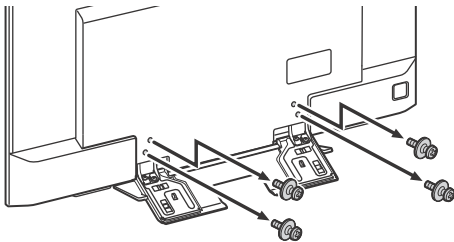

5 將電視機安裝至底座。請參閱壁掛式支架附帶的安裝指南之“5”以及使用說明書之“將電視機安裝至牆壁”。

型號名稱 KD-	掛鉤位置
65X9300D	b
65X8500D	
55X9300D	
55X8500D	c

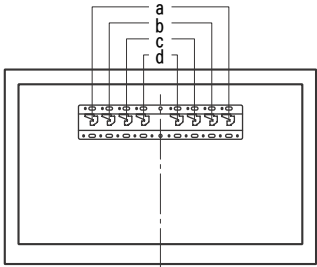


請參閱您所擁有機型之壁掛式支架附帶的說明書，將電視機安裝至牆壁。

故障排除

為了即時更新您的電視軟體，須透過數位廣播系統或網路下載最新軟體資訊，從而更新軟體。選擇 [立即更新] 啟動產品更新。軟體更新時，照明 LED 閃白燈。

更新軟體時，顯示帶有 [Updating...] (正在更新...) 的下列螢幕。

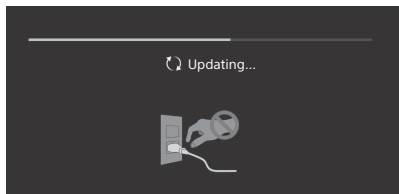

軟體更新期間，請勿拔出 AV 電源線。否則，軟體更新不會徹底完成，並且可能引致軟體故障。軟體更新可能持續長達 30 分鐘。如果您不想自動更新軟體，請按 **HOME** 並選擇 [說明] → [系統軟體更新] → [軟體自動下載] → [關]。

在插入電視機時，即使按遙控器或電視機上的電源按鈕，電視機也可能在一定時間不能開啟，因為系統啟動需要時間。等待大約一分鐘，然後再次操作。在按遙控器或電視機上的電源按鈕開啟時，需要一定時間打開照明 LED 以及使遙控器工作。

當照明 LED 閃紅燈時，計算閃爍次數 (間隔時間為三秒)。

若光節 LED 閃爍紅色，斷開 AC 電源線兩分鐘，然後再開啟電視機，以此來重設電視機。如果問題仍然存在，請聯繫您的經銷商或 Sony 服務中心並告知照明 LED 閃紅燈的次數 (間隔時間為三秒)。拔掉 AC 電源線，然後告訴您的經銷商或 Sony 服務中心。

當照明 LED 沒有閃爍，檢查以下列表中的項目。您也可參閱說明指南中的故障排除或通過選擇 [說明] → [自行診斷] 以進行自行診斷。如果問題仍然存在，請將您的電視機交給合格的維修人員修理。

故障及解決方案

沒有畫面 (螢幕是黑的) 也沒有聲音。

- 檢查天線 / 訊號線連接。
- 將電視機連接至 AC 電源，然後按電視機或遙控器上的 **開**。

無法調諧某些節目。

- 檢查天線 / 訊號線連接。

遙控器無效。

- 更換電池。

忘記 [親子鎖碼] 密碼。

- PIN 碼輸入 9999。通過選擇 [設定] → [親子鎖碼] → [變更 PIN 號碼] 更新 PIN 碼。

電視機周圍溫度升高。

- 當長時間使用電視機時，電視機周圍溫度會升高。用手觸摸這些地方時可能會覺得很燙。


停頓音訊或視訊、空白螢幕或電視機對電視或遙控器按鈕沒有反應。

- 拔下 AC 電源線兩分鐘之後再次連接以進行簡單的電視機重設。


在電視機上找不到 **開、CH+/、CH-/、**返回** 和 TV 按鈕。**

- 請參閱下圖有關電視機上按鈕的位置。

僅限 KD-75X9400D、KD-65/55X9300D

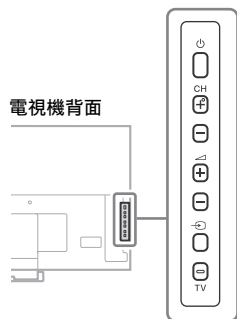


KD-75X9400D、KD-65/55X9300D 除外

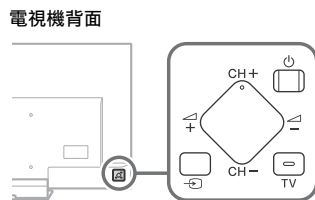

照明 LED 開啓。


- 如果您不要發光 LED 亮起，您可將之關閉。按 **HOME**，然後選擇 [設定] → [照明 LED] → [關]。

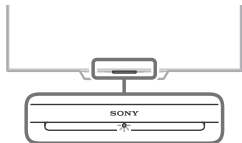

無法以 WPS 連接無線路由器 (Wi-Fi Protected Setup)。

- 如果您使用 WEP 安全加密，選擇 [簡易] → [Wi-Fi] → [依掃描清單連接]。然後，選擇您要連接的網絡名稱 (SSID)。

無法在網絡設定中找到所需的網絡名稱。

- 選擇 [[手動輸入]] 選擇  以輸入網絡名稱。

規格

系統

面板系統

LCD (液晶顯示) 面板, LED 背光源

電視系統

類比: I, D/K, B/G, M

數位: DTMB

彩色 / 視訊系統

類比: PAL, SECAM, NTSC3.58, NTSC4.43

數位: 參閱說明指南

頻道涵蓋範圍

類比: UHF/VHF / 訊號線

數位: UHF

聲音輸出

KD-75X9400D, KD-65/55X9300D:

7.5 瓦 + 7.5 瓦 + 7.5 瓦 + 7.5 瓦

KD-65/55X8500D: 10 瓦 + 10 瓦

無線技術



IEEE802.11ac/a/b/g/n 協議

藍牙版本 4.1

輸入 / 輸出插孔

天線 / 訊號線

VHF/UHF 的 75 歐姆外接端子

 /  VIDEO IN 1

視訊 / 音訊輸入 (phono 插孔)

 /  COMPONENT IN

YPbPr (色差視頻): 1080p (50, 60 Hz), 1080i (50, 60 Hz), 720p (50, 60 Hz), 576p, 576i, 480p, 480i

音訊輸入 (phono 接腳插孔)

 VIDEO IN 2

視訊輸入 (備有 Y 輸入的常見 phono 針)

HDMI IN 1, 2, 3, 4 (支援 4K 解析度、HDCP 2.2 相容)

視訊 (2D):

4096 × 2160p (50, 60 Hz) *, 4096 × 2160p (24 Hz) *, 3840 × 2160p (50, 60 Hz), 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 576i, 480p, 480i, PC 格式
*當輸入為 4096 × 2160p 時, 顯示效果為 3840 × 2160p

視訊 (3D) (僅限 3D 兼容型號):

幀封裝: 1080p (30 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p
並排: 1080p (50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (50, 60 Hz)

上下格式: 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (50, 60 Hz)

音訊: 5.1 聲道線性 PCM: 32, 44.1, 48, 88.2, 96, 176.4 和 192 kHz, 16, 20 和 24 bits, Dolby Digital 和 DTS

ARC (音頻回傳信道) (僅限 HDMI IN 4)

Ⓞ DIGITAL AUDIO OUT (OPTICAL)

數位光纖插孔 (兩聲道線性 PCM, Dolby Digital 和 DTS)

HDMI 3 AUDIO IN Ⓞ

類比音訊輸入 (立體聲迷你插孔)

AUDIO OUT Ⓞ/Ⓞ (立體聲迷你插孔)

耳機、音訊輸出、超低音揚聲器

↔ 1, ↔ 2, SS↔ 3

USB 連接埠 1 和 2 支援高速 USB (USB2.0)

USB 連接埠 3 支援超快速 USB (USB3.0)

LAN

10BASE-T/100BASE-TX 接頭 (視網絡的作業環境而定, 連線速度可能不同。不保證本電視的 10BASE-T/100BASE-TX 通訊率和通訊品質。)

Ⓞ DC IN 24 V (僅限 KD-65/55X9300D)、

Ⓞ DC IN 19.5 V (僅限 KD-55X8500D)

AC 轉接器輸入

其他

選用的配件

壁掛式支架: SU-WL500 (僅限 KD-75X9400D)

壁掛式支架: SU-WL450 (KD-75X9400D 除外)

無線重低音揚聲器: SWF-BR100

主動式 3D 眼鏡: TDG-BT500A (僅限 KD-75X9400D、KD-65/55X9300D)



作業溫度

0 °C - 40 °C

操作溫度

10 % - 80 % 相對濕度 (非冷凝)

電源和其他規格

電源需求

隨附 AC 轉接器的型號除外

220 V - 240 V AC, 50 Hz

僅限隨附 AC 轉接器的型號

帶有 AC 轉接器的 24 V DC (KD-65/55X9300D)

帶有 AC 轉接器的 19.5 V DC (KD-55X8500D)

額定規格: 輸入 220 V - 240 V AC, 50 Hz

螢幕尺寸 (對角測量) (大約)

KD-75X9400D: 75 英寸 / 189.3 厘米

KD-65X9300D: 65 英寸 / 163.9 厘米

KD-65X8500D: 65 英寸 / 163.9 厘米

KD-55X9300D: 55 英寸 / 138.8 厘米

KD-55X8500D: 55 英寸 / 138.8 厘米

顯示解析度

3840 點 (水平) × 2160 條線 (垂直)

耗電量

見電視機背面

輸出率

USB 1/2: 5 V, 500 mA 最大值

USB 3: 5 V, 900 mA 最大值

尺寸 (大約) (寬 × 高 × 深)

包含桌面底座

KD-75X9400D: 1672 × 1017 × 327 毫米

KD-65X9300D: 1458 × 891 × 275 毫米

KD-65X8500D: 1454 × 894 × 279 毫米

KD-55X9300D: 1239 × 769 × 261 毫米

KD-55X8500D: 1231 × 770 × 263 毫米

不含桌面底座

KD-75X9400D: 1672 × 960 × 52 毫米

KD-65X9300D: 1458 × 839 × 36 毫米

KD-65X8500D: 1454 × 842 × 44 毫米

KD-55X9300D: 1239 × 717 × 36 毫米

KD-55X8500D: 1231 × 717 × 44 毫米

質量 (大約)

包含桌面底座

KD-75X9400D: 43.2 千克

KD-65X9300D: 32.1 千克

KD-65X8500D: 23.9 千克

KD-55X9300D: 24.9 千克

KD-55X8500D: 18.6 千克

不含桌面底座

KD-75X9400D: 38.7 千克

KD-65X9300D: 28.9 千克

KD-65X8500D: 20.3 千克

KD-55X9300D: 22.0 千克

KD-55X8500D: 15.1 千克

註

- 選購配件的供應視國家 / 區域 / 電視機型號 / 存貨而定。
- 設計與規格可能變更而不事先通知。

商標資訊

- HDMI 和 HDMI High-Definition Multimedia Interface 專用名詞以及 HDMI 標誌是 HDMI Licensing LLC 在美國和其他國家的商標或註冊商標。
- 本產品經過杜比實驗室的授權而製造。Dolby、Dolby Audio 和雙 D 記號是杜比實驗室的商標。
- “BRAVIA”和 BRAVIA 是 Sony Corporation 的商標。
- Gracenote、Gracenote eyeQ、Gracenote VideoID、Gracenote Video Explore、Gracenote 標誌和標誌字型以及 “Powered by Gracenote” 標誌是 Gracenote 在美國和 / 或其他國家的註冊商標或商標。
- Opera® Devices SDK from Opera Software ASA. Copyright 1995–2015 Opera Software ASA. All rights reserved.
- Wi-Fi、Wi-Fi Direct、Miracast、Wi-Fi Protected Setup 和 Wi-Fi CERTIFIED 標識是 Wi-Fi Alliance 的商標或註冊商標。
- 有關 DTS 專利，請參閱 <http://patents.dts.com>。由 DTS, Inc. 授權製造。
DTS、其標誌、& DTS 連同其標誌是註冊商標，而 DTS Digital Surround 是 DTS, Inc. 的商標 © DTS, Inc.。版權所有。
- Bluetooth® 字標和標誌乃 Bluetooth SIG, Inc. 擁有的註冊商標，Sony Corporation 在授權下使用這些標記。其他的商標和商品名稱屬於其各自的所有者。
- ©2016 RealNetworks, Inc. 專利申請中。版權所有。RealNetworks 標誌是 RealNetworks, Inc. 的商標。
- TUXERA 是 Tuxera Inc. 在美國及其他國家 / 地區的註冊商標。
- USB-IF 超快速 USB 是 Forum, Inc 公司的註冊商標 .



4K

Actual resolution:
3840 x 2160 pixels.

CT



Help Guide
說明指南



Customer Support and Contact:

用戶支援和聯絡:

<http://www.sony-asia.com/support>

<http://www.sony.net/>

© 2016 Sony Corporation Printed in Japan



4 5 8 4 8 0 9 1 1 0

4-584-809-11(1)