



Home Audio System

Operating Instructions

Getting Started

Disc/USB Playback

USB Transfer

Tuner

BLUETOOTH

Network

Gesture Control

Sound Adjustment

Other Operations

Additional Information

WARNING

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc.
Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

Indoor use only.

CAUTION

The use of optical instruments with this product will increase eye hazard.

For customers in Europe and the United Arab Emirates



This product is classified as a Class 1 Laser product under IEC 60825-1:2007. This label is located on rear surface of the product.

For customers in Europe

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other European countries with separate collection systems)



This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household

waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these products and batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
For details, please access the following URL:
<http://www.compliance.sony.de/>



The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

This equipment has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 meters.

For customers in Australia and India




Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

For customers in Australia and New Zealand

It should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

License and Trademark Notice

- **DVD** is a trademark of DVD Format/ Logo Licensing Corporation.
- "DVD+RW", "DVD-RW", "DVD+R", "DVD-R", "DVD VIDEO", and the "CD" logos are trademarks.
- WALKMAN® and WALKMAN® logo are registered trademarks of Sony Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- This system incorporates Dolby* Digital.
 - * Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.
- This system incorporates High-Definition Multimedia Interface (HDMI™) technology. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- "BRAVIA" is a trademark of Sony Corporation.
- LDAC™ and LDAC logo are trademarks of Sony Corporation.
- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- Android™ is a trademark of Google Inc.
- Google Play™ is a trademark of Google Inc.
- Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.
- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- Wi-Fi®, Wi-Fi Protected Access® and Wi-Fi Alliance® are registered marks of the Wi-Fi Alliance®.
- Wi-Fi CERTIFIED™, WPA™, WPA2™ and Wi-Fi Protected Setup™ are marks of the Wi-Fi Alliance®.
-  is a mark of the Wi-Fi Alliance.
- DLNA™, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- Google Cast™ and the Google Cast Badge are trademarks of Google Inc.

- AOSS is a trademark of BUFFALO INC.
- This product incorporates Spotify software which is subject to 3rd party licenses found here: <https://developer.spotify.com/esdk-third-party-licenses/>
- Spotify and Spotify logos are trademarks of the Spotify Group.
- ClearAudio+ and **ClearAudio+** are trademarks of Sony Corporation.
- DSEE HX is a trademark of Sony Corporation.
- "Xperia" and "Xperia Tablet" are trademarks of Sony Mobile Communications AB.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR
 - (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO")

AND/OR

- (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE MPEG-4 VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, L.L.C.
[HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

- All other trademarks are trademarks of their respective owners.
- In this manual, ™ and ® marks are not specified.

About this manual


- This manual mainly explains operations using the remote control, but the same operations can also be performed using the keys on the touch panel of the subwoofer having the same or similar names.
- Icons, such as , listed at the top of each explanation indicate the type of media that can be used with the function being explained.
- Some illustrations are presented as conceptual drawings, and may be different from the actual products.
- The items displayed on the TV screen may vary depending on the area.
- The default setting is underlined.
- The text enclosed in brackets ([--]) appears on the TV screen, and the text enclosed in double quotation marks ("--") appears on the display.

Table of Contents

About this manual	5
Playable discs/files on Discs/ USB device	8
Websites for compatible devices	11
Guide to parts and controls	12

Getting Started

Unpacking	20
Installing the system.....	20
Hooking up the system securely.....	28
Deactivating the demonstration	32
Inserting batteries	32
Connecting the TV	33
Carrying the system	35
Changing the color system.....	35
Performing the quick setup	36
Changing the display mode.....	36

Disc/USB Playback

Before using the USB device.....	37
Basic playback	37
Other playback operations.....	39
Using play mode	42

Restricting playback of the disc (Parental Control).....	43
Viewing information of a disc and USB device	44
Using the Setup Menu	45

USB Transfer

Before using the USB device.....	50
Transferring music	50

Tuner

Listening to the radio	54
------------------------------	----

BLUETOOTH

About the BLUETOOTH wireless technology.....	55
Pairing this system with a BLUETOOTH device	55
Listening to music on a BLUETOOTH device	56
One Touch BLUETOOTH Connection by NFC	57
Setting the BLUETOOTH audio codecs.....	58

Network

Selecting the network connection method	60
Connecting with a computer	61
Listening to the same music from the multiple speakers (SongPal Link function).....	62
Listening to an Internet music service (Google Cast)	63
Listening to an Internet music service (Spotify)	63

Gesture Control

Enjoying the Gesture Control	65
Using the Gesture Control during playback	65
Creating a party atmosphere (DJ Effect)	66
Using the Gesture Control during Karaoke.....	67
Locking the audio systems in a chain (Party Lock)	67

Sound Adjustment

Adjusting the sound	68
Selecting the Virtual Football mode.....	68
Adjusting the subwoofer level.....	69
Creating your own sound effect.....	69

Other Operations

Using the Control for HDMI function.....	70
Using the Party Chain function.....	72
Singing along: Karaoke.....	75
Enjoying music with the Party Light and Speaker Light.....	76
Using the Sleep Timer.....	76
Using optional equipment...	77
Deactivating the touch panel on the subwoofer (Child Lock).....	77
Setting the automatic standby function.....	77
Setting the BLUETOOTH/ Network standby mode	78
Turning on or off the BLUETOOTH/Wi-Fi signal.....	78
About the “SongPal” and “Fiestable” applications	79
Updating the software.....	80

Additional Information

Troubleshooting	81
Precautions.....	94
Specifications.....	96
Language code list	100

Playable discs/files on Discs/USB device

Playable Discs

- DVD VIDEO
- DVD-R/DVD-RW in DVD VIDEO format or video mode
- DVD+R/DVD+RW in DVD VIDEO format
- VIDEO CD (Ver. 1.0, 1.1, and 2.0 discs)
- Super VCD
- CD-R/CD-RW/CD-ROM in VIDEO CD format or super VCD format
- AUDIO CD
- CD-R/CD-RW in AUDIO CD format

Playable files on Discs/USB device

- Music:
 - MP3 files (.mp3)^{*1*2}, WMA files (.wma)^{*2*3}, AAC files (.m4a/.mp4/.3gp)^{*2*3}, WAV files (.wav)^{*2*3}, AIFF files (.aiff)^{*2*3}, FLAC files (.flac)^{*2*3}, ALAC files (.alac)^{*2*3}, DSD (.dsf/.dsdiff)^{*2*3}
- Video:
 - MPEG4 files (.mp4/.m4v)^{*4}, Xvid files (.avi)

Notes

- The discs must be in the following format:
 - CD-ROM/-R/-RW in DATA CD format that contains the MP3^{*1*2}, MPEG4^{*4} and Xvid files, and conforms to ISO 9660^{*5} Level 1/Level 2 or Joliet (extended format).
 - DVD-ROM/-R/-RW/+R/+RW in DATA DVD format that contains the MP3^{*1*2}, MPEG4^{*4} and Xvid files, and conforms to UDF (Universal Disk Format).

- The system will attempt to play back any data with the extensions above, even if it is not in the supported format. Playing this data may generate a loud noise which could damage your speaker system.

- ^{*1} MP3 (MPEG 1 Audio Layer 3) is a standard format defined by ISO/MPEG for compressed audio data. MP3 files must be in MPEG 1 Audio Layer 3 format.
- ^{*2} Files with copyright protection (Digital Rights Management) cannot be played back by the system.
- ^{*3} USB device only.
- ^{*4} MPEG4 files must be recorded in MP4 file format. Supported video codec and audio codec are as follows:
 - Video codec: MPEG4 Simple Profile (AVC is not supported.)
 - Audio codec: AAC-LC (HE-AAC is not supported.)
- ^{*5} A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

Discs/files that cannot be played back

- You cannot play back the following discs
 - BDs (Blu-ray Discs)
 - CD-ROMs recorded in PHOTO CD format
 - Data part of CD-Extra or Mixed Mode CDs*
 - CD Graphics disc
 - Super Audio CDs
 - DVD Audio
 - DATA CD/DATA DVD that is created in Packet Write format
 - DVD-RAM
 - DATA CD/DATA DVD which has not been correctly finalized
 - CPRM (Content Protection for Recordable Media) compatible DVD-R/-RW recorded in Copy-Once programs

- A disc that has a non-standard shape (e.g., heart, square, star)
- A disc that has adhesive tape, paper, or a sticker attached to it
- You cannot play back the following files
 - The video files which is larger than 720 (width) × 576 (height) pixels.
 - The video files with a high width to length ratio.
 - A WMA file in WMA DRM, WMA Lossless, or WMA PRO format.
 - An AAC file in AAC DRM or AAC Lossless format.
 - The AAC files which is encoded at 96 kHz.
 - Files that are encrypted or protected by passwords.
 - Files with DRM (Digital Rights Management) copyright protection.
 - The MP3 PRO audio file can be played back as MP3 file.
 - The system may not play back an Xvid file when the file has been combined from two or more Xvid files.

* Mixed Mode CD: This format records data on the first track and audio (AUDIO CD data) on the second and subsequent tracks of a session.

Notes on CD-R/-RW and DVD-R/-RW/+R/+RW

- In some cases, a CD-R/-RW and DVD-R/-RW/+R/+RW cannot be played back on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. For more information, refer to the operating instructions of the recording device.
- Some playback functions may not work with some DVD+Rs/+RWs, even if they have been correctly finalized. In this case, view the disc by normal playback.

Notes on discs

- This product is designed to play back discs that conform to the Compact Disc (CD) standard.
- DualDisc and some music discs encoded with copyright protection technologies do not conform to the CD standard. Therefore, these discs may not be compatible with this product.

Note on multisession disc

This system can play back continuous sessions on a disc when they are recorded in the same format as the first session. However, the playback is not guaranteed.

Note on DVD VIDEO and VIDEO CD playback operations

Some playback operations for a DVD VIDEO or VIDEO CD may be intentionally restricted by software producers. Therefore, some playback features may not be available. Be sure to read the operating instructions of the DVD VIDEO or VIDEO CD.


Notes on playable files

- Playback may take a longer time to start when:
 - a DATA CD/DATA DVD/USB device is recorded with a complicated tree structure.
 - the audio files, image files, or video files in another folder have just been played back.
- The system can play back a DATA CD/DATA DVD or a USB device in the following conditions:
 - up to a depth of 8 folders
 - up to 300 folders
 - up to 999 files in a disc
 - up to 2,000 files in a USB device
 - up to 650 files in a folderThese numbers may vary depending on the file or folder configuration.
- Folders that have no audio files, image files, or video files are skipped.
- Files transferred by a device such as a computer may not be played back in the order in which they were transferred.
- The playback order may not be applicable depending on the software used for creating the audio file, image file, or video file.
- Compatibility with all encoding/writing software of the supported formats, recording devices, and recording media cannot be guaranteed.
- Depending on the Xvid file, the picture may be unclear or the sound may skip.

Notes about USB devices

- This system is not guaranteed to operate with all USB devices.
- Although there are a variety of complex functions for USB devices, the playable contents of USB devices connected to the system are music, photo, and video contents only. For details, refer to the operating instructions of the USB device.
- When a USB device is inserted, the system reads all the files on the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- Do not connect the system and the USB device through a USB hub.
- With some connected USB devices, there may be a delay before an operation is performed by this system.
- The playback order for the system may differ from the playback order of the connected USB device.
- Before using a USB device, make sure that no virus-ridden files are on the USB device.

Region code

Your system has a region code and will only play back a DVD VIDEO labeled with an identical region code or .

Websites for compatible devices

Check the websites below for the latest information about compatible USB and BLUETOOTH devices.

For customers in Latin America:

<<http://esupport.sony.com/LA>>

For customers in Europe and Russia:

<<http://www.sony.eu/support>>

For customers in other countries/regions:


<<http://www.sony-asia.com/support>>

About BLUETOOTH communication for iPhone and iPod touch


Made for

- iPhone SE
- iPhone 6s Plus
- iPhone 6s
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPhone 4s
- iPod touch (6th generation)
- iPod touch (5th generation)


Guide to parts and controls

You can lock the keys except  (power) on the subwoofer to prevent them from being operated accidentally (page 67, 77).


Active Subwoofer (Top)

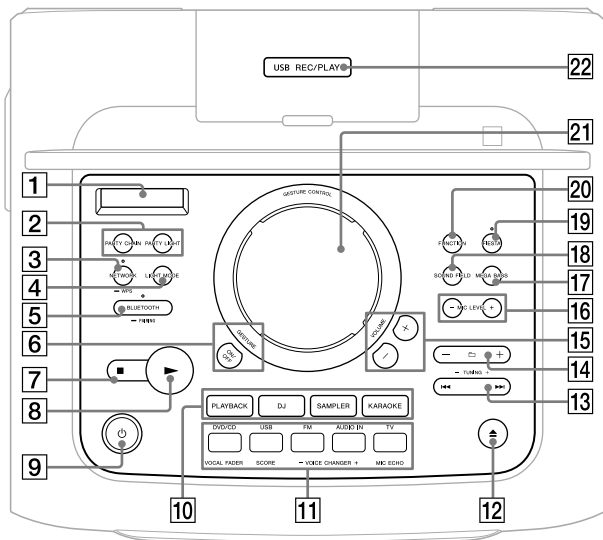



Active Subwoofer (Front)

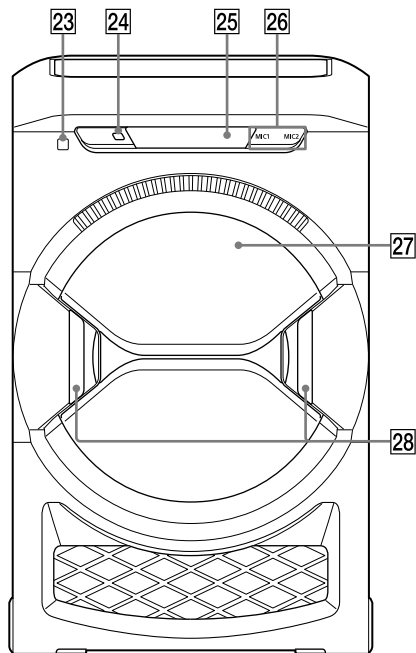

Active Subwoofer (Rear)

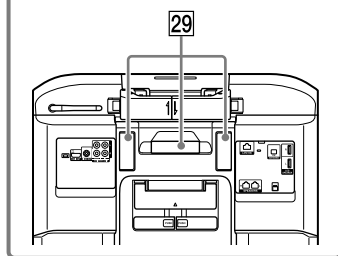

Speaker System

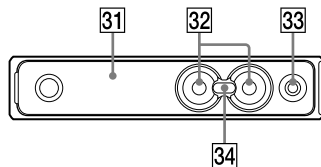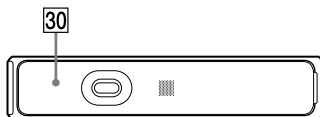

Active Subwoofer (Top):

1 Display

2 PARTY CHAIN key (page 74)

PARTY LIGHT key (page 76)

3 NETWORK indicator

Indicates the current status of the system:

- Turned off when the system is in standby mode.
- Flashes in white while setting the network connection.
- Lit in white while the network connection is established.
- Lit in green while connected to a music service via Spotify.
- Lit in blue while connected to a music service via Google Cast.

NETWORK key

Touch to connect to a network.

— WPS (Wi-Fi Protected Setup) key

Touch and hold to set up a Wi-Fi network.

4 LIGHT MODE key (page 76)

5 BLUETOOTH indicator (page 55)

BLUETOOTH key

Touch to select the BLUETOOTH function.

— PAIRING key

Touch and hold to activate BLUETOOTH pairing in the BLUETOOTH function.

6 GESTURE ON/OFF key (page 65, 89)

7 ■ (stop) key

- Touch to stop playback.
When touched twice, resume playback can be canceled.
- Touch to stop transfer during music transfer.
- Touch to stop the built-in sound demonstration.

8 ► (play) key

Touch to start playback.
Touch and hold ► for more than 2 seconds, the built-in sound demonstration will be played back.
Touch ■ to stop the demonstration.

9 Power indicator

Indicates the current status of the system:

- Turned off while the system is in standby mode.
- Lit in orange while the system is in BLUETOOTH/Network standby mode.
- Lit in green while the system is turned on.
- Flashes in green while the system is starting up or going into standby mode.

- Flashes in red quickly if the system detects an abnormality that cannot be displayed with an error message.

⏻ (power) button

Press to turn on the system, or set it to standby mode.

10 PLAYBACK key (page 65)

DJ key (page 36, 66)

SAMPLER key (page 66)

KARAOKE key (page 67, 75)

11 Direct source key (DVD/CD, USB, FM, AUDIO IN, TV)

To use this button, touch PLAYBACK, then the source key you want.

VOCAL FADER key (page 75)

SCORE key (page 76)

VOICE CHANGER +/- key (page 76)

MIC ECHO key (page 75)

12 ⏮ (open/close) key

Touch to open or close the disc tray.

13 ⏮/⏭ (go backward/go forward) key

Touch to select a track or file.

TUNING +/- key (page 36, 54)

14 📁 +/- (select folder) key

Touch to select a folder on a data disc or a USB device.

15 VOLUME +/- key

Touch to adjust the volume.

16 MIC LEVEL +/- key (page 75)

17 MEGA BASS key (page 68)

18 SOUND FIELD key (page 68)

19 FIESTA indicator

Light up when the FIESTA sound mode is selected.

FIESTA key (page 68)


20 FUNCTION key

Touch to select a function.

21 GESTURE CONTROL sensor (page 65, 89)

22  **USB port (inside of the USB REC/PLAY cover)**

Use to connect a USB device. This USB port can be used both for playback and music transfer. To maintain the dust and drip proof performance, make sure of the USB REC/PLAY cover is securely attached.

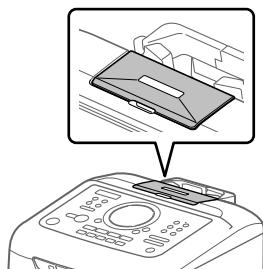

Active Subwoofer (Front, Rear):


23  **(N-Mark) (page 58)**

24 **Remote control sensor**

25 **Disc tray**

26 **MIC1 jack, MIC2 jack**

Use to connect the microphone(s). To maintain the dust and drip proof performance, make sure of the MIC cover is securely attached.

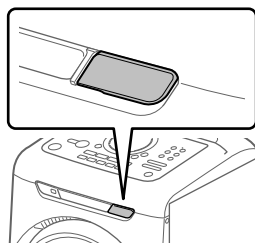

27 **Subwoofer**

28 **Speaker light* (page 76)**

29 **Party light* (page 76)**

* Do not look directly at the light-emitting parts when the Speaker Light and Party Light are turned on.

Speaker system:

30 **Left speaker unit (with the speaker grill attached)**

31 **Right speaker unit (with the speaker grill removed)**


32 **Midrange speakers**

33 **Tweeter**

34 Speaker light* (page 76)

* Do not look directly at the light-emitting parts when the Speaker Light and Party Light are turned on.

Remote control:

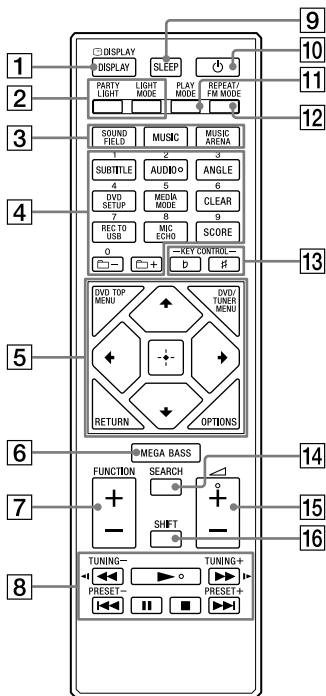

1 DISPLAY button

Press to change the information on the display.

DISPLAY*¹ button

Press to view or hide the on-screen display.

2 PARTY LIGHT button (page 76)

LIGHT MODE button (page 76)

3 SOUND FIELD button (page 68)

MUSIC button (page 68)

MUSIC ARENA button (page 68)

4 Numeric (0 – 9) buttons*^{1*2}

- Press to select a track, chapter or file with its item number.
- Press to enter numbers or values.

SUBTITLE button (page 40)

AUDIO*² button (page 40, 45)

ANGLE button (page 40)

DVD SETUP button (page 45)

MEDIA MODE button

Press to select the media to be played back on a data disc or USB device.



CLEAR button (page 40)

 
REC TO USB button (page 51)



Press to transfer music to the USB device connected to the USB port.

MIC ECHO button (page 75)

SCORE button (page 76)

-  **+/- (select folder)**
Press to select a folder on a data disc or a USB device.
- 5 DVD TOP MENU button**
Press to display the DVD title on the TV screen.
- DVD/TUNER MENU button (page 39, 40, 54)**
- RETURN button (page 39)**
- OPTIONS button**
Press to enter or exit options menu.
- ↕/↗/↖/↘ button**
Press to select the menu items.
-  **button**
Press to enter/confirm the settings.
- 6 MEGA BASS button (page 68)**
- 7 FUNCTION +/- button**
Press to select a function.
- 8 ◀◀/▶▶ (fast reverse/fast forward) button (page 39)**
Press to find a point in a track or file during playback.
- ◀◀/▶▶ (slow back/slow forward) button (page 39)**
Press to play in slow-motion.
- TUNING+/- button (page 54)**
- ▶ (play)*2 button**
Press to start playback.
- ◀◀/▶▶ (go backward/go forward) button**
Press to select a track or file.
- PRESET+/- button (page 54)**
- ⏸ (pause) button**
Press to pause playback. To resume playback, press ▶.
- (stop) button**
- Press to stop playback.
When pressed twice, resume playback can be canceled.
 - Press to stop transfer during music transfer.
 - Press to stop the built-in sound demonstration.
- 9 SLEEP button (page 76)**
- 10 ⏻ (power) button**
Press to turn on the system, or set it to standby mode.
- 11 PLAY MODE button (page 42, 51)**
- 12 REPEAT/FM MODE button (page 42, 54)**
- 13 KEY CONTROL b/# button (page 75)**
- 14 SEARCH button (page 38, 39)**
- 15 🔊 (volume) +/-*2 button**
Press to adjust the volume.
- 16 SHIFT*1 button**
Hold down to activate the buttons printed in pink.

*1 This button is printed in pink on the remote control. To use this button, hold down SHIFT () button, then press this button.

*2 The numeric button 2/AUDIO,  and  + buttons on the remote control have a tactile dot. Use the tactile dot as a reference when operating the system.

Getting Started

Unpacking

- Remote control (1)
- R03 (size AAA) batteries (2)
- Table top stands (2)
- Tall boy stands (2)
- Speaker pads (8)
- FM lead antenna (1)
- AC power cord (mains lead) (1)
- AC plug adaptor* (1) (supplied only for certain areas)

* This plug adaptor is not for the use in Chile, Paraguay and Uruguay. Use this plug adaptor in the countries where it is necessary.

The system consists of:

- Active subwoofer: SA-WGT7DW (1)
- Speaker system: SS-GT7DWB (2)

Note

When unpacking the carton, be sure that two people handle the subwoofer. Dropping the subwoofer may cause personal injury and/or property damage.


Installing the system

The illustrations below are examples of how to install the system.


- Installing the speaker units on the rod of the subwoofer (Line array style) (page 22)




- Installing the speaker units on the speaker stands (Tall boy style) (page 23)

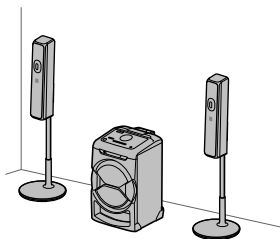


- Using the supplied speaker stands (Table top style) (page 25) and installing the speaker units vertically on either side of a TV on a rack

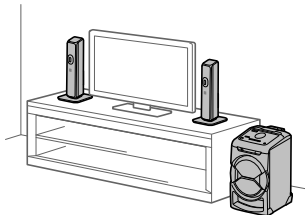


- Installing the speaker units in a TV rack (Sound bar style) (page 25)

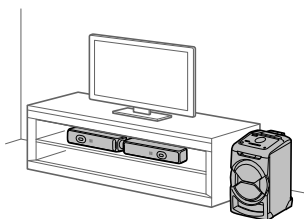


- Installing the speaker units on a wall (Sound bar style) (page 25)

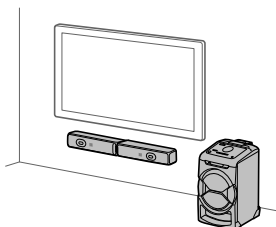

- Installing the speaker units on a wall (page 26)
 - To install the speaker units horizontally

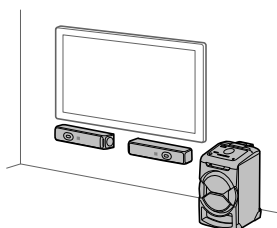


- To install the speaker units vertically

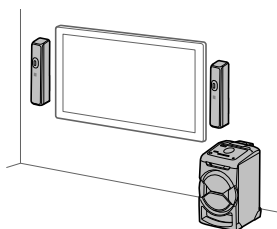


Notes

- Do not let children or infants be near the system.
- Do not install the system on a slope.
- Take following precautions when installing the speaker system and the subwoofer.
 - Do not block the ventilation holes on the rear panel of the subwoofer.
 - Do not place the speaker system and the subwoofer in a metal cabinet.
 - Do not place an object such as an aquarium between the speaker system and the subwoofer.
 - Place the subwoofer close to the speaker system in a same room.
- When the speaker system is placed in front of a TV, be sure not to obstruct the TV screen or the TV remote control sensor. If the TV remote control sensor is obstructed by the speaker system, the remote control may not be able to control the TV.

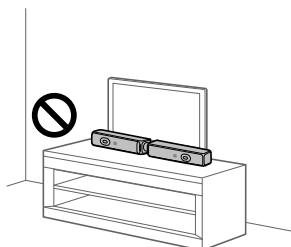


- Place the subwoofer at least 8 cm from the wall to avoid damaging the protruding AC power cord (mains lead).

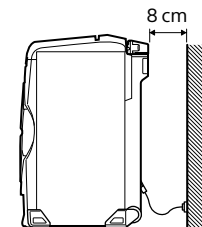


Attaching the speaker units onto the support rod of the subwoofer (Line array style)

1 Pull up the support rods of the subwoofer.

- ① Unlock the stopper, then pull up and extend the rods while pressing the release buttons.

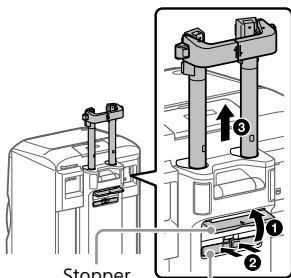

- ② Release the buttons and stop the rods at the position you want. The rods can be stopped at the holes in the rods (positioned 370 mm and 470 mm). Then lock the stopper.

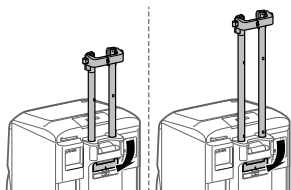

Make sure the support rods are securely fastened.


Notes

- Adjust the position of the rods before attaching the speaker units.
- Be careful not to get your hand caught when putting the rods back into the storing position.


2 Mount the speaker units to the attachments.

For each speaker unit:


- ① Open the lock lever.

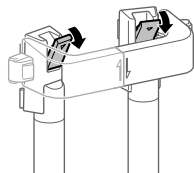

- ② Align the bracket of the speaker unit with the bracket of the speaker attachment, then slide down to attach.

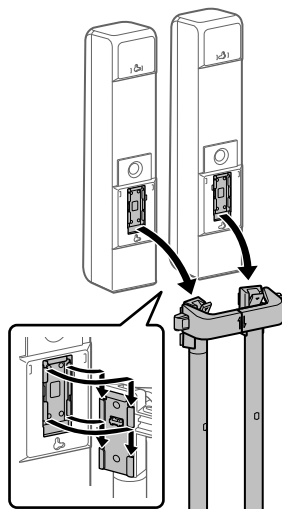


- ③ Close the lock lever.

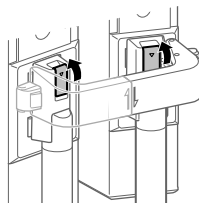

Make sure the speaker units are securely fastened.

To detach the speaker units


For each speaker unit, open the lock lever, then slide the speaker unit upward to detach it.

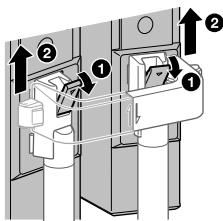


Attaching the speaker units onto the speaker stands (Tall boy style)

Assemble the speaker stands with using the support rods for the left and right speaker units. Before assembling, remove the table top stands from the speaker units if they are attached (page 25).

- 1** Unlock the stopper on the subwoofer, pull up the handle while pushing down the release buttons, then fully pull out the support rods.

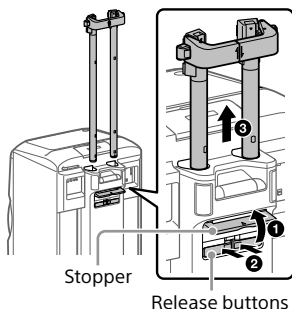


- 2** Disengage the handle base to separate to the right and left support rods.

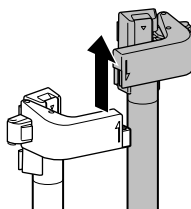

- 3** Unlock the stopper on each tall boy stand, mount the support rod until it locks, then lock the stopper.


The height of speaker stands is adjustable in 2 positions (370 mm and 470 mm).

Adjust the height to the position you want while pressing the release button.

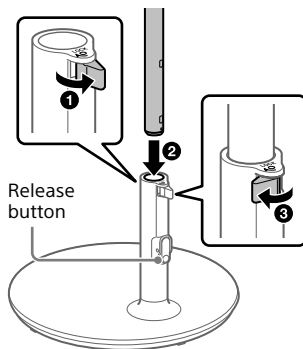


Make sure the support rod is securely fastened.

- 4** Open the lock lever on the support rod, align the brackets of the speaker unit and the speaker attachment on the support rod, then slide down the speaker unit to attach.

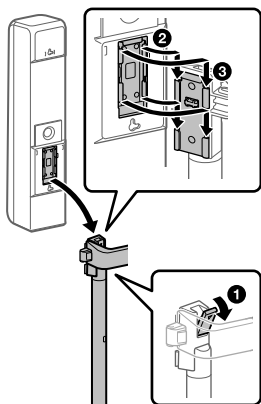


- 5** Close the lock lever, then fold away the handle part.

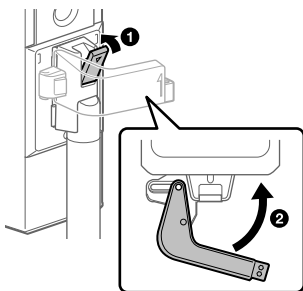

Make sure the speaker unit is securely fastened.


To detach the speaker units

Unfold the handle part, open the lock lever, then slide the speaker unit upward.

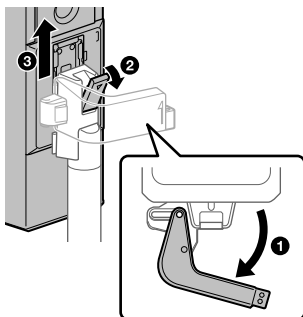

To detach the speaker stand base


Unlock the stopper, pull out the support rod from the speaker stand base while pushing down the release button.

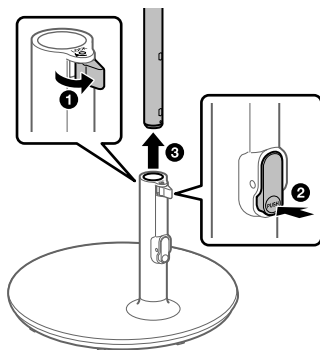

Attaching the table top stands (Table top style)


Attach the table top stands to the left and right speaker units if they are detached.

- 1 **Align the protruded part of the speaker unit with the recessed area of the table top stand.**

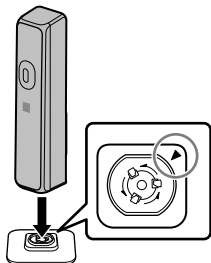


Make sure ▼ marks on the speaker unit and the table top stand are aligned.

- 2 **Rotate the speaker unit until it fits tightly.**

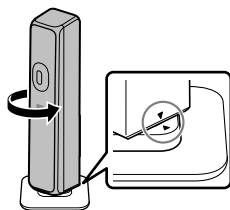


To remove the table top stands

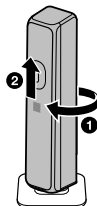


Combining the speaker units (Sound bar style)

Attach the supplied speaker pads on the speaker units to prevent them from slipping.

Left speaker unit

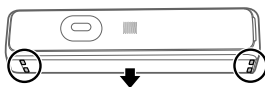

Right speaker unit

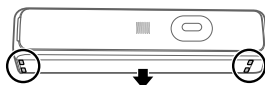


Installing the speaker units on a wall


Notes

- Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws securely to a wall stud. Install the speaker system on a vertical and flat reinforced area of the wall.
- Be sure to subcontract the installation to Sony dealers or licensed contractors and pay special attention to safety during the installation.
- Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength, improper screw installation or natural calamity, etc.

1 Prepare screws (not supplied) that are suitable for the holes on the back of the speaker system.

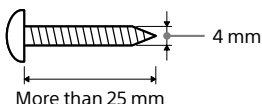


Hole on the back of the speaker system

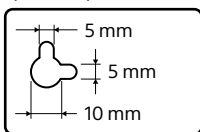


2 Drive the screws to the wall.

The screws should protrude 6 mm to 7 mm from the wall.

— To install the speaker units horizontally

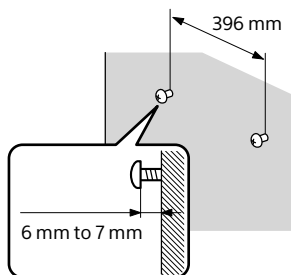


— To install the speaker units vertically

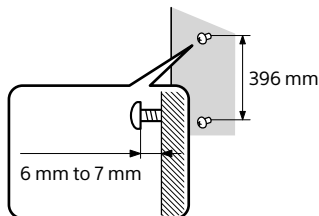


3 Hang the speaker unit onto the screws.

Align the holes on the back of the speaker unit to the screws, then hang the speaker unit onto the 2 screws.

- To install the speaker units horizontally

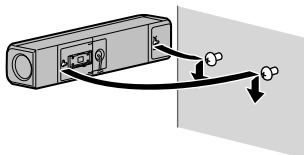


- To install the speaker units vertically

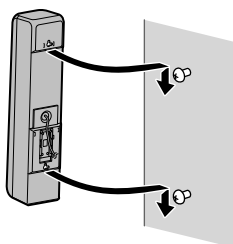


To enjoy a more dynamic sound

Place your fingers over the parts ❶, then pull the grille of the subwoofer and speakers to remove them. After removing the grilles, do not touch the exposed part of the subwoofer and speakers, and keep the removed grilles on a flat surface to prevent distortion.

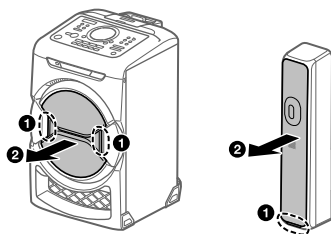


Hooking up the system securely

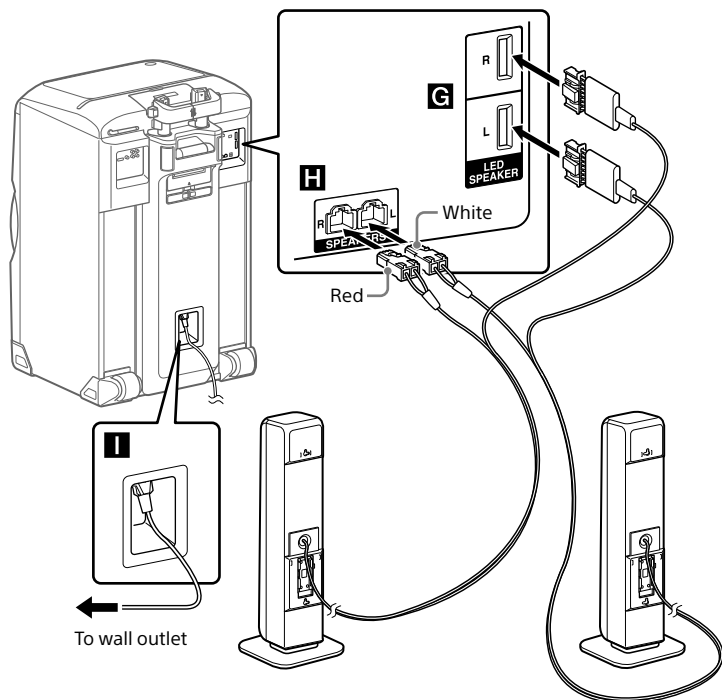


To attach the speaker cords (Line array style)

When you install the speaker units on the rod of the subwoofer (Line array style) (page 22), thread the speaker cords into the rubber clips attached to the speaker cords, then plug them into the clip hole on the rear of the subwoofer to fasten the cords. By doing this, the system can prevent water from entering into each terminals when you accidentally splash liquid on the system, and prevent interference of speaker cords and lightings.

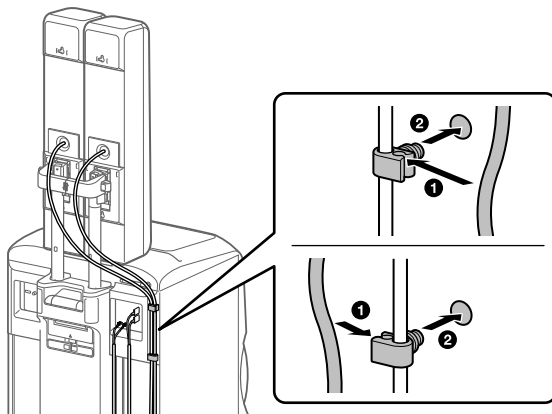

Active Subwoofer (Rear)

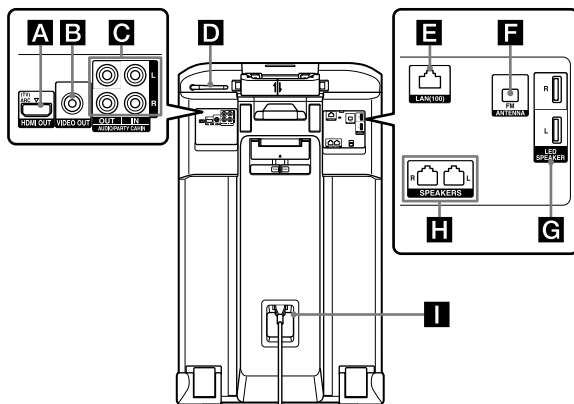


A HDMI OUT (TV) jack

Use an HDMI cable (not supplied) to connect to the HDMI IN jack of a TV (page 33).

B VIDEO OUT jack

Use a video cord (not supplied) to connect to the video input jack of a TV or projector.

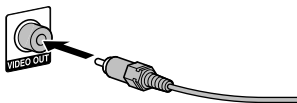

Note

Do not connect this system to the TV through the video deck.


C Audio input and output jacks

Use an audio cord (not supplied) to make either connection as follows:

- **AUDIO OUT L/R jacks, PARTY CHAIN OUT L/R jacks**
 - Connect to the audio input jacks of an optional equipment.
 - Connect to another audio system to enjoy the Party Chain function (page 72).
- **AUDIO IN L/R jacks, PARTY CHAIN IN L/R jacks**
 - Connect to the audio output jacks of a TV or an audio/video equipment. The sound is output through this system.
 - Connect to another audio system to enjoy the Party Chain function (page 72).

D Wireless LAN antenna

If you use the wireless network function, set the antenna as shown in the illustration (page 60).

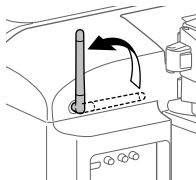

Note

If a network (LAN) cable is connected to the system, the system automatically establishes a wired LAN connection. If you wish to use a wireless LAN connection, do not connect a network (LAN) cable to the system.

E LAN (100) port

Connect network equipment with a LAN cable (not supplied) (page 61).

F FM ANTENNA connector

Find a location and an orientation that provide good reception when you set up the antennas. Keep the antenna away from the speaker cables, the AC power cord (mains lead) and the USB cable to avoid picking up noise.



G LED SPEAKER L/R terminals


Connect the LED speaker connector of the speaker to this terminal. The lighting on the subwoofer and speakers will react according to the music source (page 76).

Note

Make sure that the LED connector of the right speaker is properly connected to the LED SPEAKER R terminal, and the connector of the left speaker is properly connected to the LED SPEAKER L terminal.

To disconnect the speaker cord

While pushing down the lock lever, pull out the connector from the terminal.

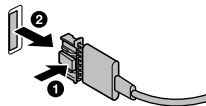**H SPEAKERS L/R terminals**


Connect the speaker connector of the speaker unit to this terminal.


Notes

- Be sure to use only the supplied speaker.
- When connecting speaker cord, insert the connector straight into the terminal.
- Make sure that the connector of the right speaker is properly connected to the SPEAKERS R terminal, and the connector of the left speaker is properly connected to the SPEAKERS L terminal.

To disconnect the speaker cord

While pushing down the lock lever, pull out the connector from the terminal.

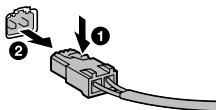**I AC power cord (mains lead)**


Connect the AC power cord (mains lead) (supplied) to the system, then to the wall outlet. When the AC power cord (mains lead) is connected, the demonstration (page 36) starts automatically. If you press  to turn on the system, the demonstration ends. You cannot turn on the system when "WELCOME" appears on the display.

Deactivating the demonstration

To deactivate the demonstration while the system is turned off, press DISPLAY repeatedly to select the no-display mode (Power Saving Mode) (page 36).

Inserting batteries

Insert the two supplied R03 (size AAA) batteries, matching the polarities shown below.

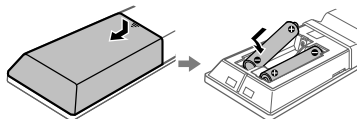


Notes

- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

To operate the subwoofer using the remote control

Point the remote control at the subwoofer's remote control sensor.

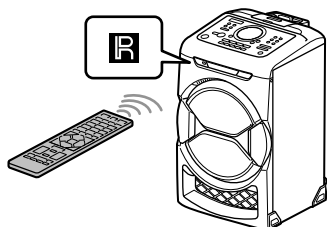


Connecting the TV

Connecting the TV

Before connecting cables, be sure to disconnect the AC power cord (mains lead).

To watch video

Select the connection methods according to the jacks on your TV.

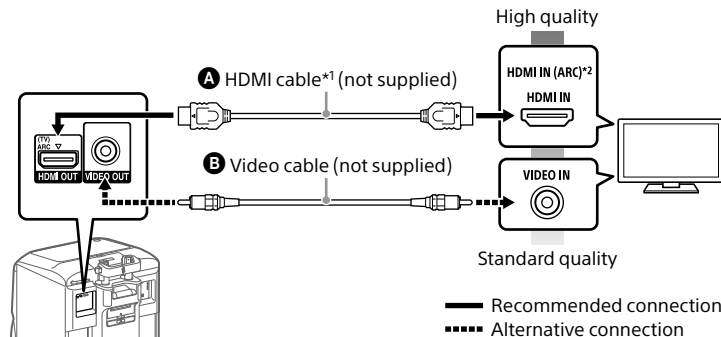


*1 High Speed HDMI Cable with Ethernet

*2 You can listen to TV sound via the system if you connect the system to the TV's HDMI IN (ARC) jack. The Audio Return Channel (ARC) function enables the TV to output sound through the system with an HDMI connection, without performing an audio connection (connection C below). To set the ARC function on this system, see [AUDIO RETURN CHANNEL] (page 49). To check the compatibility of your TV's ARC function, refer to the operating instructions supplied with your TV.

To listen to TV sound via the system

If you do not connect the system to the TV's HDMI IN (ARC) jack, make this connection.

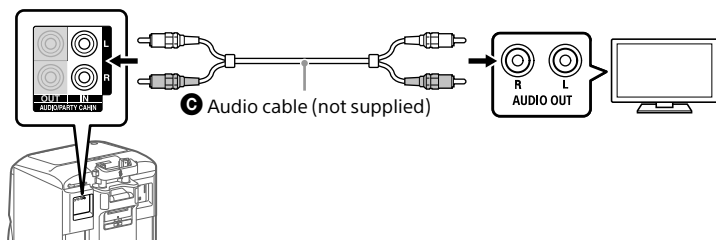

To listen to TV sound, press FUNCTION +/- repeatedly to select "TV."

Hints

- You can also enjoy the sound of external equipment (DVD players, etc.) via the system by connecting to the AUDIO IN (TV) jack as connection **C** above. For details, refer to the operating instructions of your equipment.
- If the audio output level from the system is low when connecting the external equipment, try adjusting the audio output settings on the connected equipment. It may improve the audio output level. For details, refer to the operating instructions of your equipment.


If "CODE 01" and "SGNL ERR" appear on the display of the subwoofer

When the audio input signals to the system are other than 2-channel Linear PCM signals, the messages "CODE 01" and "SGNL ERR" (indicating that the input audio signals are unsupported) appear on the display of the subwoofer.


In this case, select the proper audio output mode on the TV or external equipment in order to output 2-channel Linear PCM audio signals.

Carrying the system

The subwoofer has caster wheels and a pull drive handle on the rod so that you can roll it easily. Normally, carrying the subwoofer by this method is recommended on flat surfaces.

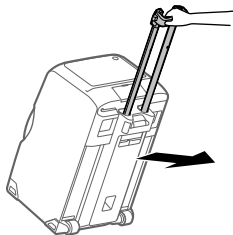


When carrying the subwoofer with the speaker units installed (Line array style), hold the handle part firmly with both hands, and push the subwoofer to move forward.

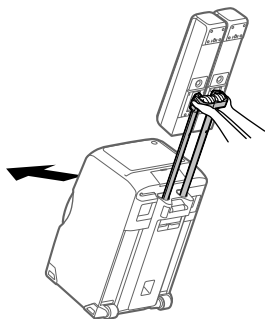

Before carrying the subwoofer, disconnect the AC power cord (mains lead). When carrying the subwoofer with the speaker units installed (Line array style), bundle the speaker cords to prevent them from getting caught in the caster wheels of the subwoofer, or yourself from stepping on the cords.

Notes

- The caster wheels can be used only on flat surfaces. Lift the subwoofer by two people on uneven surfaces. Correct hand placement while carrying the subwoofer is very important to avoid personal injury and/or property damage.

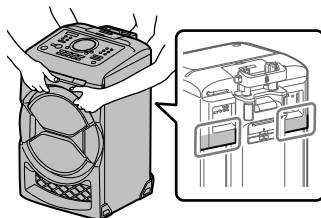

- Exercise extreme caution when carrying the subwoofer on a slope.
- Do not lift the subwoofer by the pull drive handle on the rod.
- Do not carry the subwoofer with a person, luggage, etc. on it.
- Do not let children or infants be near when carrying the system.

Changing the color system

(Except for Latin American, European, and Russian models)

Set the color system to PAL or NTSC depending on the color system of your TV.

Each time you perform the procedure below, the color system changes as follows:
NTSC ↔ PAL

Use the keys on the touch panel of the subwoofer to perform this operation.

- Press **⏻** to turn on the system.
- Touch **FUNCTION** repeatedly to select "DVD/CD."

3 Touch and hold DJ and TUNING + for about 2 seconds.

"NTSC" or "PAL" appears on the display.

Performing the quick setup

Before using the system, you can make the minimum basic adjustments in the quick setup.

1 Turn on your TV and select the video input.


2 Press to turn on the system.

3 Press FUNCTION +/- repeatedly to select "DVD/CD."

The guide message [Press ENTER to run QUICK SETUP.] appears at the bottom of the TV screen.

4 Press without loading a disc or connecting a USB device.

[LANGUAGE SETUP] appears on the TV screen. Displayed items may vary depending on country or region.

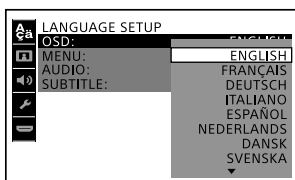

5 Press repeatedly to select a language, then press .

[VIDEO SETUP] appears on the TV screen.

6 Press repeatedly to select the setting that matches your TV type, then press .

After [QUICK SETUP is complete.] appears on the TV screen, the system is ready for playback.

To change the setting manually
See "Using the Setup Menu" (page 45).

To quit the quick setup
Press DVD SETUP.

Note

The guide message appears when you turn on the system for the first time or after performing [RESET]. (See "Resetting the system" (page 91).)

Changing the display mode

Press DISPLAY repeatedly while the system is turned off.

Each time you press the button, the display mode changes as follows.

Demonstration

Scrolls messages about the main features of this system with the illumination turned on.

To turn off the illumination, press PARTY LIGHT.

No display (Power Saving Mode)

Turns off the display to conserve power.

Disc/USB Playback

Before using the USB device

For compatible USB devices, see "Websites for compatible devices" (page 11).

(You can use your Apple devices with this system via BLUETOOTH connection only.)

Basic playback

DVD-V VIDEO CD CD DATA CD DATA DVD USB

- 1 Press **FUNCTION +/-** repeatedly to select "**DVD/CD**" or "**USB**."

Alternatively, touch **PLAYBACK**, then touch **DVD/CD** or **USB** on the subwoofer.

- 2 Prepare the playback source.

For DVD/CD function:

Touch **▲** on the subwoofer to open the disc tray and load a disc with the label facing up on the disc tray.




When you play back an 8 cm disc such as a CD single, place it on the inner circle of the tray.

Touch **▲** on the subwoofer again to close the disc tray.

Do not forcibly push the disc tray to close it as this may cause a malfunction.

For USB function:

Open the **USB REC/PLAY** cover, then connect a USB device to the **USB** port.

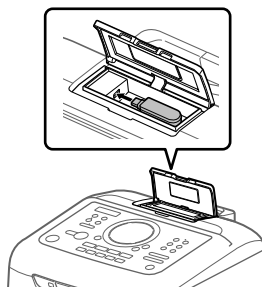

Note

You can use a USB adaptor (not supplied) to connect the USB device to the subwoofer if the USB device cannot be plugged into the **USB** port.

- 3 **(DATA CD DATA DVD USB only)**
Press **MEDIA MODE** repeatedly to select the media type ([**MUSIC**]/[**VIDEO**]) you want.
- 4 Press **▶** to start playback.

Other operations

To	Do this
Stop playback	Press ■.
Pause playback	Press ■■.
Resume playback or return to normal playback	Press ►.
Cancel the resume point	Press ■ twice.
Select a track, file, chapter or scene	Press ◀◀ or ▶▶ during playback. Or, hold down SHIFT, press the numeric buttons, then press [+].* (Operation might be prohibited by disc or USB device.)


* This operation is not available for audio file playback of the USB device.

To use the Gesture Control during playback

See page 67.

To play from a specific video file on the disc or USB device

- 1 Press MEDIA MODE repeatedly to select [VIDEO].
- 2 Press SEARCH to display the folder list.

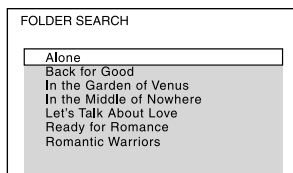

- 3 Press ▲/▼ repeatedly to select the folder you want.
- 4 Press [+]. to display the file list.



- 5 Press ▲/▼ repeatedly to select the file you want, then press [+].

Other playback operations


DVD-V VIDEO CD C D DATA CD DATA DVD USB

Depending on the type of disc or file, the function may not work.


To	Do this
View DVD menu	Press DVD/TUNER MENU.
View folder list or file list	Press SEARCH. Press SEARCH again to turn off the folder list or file list.
Return to folder list when in file list	Press RETURN.
Find a point in an audio file of USB device	Hold down ◀◀ or ▶▶ during playback.
Locate a point quickly in fast forward or fast reverse (Lock Search)	Press ◀◀ or ▶▶ during playback. Each time you press ◀◀ or ▶▶, the playback speed changes.
Watch frame by frame (Slow-motion Play)	Press II, then press ◀◀ or ▶▶. Each time you press ◀◀ or ▶▶, the playback speed changes.

Searching a specific track

C D


Hold down SHIFT, press the numeric buttons to select the track you want to play back, then press .

To search using the SEARCH button

- 1 Press SEARCH to display the track list.
- 2 Press ▲/▼ repeatedly to select the track you want to play back, then press .

Searching a specific title/ chapter/scene/track/index

DVD-V VIDEO CD

- 1 Press SEARCH repeatedly during playback to select the search mode.
- 2 Hold down SHIFT, press the numeric buttons to enter the title, chapter, scene, track, or index number you want, then press . Playback starts.

Notes

- For VIDEO CD with PBC playback, press SEARCH to search the scene.
- For VIDEO CD without PBC playback, press SEARCH to search the track and index.

To search for a particular point using the time code

DVD-V

- 1 Press SEARCH repeatedly during playback to select the time search mode.

- 2 Hold down SHIFT, press the numeric buttons to enter the time code, then press **[+]**.

Example: To find a scene at 2 hours, 10 minutes, and 20 seconds after the beginning, hold down SHIFT, then press 2, 1, 0, 2, 0 ([2:10:20]).

If you make a mistake, press CLEAR to cancel the number.

To search using the DVD menu

DVD-V

- 1 Press DVD/TUNER MENU.
- 2 Press **↕/↗/↖/↘**, or hold down SHIFT and press the numeric buttons, to select the title or item you want to play back, then press **[+]**.

Changing the camera angles

DVD-V

Press **ANGLE** repeatedly during playback to select the camera angle you want.

Selecting the subtitle setting

DVD-V

Press **SUBTITLE** repeatedly during playback to select the subtitle language you want or turn off the subtitle.

Changing the language/sound

DVD-V

VIDEO CD

C D

DATA CD

DATA DVD

Press **AUDIO** repeatedly during playback to select the audio format or mode you want.

DVD VIDEO

You can select audio format or language when the source contains multiple audio formats or multilingual audio.

When 4 digits are displayed, they indicate a language code. See "Language code list" (page 100) to confirm which language the code represents. When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats.

VIDEO CD/AUDIO CD/DATA CD/DATA DVD (MP3 file)

You can change the sound output.

- **[STEREO]**: The standard stereo sound.
- **[1/L]/[2/R]**: The monaural sound of the left or right channel.

SUPER VIDEO CD

- **[1:STEREO]**: The stereo sound of audio track 1.
- **[1:1/L]/[1:2/R]**: The monaural sound of the left or right channel of audio track 1.
- **[2:STEREO]**: The stereo sound of audio track 2.
- **[2:1/L]/[2:2/R]**: The monaural sound of the left or right channel of audio track 2.

Playing a VIDEO CD with PBC functions

VIDEO CD

You can use the PBC (Playback Control) menu to enjoy the interactive features of VIDEO CD (VIDEO CD Version 2.0 and Super VCD).

1 Press **▶** to play a VIDEO CD with PBC functions.

The PBC menu appears on the TV screen.

2 Hold down **SHIFT**, press the numeric buttons to select the item number you want, then press **+**.

3 Continue playback according to the instructions on the menu.

Note

PBC playback is canceled when Repeat Play is activated.

To cancel PBC playback

1 Press **◀◀** or **▶▶**, or hold down **SHIFT** and press the numeric buttons, to select a track when playback is stopped.

2 Press **▶** or **+**.

Playback starts from the selected track.

To return to PBC playback

Press **■** twice, then press **▶**.

Multi-disc resume play

DVD-V VIDEO CD

This system can store playback resume points for up to 6 discs and resumes playback when you insert the same disc again. If you store a playback resume point for the 7th disc, the resume point for the first disc will be deleted.

To activate this function, set [MULTI-DISC RESUME] in [SYSTEM SETUP] to [ON] (page 48).

Note

To play from the beginning of the disc, press **■** twice, then press **▶**.

Using play mode

Playing in sequential order (Normal Play)

C D **DATA CD** **DATA DVD** **USB**

When playback is stopped, press **PLAY MODE** repeatedly.

■ When playing a disc

- [DISC]: plays the disc.
- [FOLDER]*: plays all compatible files in the specified folder on the disc.

* Cannot be selected for AUDIO CD.

■ When playing a USB device

- [ONE USB DEVICE]: plays the USB device.
- [FOLDER]: plays all compatible files in the specified folder on the USB device.

Notes

- "FLDR" and "SHUF" light off on the display when Normal Play is set to [DISC] or [ONE USB DEVICE].
- "FLDR" lights up on the display when Normal Play is set to [FOLDER].
- During audio file playback of USB device, select the play mode you want by viewing the indicators on the display.

Playing in random order (Shuffle Play)

C D **DATA CD** **DATA DVD** **USB**

When playback is stopped, press **PLAY MODE** repeatedly.

■ When playing a disc

- [DISC (SHUFFLE)]: shuffles all audio files on the disc.

- [FOLDER (SHUFFLE)]*: shuffles all audio files in the specified folder on the disc.

* Cannot be selected for AUDIO CD.

■ When playing a USB device

- [ONE USB DEVICE (SHUFFLE)]: shuffles all audio files on the USB device.
- [FOLDER (SHUFFLE)]: shuffles all audio files in the specified folder on the USB device.

Notes

- Shuffle Play cannot be performed for video files.
- Shuffle Play is canceled when you:
 - open the disc tray.
 - perform Synchronized Transfer.
 - change MEDIA MODE.
- Shuffle Play may be canceled when you select a folder or a track to play back.

Playing repeatedly (Repeat Play)

DVD-V **VIDEO CD** **C D** **DATA CD** **DATA DVD** **USB**

Press REPEAT repeatedly.

Depending on the type of disc or file, some settings may not be available.

- [OFF]: does not play back repeatedly.
- [ALL]: repeats all tracks or files in the selected play mode.
- [DISC]: repeats all contents (DVD VIDEO and VIDEO CD only).
- [TITLE]: repeats the current title (DVD VIDEO only).
- [CHAPTER]: repeats the current chapter (DVD VIDEO only).
- [TRACK]: repeats the current track.
- [FILE]: repeats the current video file.

To cancel Repeat Play

Press REPEAT repeatedly to select [OFF].

Notes

- “⏮” lights up on the display when Repeat Play is set to [ALL] or [DISC].
- “⏮ 1” lights up on the display when Repeat Play is set to [TITLE], [CHAPTER], [TRACK] or [FILE].
- You cannot perform Repeat Play with VIDEO CD during PBC playback.
- Depending on the DVD VIDEO, you cannot perform Repeat Play.
- Repeat Play is canceled when you:
 - open the disc tray.
 - turn off the system (DVD VIDEO and VIDEO CD only).
 - change the function (DVD VIDEO and VIDEO CD only).
 - perform Synchronized Transfer.
 - change MEDIA MODE.
 - Play mode can only be changed in stop mode. Repeat mode can be changed during playback.

Restricting playback of the disc (Parental Control)

DVD-V

You can restrict playback of DVD VIDEOS according to a predetermined level. Scenes may be skipped or replaced with different scenes.

- 1 When playback is stopped, press DVD SETUP.**
- 2 Press \uparrow/\downarrow repeatedly to select [SYSTEM SETUP], then press $\boxed{+}$.**
- 3 Press \uparrow/\downarrow repeatedly to select [PARENTAL CONTROL], then press $\boxed{+}$.**
- 4 Enter or re-enter your 4-digit password using the numeric buttons, then press $\boxed{+}$.**
- 5 Press \uparrow/\downarrow repeatedly to select [STANDARD], then press $\boxed{+}$.**
- 6 Press \uparrow/\downarrow repeatedly to select a geographic area as the playback limitation level, then press $\boxed{+}$.**

The area is selected.

When you select [OTHERS→], enter the area code for the geographic area you want according to the “Parental Control area code list” (page 101) by holding down SHIFT, then press the numeric buttons.

7 Press \uparrow/\downarrow repeatedly to select [LEVEL], then press $\boxed{+}$.

8 Press \uparrow/\downarrow repeatedly to select the level you want, then press $\boxed{+}$.

The lower the value, the stricter the limitation.

To turn off the parental control function

Set [LEVEL] to [OFF] in step 8.

To play back a disc for which the parental control is set

1 Load the disc and press \blacktriangleright .

The display for entering your password appears on the TV screen.

2 Enter your 4-digit password using the numeric buttons, then press $\boxed{+}$.

The system starts playback.

If you forget your password


Remove the disc and repeat steps 1 to 3 of "Restricting playback of the disc (Parental Control)" (page 43). Enter a password "199703" using the numeric buttons, then press $\boxed{+}$. Follow the on-screen instructions and enter a new 4-digit password. Then, reload the disc and press \blacktriangleright . You need to enter your new password again.

Viewing information of a disc and USB device

DVD-V VIDEO CD C D DATA CD DATA DVD USB

Information on the TV screen

Hold down SHIFT, then press $\boxed{\text{DISPLAY}}$ repeatedly during playback.

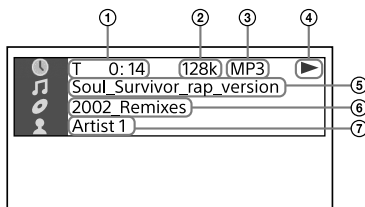

- ① Playback information**
Playing time and remaining time
- ② Bit rate**
- ③ File type**
- ④ Playback status**
- ⑤ Title*1/track/file name*2**
- ⑥ Album*1/folder name*2/chapter/index number**
- ⑦ Artist name*1*2**
Appears when playing an audio file.

*1 If an audio file has an ID3 tag, the system will display an album name/ title name/artist name from the ID3 tag information. The system can support ID3 ver 1.0/1.1/2.2/2.3.

*2 If the file or folder contains characters which cannot be displayed, those characters will be displayed as " _ "

Notes

- Depending on the source being played,
 - some information may not be displayed.
 - some characters cannot be displayed.
- Depending on the play mode, the information displayed may be different.
- When USB function is selected, you can view the information on the TV screen only if MEDIA MODE is set to [VIDEO].

Displaying the audio format information in DVD VIDEOS and video files

(DVD VIDEO and video files only)

Press AUDIO repeatedly during playback.

Information on the display

Press DISPLAY repeatedly when the system is on.

You can view the information as follows:

- playing time, remaining time of track, title, chapter
- scene number
- file name, folder name
- title, artist and album information

Notes

- The disc name or track name may not be displayed depending on the characters.
- Playing time of audio files and video files may not be displayed correctly.
- The elapsed playing time for an audio file encoded using a VBR (variable bit rate) is not displayed correctly.

Using the Setup Menu

You can make various adjustments to items such as picture and sound. Displayed items vary depending on the country or region.

Note

Playback settings stored in the disc take priority over the setup menu settings. Therefore, some of the setup menu settings may not be performed.

- When playback is stopped in DVD/CD function, press DVD SETUP.**
The setup menu appears on the TV screen.
- Press $\blacktriangle/\blacktriangleright$ repeatedly to select [LANGUAGE SETUP], [VIDEO SETUP], [AUDIO SETUP], [SYSTEM SETUP] or [HDMI SETUP], then press $\boxed{+}$.**
- Press $\blacktriangle/\blacktriangleright$ repeatedly to select the item you want, then press $\boxed{+}$.**
- Press $\blacktriangle/\blacktriangleright$ repeatedly to select the setting you want, then press $\boxed{+}$.**
The setting is selected and setup is completed.

To exit the menu

Press DVD SETUP.



Setting the language – [LANGUAGE SETUP]

[OSD]

Sets the language of the on-screen display.

[MENU]

DVD-V

Sets the language for the DVD menu.

[AUDIO]

DVD-V

Switches the language of the sound track.

When you select [ORIGINAL], the language given priority in the disc is selected.

[SUBTITLE]

DVD-V

Switches the language of the subtitle recorded in the DVD VIDEO. When you select [AUDIO FOLLOW], the language for the subtitles changes according to the language you selected for the sound track.

Note

If you select [OTHERS→] in [MENU], [AUDIO], and [SUBTITLE], enter a language code from the "Language code list" (page 100) using the numeric buttons.



Setting the TV screen – [VIDEO SETUP]

[TV TYPE]

DVD-V


[16:9]: Select this when you connect a wide-screen TV or a TV with a wide-mode function.



[4:3 LETTER BOX]: Select this when you connect a 4:3 screen TV that does not have a wide-mode function. This setting displays a wide picture with black bands on the top and bottom.



[4:3 PAN SCAN]: Select this when you connect a 4:3 screen TV that does not have a wide-mode function. This setting displays a full-height picture on the entire screen, with trimmed sides.

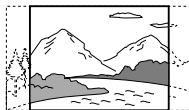

[4:3 OUTPUT]

DVD-V

[FULL]: Select this when you connect a TV with a wide mode function.

Displays a 4:3 screen picture in 16:9 aspect ratio even on a wide-screen TV.

[NORMAL]: Changes the picture size to fit the screen size with the picture's original aspect ratio. This setting displays black bands on the left and right sides if you display a 4:3 screen picture.



[COLOR SYSTEM(VIDEO CD)]

(Except for Latin American, European, and Russian models)

VIDEO CD

Sets the color system (PAL or NTSC).

[AUTO]: Outputs the video signal according to the color system of the disc. Select this setting if your TV uses a DUAL system.

[PAL]: Changes the video signal of an NTSC disc and output it in PAL system.

[NTSC]: Changes the video signal of a PAL disc and output it in NTSC system.

For details, see "Changing the color system" (page 35).

[BLACK LEVEL]

(Latin American model only)

Selects the black level (setup level) for the video signals output from the VIDEO OUT jack.

[ON]: Sets the black level of the output signal to the standard level.

[OFF]: Lowers the standard black level. Use this when the picture becomes too white.

[PAUSE MODE]

DVD-V

[AUTO]: The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.

[FRAME]: The picture, including subjects that do not move dynamically, is output in high resolution.



Setting the audio options - [AUDIO SETUP]

[TRACK SELECTION]

DVD-V

Gives priority to the sound track which contains the highest number of channels when you play back a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, or Dolby Digital) are recorded.

[OFF]: No priority given.

[AUTO]: Priority given.

[A/V SYNC]**2

DVD-V

VIDEO CD

DATA CD

DATA DVD

(Video files only)

Adjusts the delay between the picture and sound when the sound does not synchronize with the displayed picture.

[OFF]: Does not adjust.

[ON]: Adjusts the delay between picture and sound.

*1 This function may not take effect depending on the playing content.

*2 To obtain effects of this function when connecting the TV and subwoofer with the HDMI cable, press DVD SETUP, then set [HDMI SETUP] - [AUDIO (HDMI)] to [PCM] (page 49).

[DOWNMIX]*

DVD-V

Selects the audio output signal for playing a multi-channel audio.

[NORMAL]: Outputs multi-channel audio into a 2-channel stereo signal.

[DOLBY SURROUND]: Outputs multi-channel audio into a 2-channel surround signal.

* This function is effective only for the output from the HDMI OUT (TV) jack. Press DVD SETUP, then set [HDMI SETUP] – [AUDIO (HDMI)] to [PCM] (page 49).



Setting the system – [SYSTEM SETUP]

[SCREEN SAVER]

The screen saver will help prevent your display device from becoming damaged (ghosting). Press \triangleleft +/- to exit the screen saver.

[ON]: The screen saver image appears if you do not operate the system for about 15 minutes.

[OFF]: Turns off the function. The screen saver image does not appear.

[BACKGROUND]

Selects the background color or picture to be displayed on the TV screen.

[JACKET PICTURE]: The jacket picture (still picture) recorded on the disc appears in the background.

[GRAPHICS]: A preset picture stored in the system appears in the background.

[BLUE]: The background color is blue.

[BLACK]: The background color is black.

[PARENTAL CONTROL]

Sets the playback restrictions. For details, see “Restricting playback of the disc (Parental Control)” (page 43).

[MULTI-DISC RESUME]

DVD-V VIDEO CD

[ON]: Stores the resume playback point in the memory for up to 6 discs.

[OFF]: Playback starts at the resume playback point only for the current disc in the system.

[RESET]

Returns the setup menu settings to the default settings. For details, see "Returning the setup menu settings to the default" (page 91).



Setting the HDMI options – [HDMI SETUP]

[HDMI RESOLUTION]

Selects the TV output resolution when the TV is connected via HDMI cable.

[AUTO(1920×1080p)]: Outputs video signals according to the resolution of the TV.

[1920×1080i]/[1280×720p]/

[720×480p]^{*1}/[720×480p/576p]^{*2}: Outputs video signals according to the selected resolution setting.

^{*1} For Latin American models only.

^{*2} For other models.

[YCbCr/RGB(HDMI)]

[YCbCr]: Outputs YCbCr video signals.

[RGB]: Outputs RGB video signals.

[AUDIO(HDMI)]

[AUTO]: Outputs audio signals in original format from HDMI OUT (TV) jack.

[PCM]: Outputs 2-channel Linear PCM signals from HDMI OUT (TV) jack.

[CONTROL FOR HDMI]

[ON]: The Control for HDMI function is enabled. Depending on your TV, you can control the system from a TV connected with an HDMI cable, and vice versa.

[OFF]: Off.

[AUDIO RETURN CHANNEL]

Set this function when the system is connected to a TV's HDMI IN jack that is compatible with Audio Return Channel. This function is available when you set [CONTROL FOR HDMI] to [ON].

[ON]: You can listen to TV sound from the speakers of the system.

[OFF]: Off.

[STANDBY LINKED TO TV]

This function is available when you set [CONTROL FOR HDMI] to [ON].

[AUTO]: If the input of the system is "TV," the system turns off when you turn off the TV.

[ON]: The system turns off when you turn off the TV regardless of the input.

[OFF]: The system does not turn off when you turn off the TV.


USB Transfer

Before using the USB device

For compatible USB devices, see “Websites for compatible devices” (page 11).

(You can use your Apple devices with this system via BLUETOOTH connection only.)

Transferring music

You can transfer music from a disc (AUDIO CD or MP3 disc only) to a USB device connected to the  USB port.

The audio format of files transferred by this system is MP3.

Notes

- Do not remove the USB device during transfer or erase operations. Doing so may corrupt the data on the USB device or damage the USB device itself.
- MP3 files are transferred with the same bit rate as the original files.
- When transferring from AUDIO CD, you may select the bit rate before transferring.
- USB transfer and erase operations are disabled while the disc tray is open.

Note on copyright-protected content

The transferred music is limited to private use only. Use of the music beyond this limit requires permission of the copyright holders.

To select the bit rate

You can select a higher bit rate to transfer music with better quality.

1 Press **OPTIONS**.


2 Press / repeatedly to select “BIT RATE,” then press .

3 Press / repeatedly to select the bit rate you want, then press .

- 128 KBPS: encoded MP3 files have smaller file size and lower audio quality.
- 256 KBPS: encoded MP3 files have bigger file size but higher audio quality.


To exit the options menu, press **OPTIONS**.

Transferring music from a disc


You can transfer music to a USB device connected to a  USB port as follows:

- **Synchronized Transfer:** Transfers all MP3 files on a disc to a USB device.
- **REC1 Transfer:** Transfers a single track or MP3 file during playback.

1 Connect the transfer destination USB device to the USB port.

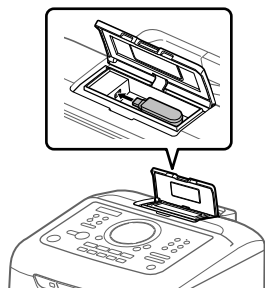


Note

You can use a USB adaptor (not supplied) to connect the USB device to the subwoofer if the USB device cannot be plugged into the  USB port.

2 Press FUNCTION +/- repeatedly to select "DVD/CD," then load a disc.

3 Prepare the sound source.

Synchronized Transfer:

If the system starts playback automatically, press  twice to stop the playback fully.

When playback is stopped, press PLAY MODE repeatedly to select the play mode you want.

Note

If you start transferring in Shuffle Play or Repeat Play, the selected play mode changes to Normal Play automatically.

REC1 Transfer:

Select the track or MP3 file you want to transfer, then start playback.

4 Press REC TO USB.

"PUSH ENTER" appears on the display.

5 Press .

The transfer starts, then "DO NOT REMOVE" appears on the display. Do not remove the USB device until the transfer is complete.

When the transfer is complete, the system performs as follows:

Synchronized Transfer:

When the transfer is complete, the disc stops automatically.

REC1 Transfer:

The transfer is completed automatically, but the disc continues to play the next track or file.

To stop transfer

Press ■.

Notes on transfer

- While transferring, no sound is output.
- CD-TEXT information is not transferred to the created MP3 files.
- The transfer stops automatically if:
 - the USB device runs out of space during transfer.
 - the number of audio files or folders on the USB device reaches the limit that the system can recognize.
- If a folder or file that you are trying to transfer already exists on the USB device with the same name, a sequential number is added after the name without overwriting the original folder or file.
- You cannot perform the following operations during transfer:
 - Eject the disc.
 - Select another track or file.
 - Pause playback or find a point in the track or file.
 - Change the function or tuner band.
- When transferring music to a WALKMAN® using "Media Manager for WALKMAN," be sure to transfer in MP3 format.
- When connecting a WALKMAN® to the system, be sure to connect after the display "Creating Library" or "Creating Database" on the WALKMAN® has disappeared.

Folder and file generation rules

Maximum number of audio files that can be generated

- 298 folders
- 650 files in a folder
- 650 files in REC1-CD or REC1-MP3 folder.

These numbers may vary depending on the file or folder configuration.

When transferring to a USB device, a "MUSIC" folder is created directly below "ROOT." Folders and files are generated within this "MUSIC" folder according to the transfer method and source as follows:

Synchronized Transfer

■ When transferring CD-DA tracks from an AUDIO CD

Folder name: "CDDA0001"*

File name: "TRACK001"*

■ When transferring MP3 files from a disc

Folder name: Same as the source

File name: Same as the source

REC1 Transfer

■ When transferring a CD-DA track from an AUDIO CD

Folder name: "REC1-CD"

File name: "TRACK001"*

■ When transferring an MP3 file from a disc

Folder name: "REC1-MP3"

File name: Same as the source

Erasing audio files or folders on the USB device

1 Press FUNCTION +/- repeatedly to select "USB."

Alternatively, touch GESTURE ON/OFF to activate the Gesture Control, touch PLAYBACK, then touch USB on the subwoofer.

2 Press MEDIA MODE repeatedly to select [MUSIC].

3 When playback is stopped, press OPTIONS.

4 Press ▲/▼ repeatedly to select "ERASE," then press .

The folder list is displayed on the TV screen.

5 Press ▲/▼ repeatedly to select a folder, then press .

6 Press ▲/▼ repeatedly to select an audio file you want to erase, then press .

If you want to delete all the audio files in the folder, select [ALL TRACKS] on the list.

"FOLDER ERASE" or "TRACK ERASE" and "PUSH ENTER" appear on the display.

To cancel erase operations, press .

7 Press .

"COMPLETE" appears on the display.

To exit the options menu, press OPTIONS.

Notes

- You cannot erase audio files or folders when Shuffle Play or Program Play mode has been selected. Set the play mode to Normal Play before erasing.
- You cannot erase non-MP3/WMA/AAC/WAV format file.
- A folder that contains non-MP3/WMA/AAC/WAV format audio files or sub folders cannot be erased.
- Erase operation is prohibited when the disc tray is opened.

Tuner

Listening to the radio

- 1 Press **FUNCTION +/-** repeatedly to select **"TUNER FM."**

Alternatively, touch **GESTURE ON/OFF** to activate the Gesture Control, touch **PLAYBACK**, then touch **FM** on the subwoofer.

- 2 **Tune to a station.**

For automatic scanning:

Hold down **TUNING+/-** until the frequency begins to change on the display.

Scanning stops automatically when a station is tuned in. **"ST"** (for FM stereo programs only) lights up on the display.

If scanning does not stop, press **■** to stop scanning. Then, perform manual tuning (below).

For manual tuning:

Press **TUNING+/-** repeatedly to tune to the station you want.

Note

When you tune to an FM station that provides RDS services, information such as the service name or station name is provided by broadcasts. You can check the RDS information by pressing **DISPLAY** repeatedly.

Hint

To reduce static noise on a weak FM stereo station, press **FM MODE** repeatedly until **"ST"** disappears from the display. You will lose the stereo effect, but reception will improve.

Presetting radio stations

You can store up to 20 FM stations as your favorite stations.

- 1 **Tune to the station you want.**

- 2 **Press DVD/TUNER MENU.**

- 3 **Press \uparrow/\downarrow repeatedly to select the preset number you want, then press $\boxed{+}$.**

"COMPLETE" appears on the display and the station is stored.

If another station is already assigned to the selected preset number, that station is replaced by the new one.

To listen to the preset station

Press **PRESET+/-** repeatedly to select the preset number you want. You can also hold down **SHIFT**, press the numeric buttons, then press $\boxed{+}$ to select a preset station.

BLUETOOTH

About the BLUETOOTH wireless technology

BLUETOOTH wireless technology is a short-range wireless technology that enables wireless data communication between digital devices. BLUETOOTH wireless technology operates within a range of about 10 meters.

Supported BLUETOOTH version, profiles and codecs

For details, see “BLUETOOTH section” (page 97).

Compatible BLUETOOTH devices

For details, see “Websites for compatible devices” (page 11).

About the BLUETOOTH indicator

The BLUETOOTH indicator on the subwoofer lights up or flashes in blue to show the BLUETOOTH status.

System status	Indicator status
BLUETOOTH standby	Flashes slowly
BLUETOOTH pairing	Flashes quickly
BLUETOOTH connection is established	Lights up

Pairing this system with a BLUETOOTH device

Pairing is an operation where BLUETOOTH devices register with each other beforehand. Once a pairing operation is performed, it does not need to be performed again.

If your device is an NFC-compatible smartphone, the manual pairing procedure is not necessary. (See “One Touch BLUETOOTH Connection by NFC” (page 57).)

1 Place the BLUETOOTH device within 1 meter from the system.

2 Touch BLUETOOTH on the subwoofer to select the BLUETOOTH function.

“BT AUDIO” appears on the display.

Hints

- When there is no pairing information on the system (for example, when you use the BLUETOOTH function for the first time after purchase), “PAIRING” flashes on the display and the system enters the pairing mode. Proceed to step 4.
- If the system is connected to a BLUETOOTH device, press BLUETOOTH on the subwoofer to disconnect the BLUETOOTH device.

3 Touch and hold PAIRING on the subwoofer for 2 seconds or more.

“PAIRING” flashes on the display.

4 Perform the pairing procedure on the BLUETOOTH device.

For details, refer to the operating instructions of your BLUETOOTH device.

5 Select "MHC-GT7DW" on the display of the BLUETOOTH device.

Perform this step within 5 minutes, otherwise pairing will be canceled. In this case, repeat from step 3.

Note

If passkey is required on the BLUETOOTH device, enter "0000." "Passkey" may be called "Passcode," "PIN code," "PIN number," or "Password."

6 Perform the BLUETOOTH connection on the BLUETOOTH device.

When pairing is completed and the BLUETOOTH connection is established, BLUETOOTH device name appears on the display.

Depending on the BLUETOOTH device, connection may start automatically after pairing is completed.

You can check the BLUETOOTH device address by pressing DISPLAY repeatedly.

Notes

- You can pair up to 9 BLUETOOTH devices. If the 10th BLUETOOTH device is paired, the oldest paired device will be deleted.
- If you want to pair with another BLUETOOTH device, repeat steps 1 to 6.

To cancel the pairing operation

Touch and hold PAIRING on the subwoofer for 2 seconds or more until "BT AUDIO" appears on the display.

Listening to music on a BLUETOOTH device

You can operate a BLUETOOTH device by connecting the system and the BLUETOOTH device using AVRCP.

Check the following before playing music:

- The BLUETOOTH function of the BLUETOOTH device is turned on.
- Pairing has been completed (page 55).

Once the system and the BLUETOOTH device are connected, you can control playback by pressing ►, II, ■ and ◀◀/▶▶.

Use the keys on the touch panel of the subwoofer to perform this operation.

1 Touch BLUETOOTH on the subwoofer to select the BLUETOOTH function.

"BT AUDIO" appears on the display.

2 Perform a BLUETOOTH connection with the BLUETOOTH device.

Touch BLUETOOTH on the subwoofer to connect to the last connected BLUETOOTH device.

Perform the BLUETOOTH connection from the BLUETOOTH device if the device is not connected.

Once the connection is established, the BLUETOOTH device name appears on the display.

3 Touch ► to start playback.

Depending on the BLUETOOTH device,

- you may need to touch ► twice.
- you may need to start playing an audio source on the BLUETOOTH device.

4 Adjust the volume.

Adjust the volume of the BLUETOOTH device first. If the volume level is still too low, adjust the volume level on the system.

Notes

- When the system is not connected to any BLUETOOTH device, the system will connect to the last connected BLUETOOTH device automatically when you touch BLUETOOTH on the subwoofer or ►.
- If you try to connect another BLUETOOTH device to the system, the current connected BLUETOOTH device will be disconnected.

To use the Gesture Control during playback

See page 67.

To terminate the BLUETOOTH connection

Touch BLUETOOTH on the subwoofer. "BT AUDIO" appears on the display.

Depending on the BLUETOOTH device, the BLUETOOTH connection may be terminated automatically when you stop playback.

One Touch BLUETOOTH Connection by NFC

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as smartphones and IC tags.

When you touch the system with an NFC-compatible smartphone, the system automatically:

- turns on in the BLUETOOTH function.
- completes the pairing and BLUETOOTH connection.


Compatible smartphones

Smartphones with a built-in NFC function (OS: Android 2.3.3 or later, excluding Android 3.x)

Notes

- The system can only recognize and connect to one NFC-compatible smartphone at a time. If you try to connect another NFC-compatible smartphone to the system, the currently connected NFC-compatible smartphone will be disconnected.
- Depending on your NFC-compatible smartphone, you may need to perform the following steps on your NFC-compatible smartphone in advance.
 - Turn on the NFC function. For details, refer to the operating instructions of the NFC-compatible smartphone.
 - If your NFC-compatible smartphone has an OS version that is older than Android 4.1.x, download and start the "NFC Easy Connect" application. "NFC Easy Connect" is a free application for Android smartphones that can be obtained from Google Play. (The application may not be available in some countries/regions.)

- 1 **Touch the smartphone to the N-Mark on the subwoofer until the smartphone vibrates.**

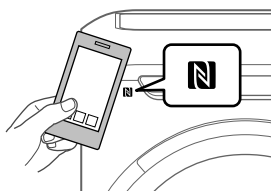

Complete the connection by following the instructions displayed on the smartphone.

When the BLUETOOTH connection is established, the BLUETOOTH device name appears on the display.

- 2 **Start playback of an audio source on the smartphone.**

For details, refer to the operating instructions of your BLUETOOTH device.

Hint

If pairing and the BLUETOOTH connection fail, do the following.

- Remove the case from the smartphone if using a commercially available smartphone case.
- Touch the smartphone to the N-Mark on the subwoofer again.
- Relaunch the "NFC Easy Connect" application.

To terminate the BLUETOOTH connection

Touch the smartphone to the N-Mark on the subwoofer again.

Setting the BLUETOOTH audio codecs

You can select a BLUETOOTH audio codec from AAC, LDAC or SBC. AAC can be selected only when the BLUETOOTH device supports AAC.

- 1 **Press OPTIONS.**

- 2 **Press \uparrow/\downarrow repeatedly to select "BT CODEC," then press $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$.**

- 3 **Press \uparrow/\downarrow repeatedly to select the setting, then press $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$.**

- AUTO: Enable reception in AAC or LDAC codec format.
- SBC: Receive in SBC codec format.

To exit the options menu, press OPTIONS.

Notes

- You can enjoy high quality sound if AAC or LDAC is selected. If you cannot listen to AAC or LDAC sound from your device or the sound is interrupted, select "SBC."
- If you change this setting while the system is connected to a BLUETOOTH device, the BLUETOOTH device will be disconnected. To connect to the BLUETOOTH device, perform the BLUETOOTH connection again.

Hint

LDAC is an audio coding technology developed by Sony that enables the transmission of High-Resolution (Hi-Res) Audio content, even over a BLUETOOTH connection. Unlike other BLUETOOTH compatible coding technologies such as SBC, it operates without any downconversion of the Hi-Res Audio content^{*1}, and allows approximately three times more data^{*2} than those other technologies to be transmitted over a BLUETOOTH wireless network with unprecedented sound quality, by means of efficient coding and optimized packetization.

^{*1} Excluding DSD format contents.

^{*2} In comparison with SBC (Sub band Coding) when the bitrate of 990 kbps (96/48 kHz) or 909 kbps (88.2/44.1 kHz) is selected.

Network

Selecting the network connection method

If you connect this system to a network, you can enjoy this system in various ways. Depending on your network environment, setup methods are different. Select the appropriate connecting method from the following.

Notes

- Connecting to a Wi-Fi network and a wired network simultaneously is not possible. When you connect to a Wi-Fi network, be sure to disconnect the LAN cable from the subwoofer.
- Depending on the function, the system software may need to be updated.

Hint

For setting the fixed IP address, use the screen in step 6 of "Connecting with a computer" (page 61).

Method when using a smartphone/iPhone

Installation of the "SongPal" application to your smartphone/iPhone is required.

Before making the connection, be sure to turn on the BLUETOOTH feature on your smartphone or iPhone, then operate the "SongPal" application to connect your smartphone or iPhone to this system via BLUETOOTH.

For details, refer to the Wi-Fi Startup Guide (separate document).

Method when using a wireless router with a WPS (AOSS) button

Press and hold the NETWORK/

WPS key, then press the Wi-Fi Protected Setup™ (WPS) button of the wireless router. For details, refer to the Wi-Fi Startup Guide (separate document).

Method when using computer

See "Connecting with a computer" (page 61).

Method when using wired network

Refer to Help Guide for details.

http://rd1.sony.net/help/has/mhc-gt7dw/h_zz/



Connecting with a computer

If a WPS (AOSS) button is not equipped on your wireless router, configure Wi-Fi settings on the computer by connecting this system with a LAN cable (not supplied).

Hint

When setting up a Wi-Fi network, the SSID (Wi-Fi Network Name) and security key (WEP or WPA key) may be required. The security key (or network key) uses encryption to limit the devices with which communication can occur. It is used to provide higher security for devices communicating via a wireless router/access point.


1 Make a note of the SSID and password of your router.

For details, refer to the operating instructions of your router.


SSID (Wi-Fi Network Name):

Password (Security Key):

2 Connect the subwoofer to the computer with a LAN cable (not supplied) directly.

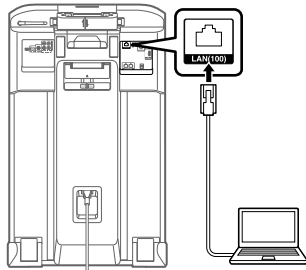

3 Press to turn on the system.

Wait until  lights up on the display. It takes about 2 minutes (in some cases, 4 or 5 minutes).

4 Access the [Sony Network Device Settings] screen.

Start the browser and input the following URL into the browser's address bar.

<http://169.254.1.1>

<http://169.254.1.1>




The above URL is only for when the PC and subwoofer are connected with a LAN cable.

5 Select [Network Settings] from the menu.



Network Settings

6 Select the SSID of your wireless router, then enter the password.

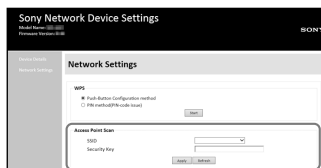



SSID

See the password noted in step 1.

7 Select [Apply].

8 When prompted, unplug the LAN cable from the subwoofer.

When the LAN cable is unplugged from the subwoofer,  on the display turns off. When the Wi-Fi connection is established,  lights up on the display.


It may take more than 2 minutes to light up.

For information on how to listen to music with this system, refer to the Wi-Fi Startup Guide (separate document).

Note

This procedure needs to be completed within 10 minutes. If uncompleted, reset the system (page 91).

Listening to the same music from the multiple speakers (SongPal Link function)

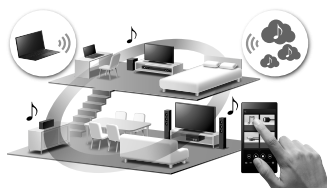

You can enjoy your favorite music stored in your PCs, mobile phones, and music from streaming services, with ultimate sound quality in any room via Wi-Fi.

- 1 Install the “SongPal” application on your smartphone/iPhone.
- 2 Connect the system and smartphone/iPhone to your Wi-Fi network.
Connect the system and smartphone/iPhone to the same SSID (network) of your router.
- 3 When connecting multiple devices, connect the multi-room compatible devices to your Wi-Fi network.

Refer to Help Guide for detailed operation.
http://rd1.sony.net/help/has/mhc-gt7dw/h_zz/



To enjoy the Party Chain function via Wi-Fi

If you connect the multi-room compatible speakers to your Wi-Fi network and set them in the same room, you can enjoy high pressure sound like the Party Chain function via Wi-Fi.

Listening to an Internet music service (Google Cast)

The following instructions explain how to use a Google Cast-enabled music app.

1 Install the "SongPal" application on your smartphone/iPhone.


2 Connect the system and smartphone/iPhone to your Wi-Fi network.

Connect the system and smartphone/iPhone to the same SSID (network) of your router.

3 Launch "SongPal," and download a Google Cast-enabled music app.

- ① Launch "SongPal," then tap [MHC-GT7DW] → [Settings] → [Google Cast] → [Learn how to cast].
- ② See the instructions, then find and install a Google Cast-enabled app on your smartphone/iPhone.

4 Launch the Google Cast-enabled app, then tap the Cast button (📶) to select [MHC-GT7DW].

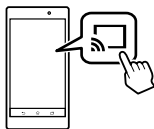

5 Select music to listen to on your Google Cast-enabled app.

The music is played on the system.

Refer to Help Guide for detailed operation.

http://rd1.sony.net/help/has/mhc-gt7dw/h_zz/




Listening to an Internet music service (Spotify)

"Spotify" gives you instant access to millions of songs. The "Spotify Connect" feature lets you select music on the Spotify App and stream it on the system. To use "Spotify Connect" feature, you need a Premium account. For details, visit www.spotify.com/connect

1 Connect the system and smartphone/iPhone to your Wi-Fi network.

Connect the system and smartphone/iPhone to the same SSID (network) of your router.

- 2** Download the Spotify App to your smartphone/iPhone from Google Play or the App Store.
- 3** Launch the Spotify App and log in to a Spotify Premium account.
- 4** Select and start playing the music.
- 5** Tap the Connect icon (🔊) and select the system as the audio output device.

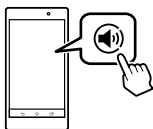**Note**

Depending on the country and region, music services and their periods of availability may differ.


Hint

When "Spotify Connect" is activated, the Connect icon (🔊) lights up.

Gesture Control

Enjoying the Gesture Control

You can control the operations for **PLAYBACK**, **DJ**, **SAMPLER** and **KARAOKE** mode by swiping your hand over the **GESTURE CONTROL** sensor on the subwoofer.

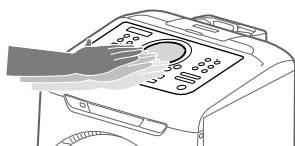

Note

Do not touch or make contact with the **GESTURE CONTROL** sensor when you perform the swiping motion.

Swipe your hand over the **GESTURE CONTROL** sensor as follows.

Swiping motion	Swipe in this direction
Right to left	←
Left to right	→
Bottom to top	↑
Top to bottom	↓
Clockwise	↻
Anticlockwise	↺

To activate the Gesture Control

Touch **GESTURE ON/OFF**, then touch the mode you want (**PLAYBACK**, **DJ**, **SAMPLER**, **KARAOKE**).

To deactivate the Gesture Control

Touch **GESTURE ON/OFF**.

Using the Gesture Control during playback

You can use the **Gesture Control** to control basic playback when playing music from a disc, USB device or **BLUETOOTH** device.

Use the keys and **GESTURE CONTROL** sensor on the touch panel of the subwoofer to perform this operation.

1 Touch **GESTURE ON/OFF**.

The **GESTURE CONTROL** sensor lights up.

2 Touch **PLAYBACK**.

The **PLAYBACK** mode is activated.

3 Touch **DVD/CD, USB, FM, AUDIO IN, or TV** to select the function you want.

4 Swipe your hand over the **GESTURE CONTROL** sensor.

To	Swipe in this direction
Go backward	←
Go forward	→
Play	↑
Stop	↓
Increase volume	↻
Reduce volume	↺

Creating a party atmosphere (DJ Effect)

Use the keys and GESTURE CONTROL sensor on the touch panel of the subwoofer to perform this operation.

1 Touch GESTURE ON/OFF.

The GESTURE CONTROL sensor lights up.

2 Touch DJ or SAMPLER.

The DJ or SAMPLER mode is activated.

3 Swipe your hand over the GESTURE CONTROL sensor.

For DJ mode:

To	Swipe in this direction
Select FLANGER*1	←
Select ISOLATOR*2	→
Select WAH*3	↑
Select PAN*4	↓
Increase the level of the selected effect	↶
Reduce the level of the selected effect	↷

*1 Creates a deep flanging effect that is similar to the roar of a jet plane.

*2 Isolates a specific frequency band by adjusting the other frequency bands. For example, when you want to focus on vocals.

*3 Creates a special effect of "Wah-wah" sound by moving the frequency of a filter up and down automatically.

*4 Creates a feeling that the sound is moving around the speakers between left and right channels.

For SAMPLER mode:

To	Swipe in this direction
Output "Come On!"	←
Output "Let's Go!"	→
Output Reggae Horn sound effect	↑
Output Phaser sound effect	↓
Output Scratch sound effect	↶
Output Audience sound effect	↷

To turn off the DJ Effect

Swipe your hand over the GESTURE CONTROL sensor in the same direction again.

Notes

- The DJ Effect is automatically turned off when you:
 - turn off the system
 - change the function
 - activate the Football mode
 - select "FIESTA"
 - press SOUND FIELD on the remote or touch SOUND FIELD on the subwoofer
 - change the mode to PLAYBACK/ SAMPLER/KARAOKE
- If you activate the DJ Effect during transferring, the sound effect will not be transferred onto the USB device.

Using the Gesture Control during Karaoke

You can adjust the key of the off-vocal sound source and the microphone volume by the gesture control.

1 Touch **GESTURE ON/OFF**.

The **GESTURE CONTROL** sensor lights up.

2 Touch **KARAOKE**.

The **KARAOKE** mode is activated.

3 Swipe your hand over the **GESTURE CONTROL** sensor. For **KARAOKE** mode:

To	Swipe in this direction
Change the key down (b)	←
Change the key up (#)	→
Increase the microphone volume	↑
Reduce the microphone volume	↓
Output the hand clapping sound effect	↺
Output the booing sound effect	↻

Locking the audio systems in a chain (Party Lock)

You can lock the systems in a chain, except the party host system, to prevent misoperation by accidental contact.

Touch and hold **GESTURE CONTROL** sensor on the subwoofer for more than 5 seconds.

"PARTY LOCK ON" appears on the display.

To turn off the Party Lock function, touch and hold **GESTURE CONTROL** sensor on the subwoofer for more than 5 seconds until "PARTY LOCK OFF" appears on the display.

Notes

- The party locked state is automatically released in 30 seconds.
- While in the party locked state, the touch panel indications of the subwoofer are turned off.

Sound Adjustment

Adjusting the sound

To	Do this
Reinforce bass sound and create more powerful sound (MEGA BASS).	Press MEGA BASS repeatedly to select "BASS ON."
Reproduce the acoustic effect of a party hall (Fiesta).	Touch FIESTA on the subwoofer, or set [FIESTA] in [Sound Field] to [On] on the "SongPal" application. The FIESTA indicator lights up.
Reproduce the acoustic effect of a concert hall (Digital Music Arena).	Press MUSIC ARENA repeatedly to select "MUSIC ARENA," or set [Digital Music Arena] in [Sound Field] to [On] on the "SongPal" application.
Select a preset sound effect (Preset sound effect).	Press SOUND FIELD repeatedly to select the sound effect you want.

Selecting the Virtual Football mode

You can experience a feeling of presence in the stadium when watching the football match broadcast.

Press SOUND FIELD repeatedly while watching a football match broadcast.

- ON NARRATION: You can enjoy an immersive feeling of being in a football stadium through enhanced stadium cheers.
- OFF NARRATION: You can enjoy a more immersive feeling of being in a football stadium by minimizing the volume level of narration in addition to the enhancement of cheers.



To cancel the Virtual Football mode

Press SOUND FIELD repeatedly to select "FLAT."

Notes



- We recommend you to select the football mode when watching a football match broadcast.
- If you hear unnatural sounds in the content when "OFF NARRATION" is selected, "ON NARRATION" is recommended.
- This feature does not support monaural sound.
- You can only select the Virtual Football mode during AUDIO IN and TV functions.

Adjusting the subwoofer level

- 1 Press **OPTIONS**.
 - 2 Press **↕/↕** repeatedly to select "S-WOOFER," then press .
 - 3 Press **↕/↕** repeatedly to select the subwoofer level, then press .
- To exit the options menu, press **OPTIONS**.

Creating your own sound effect

You can raise or lower the levels of specific frequency bands, then store the setting in the memory as "CUSTOM EQ."

- 1 Press **OPTIONS**.
 - 2 Press **↕/↕** repeatedly to select "CUSTOM EQ," then press .
 - 3 Press **↕/↕** repeatedly to adjust the equalizer level, then press .
 - 4 Repeat step 3 to adjust the level of other frequency bands and surround effect.
- To exit the options menu, press **OPTIONS**.

To select the custom equalizer setting

Press **MUSIC** repeatedly to select "CUSTOM EQ."

Other Operations

Using the Control for HDMI function

Connecting a TV compatible with the Control for HDMI function* by HDMI cable (High Speed HDMI Cable with Ethernet, not supplied) enables you to easily operate the device by a TV remote control.

The following functions can be used with the Control for HDMI function.

- System Power Off function
- System Audio Control function
- Audio Return Channel
- One-Touch Play function
- Remote Easy Control
- Language Follow

* Control for HDMI is a standard used by CEC (Consumer Electronics Control) for allowing HDMI (High-Definition Multimedia Interface) devices to control each other.

Note

These functions may work with devices other than those manufactured by Sony, but operation is not guaranteed.

Preparing to use the Control for HDMI function

Press DVD SETUP, then set [HDMI SETUP] – [CONTROL FOR HDMI] on the system to [ON] (page 49). The default setting is [ON].
Enable the Control for HDMI function settings for the TV connected to the system.

Hint

If you enable the Control for HDMI ("BRAVIA" sync) function when using a TV manufactured by Sony, the Control for HDMI function of the system is also enabled automatically. When settings are completed, "COMPLETE" appears on the display.

System Power Off function

When you turn off the TV, the system will turn off automatically.

Press DVD SETUP, then set [HDMI SETUP] – [STANDBY LINKED TO TV] on the system to [ON] or [AUTO] (page 49). The default setting is [AUTO].

Note

The connected device may not turn off depending on the status of the device.

System Audio Control function

If you turn on the system while you are watching the TV, the TV sound will be output from the system's speakers. The volume of the system can be adjusted using the TV's remote control.

If the TV sound was output from the system's speakers the previous time you watched the TV, the system will be turned on automatically when you turn on the TV again.

Operations can also be made by the TV's menu. For details, refer to the operating instructions of your TV.

Notes

- The system's volume level is displayed on the TV screen depending on the TV. It may differ from the volume level on the display panel.
- Depending on the settings of the TV, the System Audio Control function may not be available. For details, refer to the operating instructions of your TV.

Audio Return Channel

If the system is connected to a TV's HDMI IN jack compatible with Audio Return Channel, you can listen to TV sound from the system's speakers without connecting an audio cable (not supplied).

On the system, press DVD SETUP, then set [HDMI SETUP] – [AUDIO RETURN CHANNEL] to [ON] (page 49). The default setting is [ON].

Note

If the TV is not compatible with Audio Return Channel, an audio cable (not supplied) needs to be connected (page 34).

One-Touch Play function

When you play video content on disc or USB device on the system, the TV is turned on automatically. The TV's input is switched to the HDMI input, to which the system is connected.

Note

Depending on the TV, the beginning part of content being played may not play correctly.

Remote Easy Control

You can select the system by the SYNC MENU button on the TV remote control and operate the system.

This function can be used if the TV supports the link menu. For details, refer to the operating instructions of your TV.

Notes

- In the TV's link menu, the system is recognized by the TV as "Player".
- Some operations may not be available with some TVs.

Language Follow

When you change the language for the on-screen display of the TV, the system's on-screen display language is also changed.

Using the Party Chain function

You can connect multiple audio systems in a chain to create a more interesting party environment and to produce higher sound output. An activated system in the chain will be the “Party Host” and share the music. Other systems will become “Party Guests” and play the same music as that being played by the “Party Host.”


Setting up the Party Chain

Set up a Party Chain by connecting all the systems using audio cords (not supplied).

Before connecting cords, be sure to disconnect the AC power cord (mains lead).

A If all the systems are equipped with Party Chain function


Example: When connecting using this system as the first system

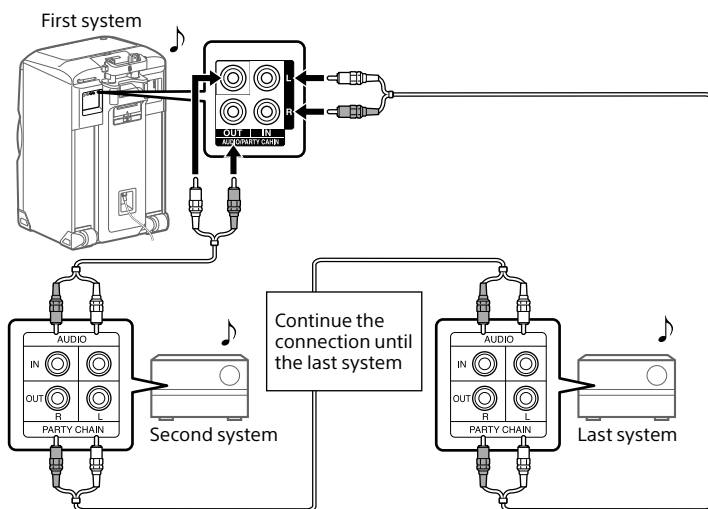

- The last system must be connected to the first system.
- Any system can become a Party Host.
- You can change the Party Host to another system in the chain. For details, see “To select a new Party Host (when all the systems are equipped with Party Chain function)” (page 74).

B If one of the systems is not equipped with Party Chain function

Example: When connecting using this system as the first system

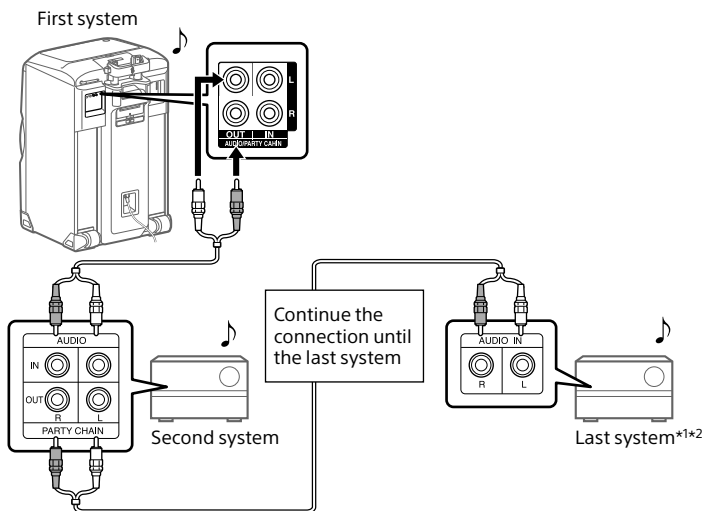

*1 Connect the system which is not equipped with Party Chain function at the last system, otherwise the chain will stop at that system. Be sure to select the Audio In function on the last system.

*2 If a system which is not equipped with the Party Chain function is the last in the chain, the sound playback of that system will be delayed.

- The last system is not connected to the first system.
- You must select the first system as Party Host so that all systems are playing the same music when Party Chain function is activated.

Enjoying the Party Chain

- 1 Plug in the AC power cord (mains lead) and turn on all the systems.**
- 2 Adjust the volume on each system.**
- 3 Activate the Party Chain function on the system to be used as the Party Host.**

Example: When using this system as the Party Host

Press FUNCTION +/- repeatedly to select the function you want (except when the Audio In function is used in connection **A** (page 72)). Start playing the music, then touch PARTY CHAIN on the subwoofer. "PARTY CHAIN" appears on the display. The Party Host starts the Party Chain, and other systems become Party Guests automatically. All systems play the same music as that being played by the Party Host.

Notes

- Depending on the total unit of systems you have connected, Party Guests may take some time to start playing the music.
- Changing the volume level and sound effect on the Party Host will not affect the output on the Party Guests.
- The Party Guests continue playing the music source from the Party Host even if you change the function on any of the Party Guests. However, you can adjust the volume and change the sound effect on any of the Party Guests.
- When you use the microphone on Party Host, the sound will not be output from Party Guests.
- When one of the systems in the chain is performing USB transfer, wait for the system to complete or stop the transfer before you activate the Party Chain function.
- For detailed operation on other systems, refer to the operating instructions of the systems.

To select a new Party Host (when all the systems are equipped with Party Chain function)

Repeat step 3 of "Enjoying the Party Chain" on the system to be used as a new Party Host. The current Party Host becomes Party Guest automatically. All systems play the same music as that being played by the new Party Host.

Notes

- You can select another system as the new Party Host only after the Party Chain function of all the systems in the Chain has been activated.
- If the selected system does not become a new Party Host after a few seconds, repeat step 3 under "Enjoying the Party Chain."

To deactivate the Party Chain

Touch PARTY CHAIN on the Party Host.

Note

If the Party Chain function is not deactivated after a few seconds, touch PARTY CHAIN on the Party Host again.

To enjoy the Party Chain function via Wi-Fi

If you connect the multi-room compatible speakers to your Wi-Fi network and set them in the same room, you can enjoy high pressure sound like the Party Chain function via Wi-Fi.

Singing along: Karaoke

Preparing for Karaoke

- 1 Touch **MIC LEVEL** – on the subwoofer repeatedly to reduce the microphone volume level.
- 2 Connect an optional microphone to MIC1 or MIC2 jack on the subwoofer.
Connect another optional microphone if you want to sing in duet.
- 3 Start playing the music and adjust the microphone volume. Touch **KARAOKE**, then touch **MIC ECHO** repeatedly to adjust the echo effect.
- 4 Start singing along with the music.

Notes

- Karaoke mode is turned on when the microphones are connected during DVD/CD or USB function.
- If howling occurs:
 - move the microphone away from the system.
 - change the direction of the microphone.
 - lower the microphone volume level.
 - press \triangleleft – to reduce the volume level or press **MIC ECHO** repeatedly to adjust the echo level.
- Microphone sound will not be transferred to the USB device during USB transfer.

Using Vocal Fader

You can reduce the sound of the vocal in stereo source.

Touch VOCAL FADER on the subwoofer repeatedly to select "ON V.FADER."

To cancel Vocal Fader effect, touch **VOCAL FADER** repeatedly to select "OFF."

Changing the key (Key Control)

Press **KEY CONTROL** b/# to suit your vocal range in Karaoke mode.

Selecting the scoring mode (Score Mode)

When Karaoke mode is turned on, you can use the scoring function. Your score is calculated from a scale of 0 to 99 by comparing your voice with the music source.

- 1 Start playing the music.**
- 2 Press SCORE before singing a song in Karaoke mode.**
- 3 After singing for more than a minute, press SCORE again to view your score.**

Using Voice Changer

You can select your voice effect from 7 patterns.

Touch VOICE CHANGER +/- on the subwoofer to change your voice effect.

Enjoying music with the Party Light and Speaker Light

- 1 Press PARTY LIGHT repeatedly to select "LED ON."**
- 2 Press LIGHT MODE on the remote repeatedly to change the illumination mode.**

To turn off Party Light and Speaker Light

Press PARTY LIGHT repeatedly to select "LED OFF."

Notes

- Do not look directly at the light-emitting part when the Party Light is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the illumination.
- You can turn on or off the Party Light and Speaker Light when demonstration is turned on.

Using the Sleep Timer

The system turns off automatically after the preset time.

Press SLEEP repeatedly to select the time you want.

To cancel Sleep Timer, press SLEEP repeatedly to select "OFF."

Hint

To check the remaining time before the system turns off, press SLEEP.

Using optional equipment

- 1 Press - repeatedly until "VOL MIN" appears on the display.
- 2 Connect an optional equipment (page 30).
- 3 Press FUNCTION +/- repeatedly to select the function which corresponds to the connected equipment.
- 4 Start playing the connected equipment.
- 5 Press + repeatedly to adjust the volume.

Note

The system may enter standby mode automatically if the volume level of the connected equipment is too low. Adjust the volume level of the equipment. If you turn off automatic standby function, see "Setting the automatic standby function" (page 77).

Deactivating the touch panel on the subwoofer (Child Lock)

You can deactivate the keys (except) on the touch panel of the subwoofer to prevent misoperation, such as child mischief.

Touch and hold on the subwoofer for more than 5 seconds.

"CHILD LOCK ON" appears on the display.

You can only operate the system using the buttons on the remote control. To turn off the Child Lock function, touch and hold on the subwoofer for more than 5 seconds until "CHILD LOCK OFF" appears on the display.

Notes

- Child Lock function will be turned off automatically when you disconnect the AC power cord (mains lead).
- Child Lock function cannot be activated when you open the disc tray.

Setting the automatic standby function

The system enters standby mode automatically in about 15 minutes when there is no operation or audio signal output.

By default, the automatic standby function is turned on.

- 1 Press **OPTIONS**.
 - 2 Press / repeatedly to select "AutoSTBY," then press .
 - 3 Press / repeatedly to select "ON" or "OFF," then press .
- To exit the options menu, press **OPTIONS**.

Notes

- "AutoSTBY" flashes on the display about 2 minutes before entering standby mode.
- The automatic standby function does not work in the following cases:
 - during tuner function.
 - when the Sleep Timer is activated.
 - when microphone is connected.

Setting the BLUETOOTH/Network standby mode

The BLUETOOTH/Network standby mode enables the system to turn on automatically when you establish a BLUETOOTH connection, a Wi-Fi connection, or a wired LAN connection.

1 Press **OPTIONS**.

2 Press **↕/↗** repeatedly to select **"NW STBY,"** then press **[+]**.

3 Press **↕/↗** repeatedly to select the setting, then press **[+]**.

- **ON:** The system turns on automatically even when the system is in standby mode.
- **OFF:** Turns off this function.

To exit the options menu, press **OPTIONS**.

3 Press **↕/↗** repeatedly to select **"RF ON," "WIFI OFF,"** or **"RF OFF."**

- **RF ON:** Wi-Fi signal is on/
BLUETOOTH signal is on
- **WIFI OFF:** Wi-Fi signal is off/
BLUETOOTH signal is on
- **RF OFF:** Wi-Fi signal is off/
BLUETOOTH signal is off

4 Press **[+]**.

To exit the options menu, press **OPTIONS**.

Notes

- You cannot perform the following operations when BLUETOOTH/Wi-Fi signal is set to off:
 - Pairing and/or connecting with BLUETOOTH device
 - Erasing the pairing information
 - Using "SongPal" via BLUETOOTH
 - Change the BLUETOOTH audio codecs
- If you touch the N-Mark on the subwoofer with an NFC-compatible smartphone or set the BLUETOOTH/Network standby mode to on, the BLUETOOTH/Wi-Fi signal will be set to on automatically.

Turning on or off the BLUETOOTH/Wi-Fi signal

You can connect to the system from a linked network device or a paired BLUETOOTH device in all functions when the system's BLUETOOTH/Wi-Fi signal is set to on. The BLUETOOTH/Wi-Fi signal is turned on by default.

1 Press **OPTIONS**.

2 Press **↕/↗** repeatedly to select **"RF,"** then press **[+]**.

About the “SongPal” and “Fiestable” applications


“SongPal” is an application for controlling Sony’s “SongPal” compatible audio devices with a smartphone/iPhone. “Fiestable” is an application which controls the party features of Sony’s Home Audio System with an intuitive and fancy user interface.

How to download the application

Search and download the “SongPal” application from Google Play or the App Store.



Launch the “SongPal” application and touch the “Fiestable” icon on the upper-left corner. You can download the “Fiestable” application from Google Play or the App Store.

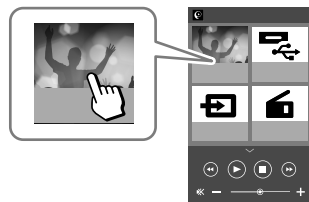

What you can do with “SongPal”

- Volume adjustment
- Sound settings

What you can do with “Fiestable”

- DJ control
- Adjustment illumination
- Karaoke
- Motion control

Notes

- Available operations via “SongPal” may differ depending on the audio devices.
- Specifications and screen design of the software applications are subject to change without notice.
- For notes on using “Fiestable,” refer to the “Notes on using the “Fiestable” application” (separate document) for details.

Settings on “SongPal” are available when the “SongPal” version is 4.X or later.

For more details on “SongPal,” refer to the following URL.

<http://info.songpal.sony.net/help/>

Updating the software

You can update your system's pre-installed software by using one of the following 3 methods:

Automatic update via the Internet

When the system is connected to the Internet, the system updates the software automatically if a new update file is detected. This feature requires the settings to be made by using a smartphone/iPhone installed with "SongPal."

Launch "SongPal" on your smartphone/iPhone, and set [Auto Update] in the [Settings] menu.

Refer to SongPal Help for more details.

<http://info.songpal.sony.net/help/>

Hint

Automatic update will start updating the software after downloading all the update files. Therefore, data corruption and loss do not occur if the network connection is unintentionally disconnected. If a problem occurs, perform the manual update via a USB device.

Manual update via the Internet

When the system is connected to the Internet, "UPDATE" lights up on the display if the system detects a new update file.

- 1 Press **OPTIONS**.
- 2 Press **↕/↗** repeatedly to select "SYSTEM," then press **+**.
- 3 Press **↕/↗** repeatedly to select "UPDATE," then press **+**.
- 4 Press **↕/↗** repeatedly to select "VIA NW," then press **+**.
- 5 Press **↕/↗** repeatedly to select "EXEC," then press **+**.
- 6 Press **↕/↗** repeatedly to select "YES," then press **+**.

To exit the options menu, press **OPTIONS**.

Manual update via a USB device

Use a computer or another device to download the update file from the websites below, then store it in a USB device. Follow the online instructions to update the software.

For customers in Latin America:
<<http://esupport.sony.com/LA>>

For customers in Europe and Russia:
<<http://www.sony.eu/support>>

For customers in other countries/regions:
<<http://www.sony-asia.com/support>>

Troubleshooting

Should you encounter a problem with your system, find your problem in the troubleshooting checklist below and take the corrective action.

If the problem persists, consult your nearest Sony dealer.

Note that if the service personnel changes some parts during repair, these parts may be retained.

If "PROTECTX" (X is a number) appears on the display

Immediately unplug the AC power cord (mains lead), and check the following items.

- Is anything blocking the ventilation openings of the subwoofer?
- Is anything blocking the ventilation openings of the rear vent?
- Is the USB port short-circuited?

After you have checked these above items and found no problems, reconnect the AC power cord (mains lead), and turn on the system. If the issue persists, contact your nearest Sony dealer.

General

The power does not turn on.

- Check that the AC power cord (mains lead) is connected securely.

The system cannot be turned off even though is pressed.

- You may have set the display mode to the demonstration mode unintentionally. Press DISPLAY repeatedly to select the no-display mode (Power Saving Mode) (page 36).

The system has entered standby mode.

- This is not a malfunction. The system enters standby mode automatically in about 15 minutes when there is no operation or audio signal output (page 77).

There is no sound.

- Adjust the volume.
- Check the speaker connections (page 28).
- Check the connection of the optional equipment, if any (page 28).
- Turn on the connected equipment.
- Unplug the AC power cord (mains lead), then plug it in again and turn on the system.

There is no picture/sound when connected to the HDMI OUT (TV) jack.

- Change the setting in [HDMI SETUP] – [HDMI RESOLUTION].
- The equipment connected to the HDMI OUT (TV) jack does not conform to the audio signal format. In this case, press DVD SETUP, then set [HDMI SETUP] – [AUDIO (HDMI)] to [PCM] (page 49).

- Try the following:
 - Turn the system off and on again.
 - Turn the connected equipment off and on again.
 - Disconnect then connect the HDMI cable again.

There is no microphone sound.

- Adjust the microphone volume level.
- Make sure the microphone is connected to the MIC1 or MIC2 jack on the subwoofer correctly.
- Make sure the microphone is turned on.

No TV sound is heard from the system.

"CODE 01" and "SGNL ERR" appear on the display.

- This system supports 2-channel Linear PCM formats only. Check the audio output setting on the TV and change it to PCM output mode if automatic mode is selected.
- Check that the speaker output setting on the TV is set to use external speakers.

There is severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (not supplied) to the AC power cord (mains lead).
- Turn off surrounding electrical equipment.
- The noise generated by the cooling fans of the system may be heard when the system is in standby mode or during playback. This is not a malfunction.

The remote control does not function.

- Remove the obstacles between the remote control and the subwoofer.
- Move the remote control closer to the subwoofer.
- Point the remote control at the subwoofer's sensor.
- Replace the batteries (R03/size AAA).
- Move the subwoofer away from the fluorescent light.

There is acoustic feedback.

- Reduce the volume.
- Move the microphone away from the system or change the direction of the microphone.

The color irregularity on a TV screen persists.

- Turn off the TV at once, then turn it on after 15 to 30 minutes. If the color irregularity still persists, place the system farther away from the TV.

"CHILD LOCK" appears when you touch any key on the subwoofer.

- Set the Child Lock function to off (page 77).

A clicking sound is heard when turning the power on.

- This is the operating sound and it occurs when the power is turned on or off, for example. This is not a malfunction.

Disc player

The disc tray does not open and "LOCKED" appears on the display.

- Consult your nearest Sony dealer or local authorized Sony service facility.

The disc tray does not close.

- Load the disc correctly.

The disc does not eject.

- You cannot eject the disc during CD-USB Synchronized Transfer or REC1 Transfer. Press ■ to cancel the transfer, then touch ▲ on the subwoofer to eject the disc.
- Consult your nearest Sony dealer.

Playback does not start.

- Wipe the disc clean (page 94).
- Reload the disc.
- Load the disc that this system can play back (page 8).
- Remove the disc and wipe away the moisture on the disc, then leave the system turned on for a few hours until the moisture evaporates.
- The region code on the DVD VIDEO does not match the system.

The sound skips.

- Wipe the disc clean (page 94).
- Reload the disc.
- Move the subwoofer to a place with no vibration.

Playback does not start from the first track.

- Set the play mode to Normal Play (page 42).
- Resume Play has been selected. Press ■ twice, then press ► to start playback.

You cannot perform some functions such as Stop, Lock Search, Slow-motion Play, Repeat Play or Shuffle Play.

- Depending on the disc, you may not be able to do some of the operations above. Refer to the operating instructions supplied with the disc.

The DATA CD/DATA DVD (MP3, MPEG4 or Xvid) cannot be played back.

- The data is not stored in the supported format.
- Make sure you have selected the correct Media Mode before playback.

The folder name, track name, file name and ID3 tag characters do not appear properly.

- The ID3 version is not in Version 1 (1.0/1.1) or Version 2 (2.2/2.3).
- The character codes that can be displayed by this system are as follows:
 - Upper cases (A to Z)
 - Numbers (0 to 9)
 - Symbols (< > * +, [] \ _)
 Other characters appear as “_”.

The sound loses stereo effect when you play back an AUDIO CD, VIDEO CD, audio file, video file, or DVD VIDEO.

- Turn off the VOCAL FADER (page 75).
- Make sure the system is connected properly.
- Check the speaker connections (page 28).

USB device**Transferring results in an error.**

- You are using an unsupported USB device. Check the information on the website about compatible USB devices (page 11).
- The USB device is not formatted correctly. Refer to the operating instructions of the USB device on how to format.

- Turn off the system and remove the USB device. If the USB device has a power switch, turn the USB device off and on again after removing it from the system. Then, perform the transfer again.
- If the transfer and erase operations are repeated multiple times, the file structure within the USB device becomes fragmented. Refer to the operating instructions of the USB device on how to deal with this problem.
- The USB device was disconnected or the power was turned off during transfer. Delete the partially-transferred file, and perform the transfer again. If this does not fix the problem, the USB device may be broken. Refer to the operating instructions of the USB device on how to deal with this problem.

Audio files or folders on the USB device cannot be erased.

- Check if the USB device is write-protected.
- The USB device was disconnected or the power was turned off during the erase operation. Delete the partially-erased file. If this does not fix the problem, the USB device may be broken. Refer to the operating instructions of the USB device on how to deal with this problem.

There is no sound.

- The USB device is not connected correctly. Turn off the system and reconnect the USB device, then turn on the system and check if "USB" appears on the display.

 

There is noise, skipping, or distorted sound.

- You are using an unsupported USB device. Check the information on the website about compatible USB devices (page 11).
- Turn off the system and reconnect the USB device, then turn on the system.
- The music data itself contains noise, or the sound is distorted. Noise may have entered during the transfer process. Delete the file, and try transfer again.
- The bit rate used in encoding an audio file was low. Send an audio file with higher bit rate to the USB device.


"READING" is displayed for an extended time, or it takes a long time before playback starts.

- The reading process can take a long time in the following cases.
 - There are many folders or files on the USB device (page 10).
 - The file structure is extremely complex.
 - The memory capacity is excessive.
 - The internal memory is fragmented.

"NO FILE" appears on the display.

- The system has entered the software update mode, and all keys (except ) are deactivated. Press  on the subwoofer to cancel the software update.

"OVER CURRENT" appears on the display.

- A problem has been detected with the level of electrical current from the  USB port. Turn off the system and remove the USB device from the port. Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.

Erroneous display.

- The data stored in the USB device may have been corrupted, perform the transfer again.
- The character codes that can be displayed by this system are as follows:
 - Upper cases (A to Z)
 - Numbers (0 to 9)
 - Symbols (< > * +, [] \ _)
 Other characters appear as " _."

The USB device is not recognized.

- Turn off the system and reconnect the USB device, then turn on the system.
- Check the information on the website about compatible USB devices (page 11).
- The USB device is not working properly. Refer to the operating instructions of the USB device on how to deal with this problem.

Playback does not start.

- Turn off the system and reconnect the USB device, then turn on the system.
- Check the information on the website about compatible USB devices (page 11).

Playback does not start from the first file.

- Set the play mode to Normal Play (page 42).

Files cannot be played back.

- Make sure you have selected the correct Media Mode before playback.
- USB devices formatted with file systems other than FAT16 or FAT32 are unsupported.*
- If you use a partitioned USB device, only files on the first partition can be played back.

* This system supports FAT16 and FAT32, but some USB devices may not support all of these FAT. For details, refer to the operating instructions of each USB device or contact the manufacturer.

Picture**There is no picture.**

- Check that the system is connected securely.
- If the video cable or HDMI cable is damaged, replace it with a new one.
- Make sure you connect the subwoofer to the HDMI input jack or the video input jack of your TV (page 33).
- Make sure you turn on the TV and operate the TV correctly.
- Make sure you select the video input on the TV so that you can view the pictures from the system.
- (Except for Latin American, European, and Russian models) Make sure you set the color system correctly, according to your TV's color system.

Picture noise appears.

- Wipe the disc clean (page 94).
- If video signal from your system has to go through your VCR to your TV, the copy-protection applied to some DVD VIDEO programs could affect the picture quality.

- (Except for Latin American, European, and Russian models)
When you play back a VIDEO CD recorded in a different color system from the one you set to the system, the picture image may be distorted (page 35, 47).
- (Except for Latin American, European, and Russian models)
Set the color system to match your TV (page 35, 47).

The aspect ratio of the TV screen cannot be changed.

- The aspect ratio is fixed on your DVD VIDEO and video file.
- Depending on the TV, you may not change the aspect ratio.

The language for the sound track cannot be changed.

- Multilingual tracks are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the language for the sound track.

The subtitles language cannot be changed.

- Multilingual subtitles are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the subtitles.

The subtitles cannot be turned off.

- The DVD VIDEO prohibits turning off subtitles.

The camera angles cannot be changed.

- Multi-angles are not recorded on the DVD VIDEO being played back.
- The DVD VIDEO prohibits changing the angles.

Tuner*

There is severe hum or noise, or stations cannot be received.

- Connect the antenna properly.
- Change antenna location and its orientation to obtain good reception.
- Turn off nearby electrical equipment.

* Radio may not be received depending on the radio wave conditions or the housing environment in your area.

BLUETOOTH device

Pairing cannot be performed.

- Move the BLUETOOTH device closer to the system.
- Pairing may not be possible if other BLUETOOTH devices are present around the system. In this case, turn off the other BLUETOOTH devices.
- Make sure to enter the correct passkey when selecting the system's name (this system) on the BLUETOOTH device.

Connection is not possible.

- The BLUETOOTH device you attempted to connect does not support the A2DP profile, and cannot be connected with the system.
- Enable the BLUETOOTH function of the BLUETOOTH device.
- Establish a connection from the BLUETOOTH device.
- The pairing registration information has been erased. Perform the pairing operation again.
- Erase the pairing registration information of the BLUETOOTH device (page 56) and perform the pairing operation again (page 55).

The sound skips or fluctuates, or the connection is lost.

- The system and the BLUETOOTH device are too far apart.
- If there are obstacles between the system and your BLUETOOTH device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other BLUETOOTH device, or a microwave oven nearby, move them away.

The sound of your BLUETOOTH device cannot be heard on this system.

- Increase the volume on your BLUETOOTH device first, then adjust the volume using \triangle +/-.


There is severe hum, noise, or distorted sound.

- If there are obstacles between the system and your BLUETOOTH device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other BLUETOOTH device, or a microwave oven nearby, move them away.
- Turn down the volume of the connected BLUETOOTH device.

The sound from "Voice Playback" in the "Fiestable" application does not output.

- The built-in sound demonstration is activated. Press \blacksquare to stop the demonstration, then perform the playback again.

Network connection**The system cannot connect to the network. (Other equipment on the network cannot find or recognize the system.)**

- Check that  is lit on the display.
- It takes about 2 minutes for the system to acquire an IP address when the system is turned on in a communication environment without a router.
- When you use a fixed IP address, the same IP address may be used by other equipment. Use a different IP address.

The system cannot connect to the network via a wireless LAN connection.


- If a network (LAN) cable is connected to the system, the system automatically establishes a wired LAN connection. If you wish to use a wireless LAN connection, disconnect any network (LAN) cable from the system.
- Check the settings of the wireless LAN router/access point. If the SSID stealth mode is set to "On" on the access point, set it to "Off." For details on the access point settings of the wireless router, refer to the operating manual of the access point.

The system cannot connect to the network using WPS.

- Set up your network after searching the access point using the access point scan.
- You cannot connect to a network using WPS when your access point is set to WEP.
- Update the firmware of the wireless LAN router/access point to the latest version.

Music Services

The system cannot connect to Music Services.

- Make sure the wireless LAN router/access point is turned on.
- Check that  is lit on the display. If not, set up a wireless network again. For details, see Wi-Fi Startup Guide.
- When the system is connected to a wireless network, place the wireless LAN/access point and the system closer together and perform the setup again.
- Depending on the provider, only one connection to the Internet is allowed.
- Turn off your mobile device (Android, Xperia, or iPhone/iPod touch) and wait a moment before turning it on again. Then try to restart the "SongPal" application.

Home Network

The controller (the operating device) cannot find this system. (The controller cannot browse the contents of this system.)

- Make sure that the controller is connected to the home network.
- The multicast control on the access point is enabled.

Music starts automatically.

- This system may be controlled by another component. To block such control, set the BLUETOOTH/Network standby mode to off (page 78).

The sound is interrupted.

- The DLNA server is overloaded. Quit all running applications.
- The wireless signal has interference. Turn off other devices such as your microwave oven.
- The communication speed of the wireless LAN may become slower for IEEE802.11n-compliant wireless LAN routers/access points if the security method is set to WEP or WPA/WPA2-PSK (TKIP). If the speed becomes slower, change the security method to WPA/WPA2-PSK (AES).
The encryption (security) scheme varies depending on the device. For details, refer to the operating manual of your router/access point.

Tuning or playback cannot be performed.

- The audio file is damaged or has been deleted from the server. Refer to the operating manual of the server.
- The server tries to play the audio file in an audio format that the system does not support. Check the audio format information on the server.

- Disable the multicast control on the wireless LAN router/access point. If it is enabled, it may take several minutes to output the audio. For details, refer to the operating manual of the wireless LAN router/access point.
- The access from this system is not permitted by the server. Change the settings on the server to allow access from this system. For details, refer to the operating manual of the server.

Gesture Control

The Gesture Control cannot be activated.

- Touch GESTURE ON/OFF repeatedly until GESTURE CONTROL sensor lights up.
- Make sure the Child Lock function is not activated (page 77).

The Gesture Control does not operate properly.

- Move your hand closer to the GESTURE CONTROL sensor (page 65) when you swipe.
- Swipe more slowly.
- Select the correct mode (PLAYBACK, DJ, SAMPLER or KARAOKE) before you start using the Gesture Control (page 65, 66, 67).
- Install a noise filter (not supplied) to the AC power cord (mains lead).
- Turn off nearby electrical equipment.

“PARTY LOCK” appears when you touch any key on the subwoofer.

- Set the Party Lock function to off (page 67).

Control for HDMI (“BRAVIA” Sync)

The system does not turn on when the TV is turned on.

- Press DVD SETUP, then set [HDMI SETUP] – [CONTROL FOR HDMI] to [ON] (page 49). The TV must support the Control for HDMI function (page 49). For details, refer to the operating instructions of your TV.
- Check the speaker settings of the TV. The system power syncs with the speaker settings of the TV. For details, refer to the operating instructions of your TV.
- If the sound was output from the TV’s speakers the previous time, the system will not turn on when the TV is turned on.

The system turns off when the TV is turned off.

- Check the setting of [HDMI SETUP] – [STANDBY LINKED TO TV] (page 49). When [STANDBY LINKED TO TV] is set to [ON], the system turns off automatically when you turn off the TV regardless of the input.

The system does not turn off when the TV is turned off.

- Check the setting of [HDMI SETUP] – [STANDBY LINKED TO TV] (page 49). To turn the system off automatically regardless of the input when you turn off the TV, set [STANDBY LINKED TO TV] to [ON]. The TV must support the Control for HDMI function (page 49). For details, refer to the operating instructions of your TV.

No TV sound is output from the system.

- Check the type and connection of the HDMI cable or audio cable that is connected to the system and the TV (page 33).
- If your TV is compatible with Audio Return Channel, make sure the system is connected to an ARC-compatible HDMI IN jack of the TV (page 33). If sound is still not output or if sound is interrupted, connect an audio cable (not supplied) and press DVD SETUP, then set [HDMI SETUP] – [AUDIO RETURN CHANNEL] to [OFF] (page 49).
- If your TV is not compatible with Audio Return Channel, TV sound will not be output from the system even if the system is connected to the TV's HDMI IN jack. To output TV sound from the system, connect an audio cable (not supplied) (page 34).
- Switch input of the system to "TV" (page 34).
- Increase the volume on the system.
- Depending on the order in which you connect the TV and the system, the system may be muted and "MUTING" lights up on the display of the system. If this happens, turn on the TV first, then the system.
- Set the speakers setting of the TV (BRAVIA) to Audio System. Refer to the operating instructions of your TV.

The sound is output from both the system and the TV.

- Mute the sound of the system or the TV.
- Change the speaker output on the TV to TV speaker or Audio System.

The Control for HDMI function does not work properly.

- Check the connection with the system (page 33).
- Enable the Control for HDMI function on the TV. For details, refer to the operating instructions of your TV.
- Wait a while, then try again. If you unplug the system, it will take a while before operations can be made. Wait for 15 seconds or longer, then try again.
- Make sure the TV connected to the system supports the Control for HDMI function.
- The type and number of devices that can be controlled by the Control for HDMI function is restricted by the HDMI CEC standard as follows:
 - Recording devices (Blu-ray Disc recorder, DVD recorder, etc.): up to 3 devices
 - Playback devices (Blu-ray Disc Player, DVD player, etc.): up to 3 devices
 - Tuner-related devices: up to 4 devices
 - Audio system (receiver/headphone): up to 1 device (used by this system)

Party Chain

Party Chain function cannot be activated.

- Check the connections (page 72).
- Make sure the audio cables are connected correctly.

"PARTY CHAIN" is flashing on the display.








- You cannot select the Audio In function if you make a connection **A** (page 72) while using the Party Chain function. Select a function other than the Audio In function (page 74).
- Touch PARTY CHAIN on the subwoofer.
- Try turning off the system, then turning it back on again.

Party Chain function does not work properly.

- Turn off the system. Then, turn it back on again to activate the Party Chain function.

Resetting the system

If the system still does not operate properly, reset the system to factory default settings.

- 1 Unplug the AC power cord (mains lead), then plug it back in.**
- 2 Press  to turn on the system.**
- 3 Press OPTIONS.**
- 4 Press  repeatedly to select "SYSTEM," then press .**
- 5 Press  repeatedly to select "RESET," then press .**
- 6 Press  repeatedly to select "YES," then press .**
 "RESET" appears on the display.
 All user-configured settings, such as preset radio stations and Sleep Timer are reset to factory default setting.

Returning the setup menu settings to the default

You can return the setup menu settings (except for [PARENTAL CONTROL] settings) to the default settings.

 
1 Press DVD SETUP.

The setup menu appears on the TV.

2 Press repeatedly to select [SYSTEM SETUP], then press .

3 Press repeatedly to select [RESET], then press .

4 Press repeatedly to select [YES], then press .

It takes a few seconds to complete. Do not press  while resetting the system.

Self-diagnosis Function

When letters/numbers appear on the TV screen or the display

When the self-diagnosis function is activated to prevent the system from malfunctioning, a service number appears. The service number consists of an alphabet and numerals (e.g. C 13 50). See the following table for the cause and corrective action.

First 3 characters of the service number	Cause and corrective action
C 13	This disc is dirty. <ul style="list-style-type: none">• Clean the disc with a soft cloth (page 94).
C 31	The disc is not inserted correctly. <ul style="list-style-type: none">• Turn off the system, then turn it back on again. Then re-insert the disc correctly.
E XX (XX is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. <ul style="list-style-type: none">• Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

Messages

One of the following messages may appear or flash on the display during operation.

CANNOT PLAY

- A disc that cannot be played back was inserted.
- A DVD VIDEO with unsupported region code was inserted.

CODE 01/SGNL ERR

An unsupported audio signal is input from the connected TV's HDMI IN (ARC) jack (page 34).

DATA ERROR

- The file is created in unsupported format.
- The file extensions does not match the file format.

DEVICE ERROR

The USB device could not be recognized or an unknown device is connected.

DEVICE FULL

The memory of the USB device is full.

ERASE ERROR

Erase of audio files or folders on the USB device failed.

FATAL ERROR

The USB device was removed during transfer or erase operation, and may have been damaged.

FOLDER FULL

You cannot transfer onto the USB device because the number of folders has reached its maximum.

GUEST

The system has become a Party Guest as the Party Chain function has been activated by a Party Host.

HOST

The system activated the Party Chain function and has become a Party Host.

NO DISC

There is no disc in the player.

NO MUSIC

No supported audio files exist in the playback source.

NO SUPPORT

An unsupported USB device is connected, or the USB device is connected through a USB hub.

NO VIDEO

No supported video files exist in the playback source.


NoDEVICE

No USB device is connected or unsupported device is connected.

NOT USE

You tried to perform a specific operation under conditions where that operation is prohibited.

OVER CURRENT

An over current from the  USB port was detected.

PROTECT

The USB device is write-protected.

PUSH STOP

You tried to perform an operation that can be performed only when the playback is stopped.

READING

The system is reading information of the disc or USB device. Some operations are not available.

REC ERROR

The transfer did not start, stopped partway, or otherwise could not be performed.

TRACK FULL

You cannot transfer onto the USB device because the number of files has reached its maximum.

Precautions

When carrying the subwoofer

 
To avoid damaging the disc mechanism, perform the following procedure before carrying the subwoofer.

Use the keys on the touch panel of the subwoofer to perform this operation.

1 Press  to turn on the system.

2 Touch **FUNCTION** repeatedly to select “DVD/CD.”

3 Remove the disc.

Touch  to open and close the disc tray.

Wait until “NO DISC” appears on the display.

4 Unplug the AC power cord (mains lead).

Notes on discs

- Before playing, wipe the disc with a cleaning cloth from the center outward to the edge.
- Do not clean discs with solvents, such as benzene, thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave them in a car parked in direct sunlight.

On safety

- Completely disconnect the AC power cord (mains lead) from the wall outlet (mains) if it is not going to be used for an extended period of time. When unplugging the system, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.

- AC power cord (mains lead) must be changed only at the qualified service shop.

On handling the unit

- Do not splash liquid on the subwoofer. Dust and drip proof performance is improved by the flat top structure of the subwoofer, but this is not guaranteed for all situations. If you accidentally splash liquid on the subwoofer, wipe off immediately.
- To maintain the dust and drip proof performance, make sure of the following:
 - The MIC cover is securely attached (page 16).
 - The USB REC/PLAY cover is securely closed (page 16).

On placement

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the system on surfaces that have been specially treated (for example, wax, oil, polish) as staining or discoloration of the surface may result.
- If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the subwoofer, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about an hour until the moisture evaporates.

On heat buildup

- Heat buildup on the subwoofer during operation is normal and is not a cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

On the speaker system

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV.

IMPORTANT NOTICE

Caution: If you leave a still video image or on-screen display image displayed on your TV for an extended period of time via this system, you risk permanent damage to your TV screen. Projection TVs are especially susceptible to this.

Cleaning the cabinet

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzene, or alcohol.

On BLUETOOTH communication

- BLUETOOTH devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.
 - When a person, metal object, wall or other obstruction is between the devices with a BLUETOOTH connection
 - Locations where a wireless LAN is installed
 - Around microwave ovens that are in use
 - Locations where other electromagnetic waves are generated
- BLUETOOTH devices and wireless LAN (IEEE 802.11b/g) equipment use the same frequency band (2.4 GHz). When using your BLUETOOTH device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to

connect. If this happens, try the following remedies:

- Use this system at least 10 meters away from the wireless LAN equipment.
- Turn off the power of the wireless LAN equipment when using your BLUETOOTH device within 10 meters.
- Use this system and BLUETOOTH device as close to each other as possible.
- The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system and BLUETOOTH device in the following locations:
 - In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gases may be present
 - Near automatic doors or fire alarms
- This system supports security functions that comply with BLUETOOTH specifications to ensure secure connections during communication using BLUETOOTH technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when performing communication using BLUETOOTH technology.
- Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using BLUETOOTH technology.
- BLUETOOTH communication is not necessarily guaranteed with all BLUETOOTH devices that have the same profile as this system.
- BLUETOOTH devices connected with this system must comply with the BLUETOOTH specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the BLUETOOTH specification, there may be cases where the characteristics or specifications of the BLUETOOTH device make it impossible to connect, or may result in different control methods, display or operation.

- Noise may occur or the audio may cut off depending on the BLUETOOTH device connected with this system, the communications environment, or surrounding conditions.

Specifications

Active Subwoofer (SA-WGT7DW)

Speaker section

Speaker system:

Subwoofer, Sound Pressure Horn

Speaker unit:

350 mm, cone type

Rated impedance:

8 ohms

Inputs

AUDIO IN/PARTY CHAIN IN L/R:

Voltage 2 V, impedance

47 kilohms

TV (ARC):

Supported audio signal:

2-channel Linear PCM

MIC1, MIC2:

Sensitivity 1 mV, impedance

10 kilohms

Outputs

AUDIO OUT/PARTY CHAIN OUT L/R:

Voltage 2 V, impedance 1 kilohms

VIDEO OUT:

Max. output level 1 V_{p-p},
unbalanced, Sync. negative load
impedance 75 ohms

HDMI OUT (TV):

Supported audio signal:

2-channel Linear PCM (up to
48 kHz), Dolby Digital

HDMI section

Connector:

Type A (19 pin)

Disc player section

System:

Compact disc and digital audio and video system

Laser Diode Properties

Emission Duration: Continuous

Laser Output*: Less than 44.6 μW

* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.

Frequency response:

20 Hz – 20 kHz

Video color system format:

Latin American model:

NTSC

Other models:

NTSC and PAL

USB section

Supported USB device:

Mass Storage Class

Maximum current:

1 A

USB port:

Type A

FM tuner section

FM stereo, FM superheterodyne tuner

Antenna:

FM lead antenna

Tuning range:

87.5 MHz – 108.0 MHz (50 kHz step)

BLUETOOTH section

Communication system:

BLUETOOTH Standard version 4.2

Output:

BLUETOOTH Standard Power Class 1

Maximum communication range:

Line of sight approx. 30 m^{*1}

Frequency band:

2.4 GHz band (2.4000 GHz – 2.4835 GHz)

Modulation method:

FHSS (Freq Hopping Spread Spectrum)

Compatible BLUETOOTH profiles^{*2}:

A2DP (Advanced Audio

Distribution Profile)

AVRCP (Audio Video Remote

Control Profile)

SPP (Serial Port Profile)

Supported codecs:

SBC (Sub Band Codec)

AAC (Advanced Audio Coding)

LDAC

^{*1} The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.

^{*2} BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

Network section

LAN port:

RJ-45

10BASE-T/100BASE-TX

(The communication speed may vary depending on the communication environment.

This system does not guarantee the communication speed and quality of 10BASE-T/100BASE-TX.)

Compatible standards:

IEEE 802.11 a/b/g/n (WEP 64 bit,
WEP 128 bit, WPA/WPA2-PSK
(AES), WPA/WPA2-PSK (TKIP))

Radio frequency:

2.4/5 GHz band

Supported audio formats

Supported bit rate and sampling
frequencies:

MP3:

16/22.05/24/32/44.1/48 kHz,
16 – 320 kbps (CBR/VBR)

AAC:

16/22.05/24/32/44.1/48/88.2/
96 kHz, 16 – 320 kbps (CBR/VBR)

WMA:

32/44.1/48 kHz, 16 – 320 kbps
(CBR/VBR)

WAV:

16/22.05/24/32/44.1/48/88.2/
96/176.4/192 kHz (16/24 bit)

AIFF:

32/44.1/48/88.2/96/176.4/
192 kHz (16/24 bit)

FLAC:

16/22.05/24/32/44.1/48/88.2/
96/176.4/192 kHz (16/24 bit)

ALAC:

16/22.05/24/32/44.1/48/88.2/
96/176.4/192 kHz (16/24 bit)

PCM:

44.1/48/88.2/96/176.4/192 kHz
(16/24/32 bit)

DSD (DSF/DSDIFF):

2.8 MHz (1 bit)

Supported video formats

Xvid:

Video codec: Xvid video

Bit rate: 4.854 Mbps (MAX)

Resolution/Frame rate:

720 × 480, 30 fps

720 × 576, 25 fps (except for Latin
American model)

Audio codec: MP3

MPEG4:

File format: MP4 File Format

Video codec: MPEG4 Simple
Profile (AVC is not compatible.)

Bit rate: 4 Mbps

Resolution/Frame rate:

720 × 480, 30 fps

720 × 576, 25 fps (except for Latin
American model)

Audio codec: AAC-LC (HE-AAC is
not compatible.)

DRM: Not compatible

Speaker System (SS-GT7DWB)

Speaker system:

2-way, bass reflex

Speaker unit (left):

Tweeter: 19 mm × 1, cone type

Midrange: 90 mm × 2, cone type

Speaker unit (right):

Tweeter: 19 mm × 1, cone type

Midrange: 90 mm × 2, cone type

Rated impedance:

4 ohms

General

Power requirements:

AC 120 V – 240 V, 50/60 Hz

Power consumption:

370 W

Power consumption (at the Power Saving mode):

0.5 W (When "NW STBY" is set to "OFF" and [CONTROL FOR HDMI] is set to [OFF].)

3 W* (When "NW STBY" is set to "ON" and [CONTROL FOR HDMI] is set to [ON].)

Dimensions (W/H/D) (Approx.):

Active subwoofer:

805 mm × 480 mm × 540 mm

Speaker unit (left):

600 mm × 118 mm × 145 mm

Speaker unit (right):

600 mm × 118 mm × 145 mm

Mass (Approx.):

Active subwoofer:

38.9 kg

Speaker unit (left):

4.3 kg

Speaker unit (right):

4.3 kg

Quantity:

Active subwoofer:

1 piece

Speaker unit:

2 pieces

* The power consumption of the system will be less than 0.5 W when there is no HDMI connection and "NW STBY" is set to "OFF."

Design and specifications are subject to change without notice.

Language code list

The language spellings conform to the ISO 639:1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1186	Scots Gaelic	1350	Malayalam	1513	Siswati
1028	Abkhazian	1194	Galician	1352	Mongolian	1514	Sesotho
1032	Afrikaans	1196	Guarani	1353	Moldavian	1515	Sundanese
1039	Amharic	1203	Gujarati	1356	Marathi	1516	Swedish
1044	Arabic	1209	Hausa	1357	Malay	1517	Swahili
1045	Assamese	1217	Hindi	1358	Maltese	1521	Tamil
1051	Aymara	1226	Croatian	1363	Burmese	1525	Telugu
1052	Azerbaijani	1229	Hungarian	1365	Nauru	1527	Tajik
1053	Bashkir	1233	Armenian	1369	Nepali	1528	Thai
1057	Byelorussian	1235	Interlingua	1376	Dutch	1529	Tigrinya
1059	Bulgarian	1239	Interlingue	1379	Norwegian	1531	Turkmen
1060	Bihari	1245	Inupiak	1393	Occitan	1532	Tagalog
1061	Bislama	1248	Indonesian	1403	(Afan) Oromo	1534	Setswana
1066	Bengali; Bangla	1253	Icelandic	1408	Oriya	1535	Tonga
1067	Tibetan	1254	Italian	1417	Punjabi	1538	Turkish
1070	Breton	1257	Hebrew	1428	Polish	1539	Tsonga
1079	Catalan	1261	Japanese	1435	Pashto; Pushto	1540	Tatar
1093	Corsican	1269	Yiddish	1436	Portuguese	1543	Twi
1097	Czech	1283	Javanese	1463	Quechua	1557	Ukrainian
1103	Welsh	1287	Georgian	1481	Rhaeto-Romance	1564	Urdu
1105	Danish	1297	Kazakh	1482	Kirundi	1572	Uzbek
1109	German	1298	Greenlandic	1483	Romanian	1581	Vietnamese
1130	Bhutani	1299	Cambodian	1489	Russian	1587	Volapük
1142	Greek	1300	Kannada	1491	Kinyarwanda	1613	Wolof
1144	English	1301	Korean	1495	Sanskrit	1632	Xhosa
1145	Esperanto	1305	Kashmiri	1498	Sindhi	1665	Yoruba
1149	Spanish	1307	Kurdish	1501	Sangho	1684	Chinese
1150	Estonian	1311	Kirghiz	1502	Serbo-Croatian	1697	Zulu
1151	Basque	1313	Latin	1503	Singhalese	1703	Not specified
1157	Persian	1326	Lingala	1505	Slovak		
1165	Finnish	1327	Laothian	1506	Slovenian		
1166	Fiji	1332	Lithuanian	1507	Samoa		
1171	Faroeese	1334	Latvian; Lettish	1508	Shona		
1174	French	1345	Malagasy	1509	Somali		
1181	Frisian	1347	Maori	1511	Albanian		
1183	Irish	1349	Macedonian	1512	Serbian		

Parental Control area code list

Code	Area	Code	Area	Code	Area	Code	Area
2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United Kingdom
2079	Canada	2254	Italy	2424	Philippines		
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		

<http://www.sony.net/>



HDMI



MP3



* 4 5 9 3 2 4 3 1 1 * (1)