

SONY®

Blu-ray Disc™/DVD Home Theatre System

BDV-E6100
BDV-E4100
BDV-E3100
BDV-E2100

GB Start here

Quick start guide



BDV-E3100



BDV-E6100



BDV-E4100



BDV-E2100

1

What's in the box/Setting up the speakers

2

Connecting your TV

3

Connecting other devices


4

The on-screen Easy Setup


5

Playback and using other functions

BDV-E6100

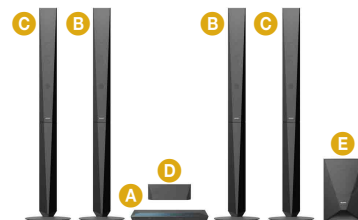

BDV-E4100

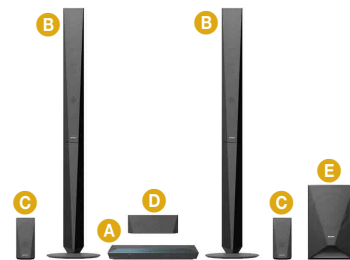

BDV-E3100



BDV-E2100



- A Main unit
- B Front speakers
- C Surround speakers
- D Center speaker
- E Subwoofer

What's in the box

Speaker-bottom covers
(BDV-E6100 (4) /BDV-E4100 (2))




Screws (large)
(BDV-E6100 (4) /BDV-E4100 (2))



Screws (small)
(BDV-E6100 (16) /BDV-E4100 (8))




Remote

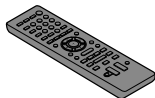

R6 (size AA) batteries (2)



 
FM wire antenna (aerial)



1

Start by positioning the speakers according to the labels on the rear panel. **A**

You can also set the speakers in ALL FRONT **B** position. For further details, visit: <http://support.sony-europe.com/>

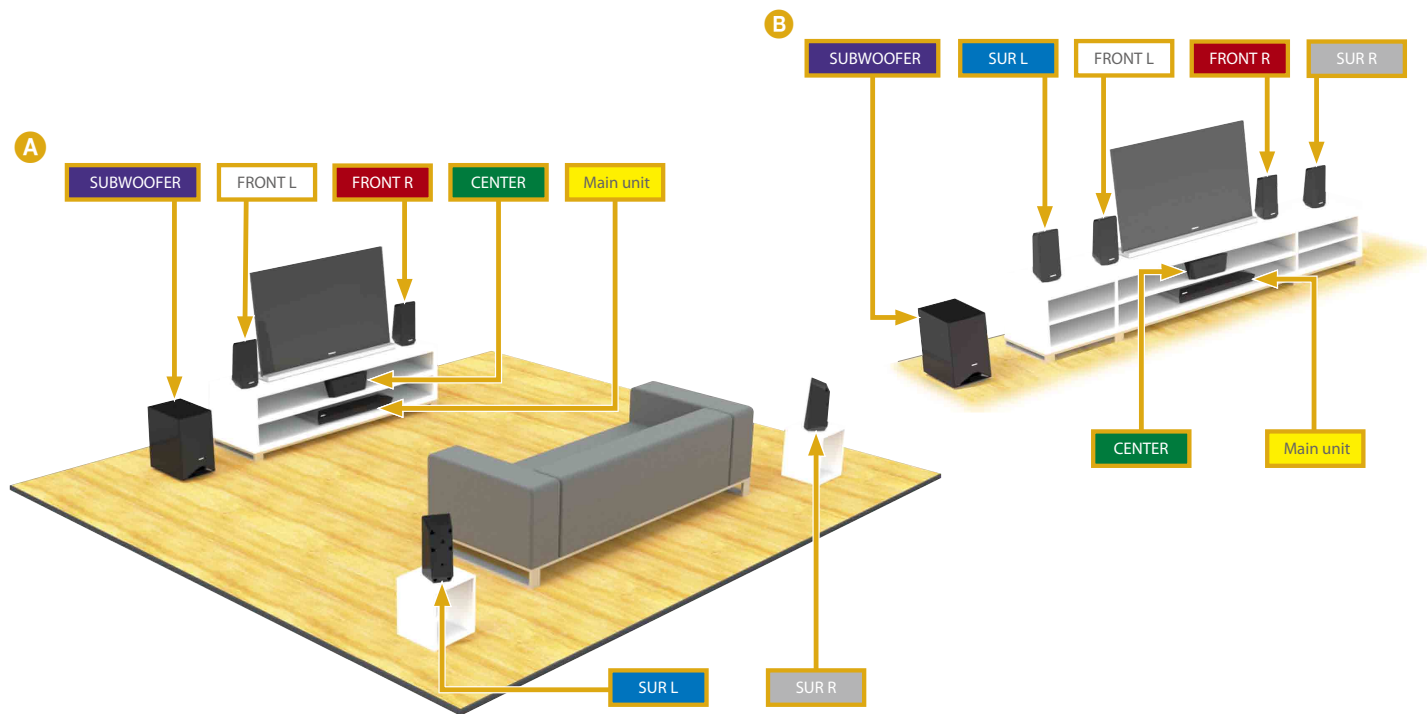

Next, connect the speakers to the main unit.


For BDV-E6100/BDV-E4100, refer to the supplied "Speaker Installation Guide" for assembling the speakers.



2

To enjoy high-quality video and audio, connect via a High Speed HDMI cable **A** (not supplied).

If your TV has no HDMI ARC jack, you also need an optical digital cord **B** (not supplied) to enjoy TV sound through the system speakers.

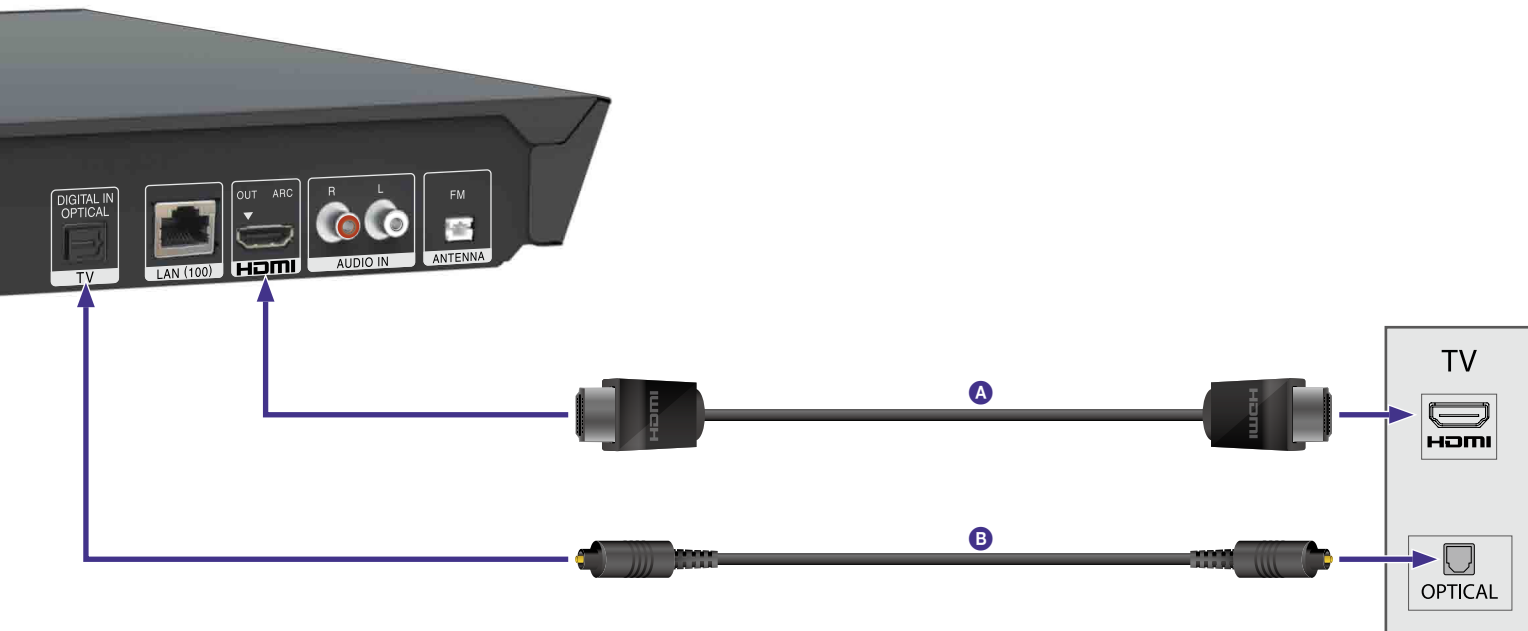

3

To connect your set-top box, game console, or digital satellite receiver, make an audio connection to the main unit with an optical digital cord **A** (not supplied). Separately, make a video connection to the TV.

For FM radio, connect the supplied wire antenna (aerial) and extend it for the best reception. **B**



You can connect to the Internet and home network via a wireless LAN or LAN cable **A** (not supplied).

Network settings can be found in the home menu (page 12). For further details, visit: <http://support.sony-europe.com/>

Connect the AC power cord (mains lead) **B** to a wall outlet (mains).




4



Press **I/⏻** to turn the system on.
"SETUP" appears in the front panel display.



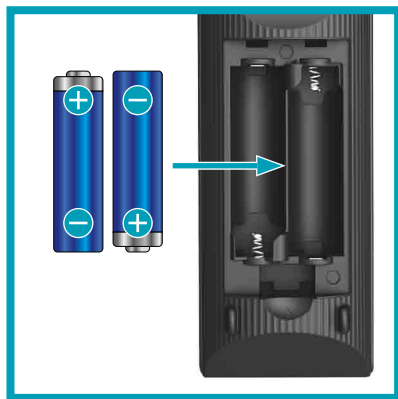


To ready the system for use, go through the on-screen Easy Initial Settings using the supplied remote. This should only take a few minutes.


If the setup screen is not displayed, select the correct AV input in your TV.

Once [Easy Initial Settings are complete.] appears on the screen, select [Finish] and the system is ready to use.



To play a disc, press , then place the disc on the disc tray. Press  again to close the disc tray.

If playback does not start automatically, select  in the  [Video],  [Music], or  [Photo] category, and press .

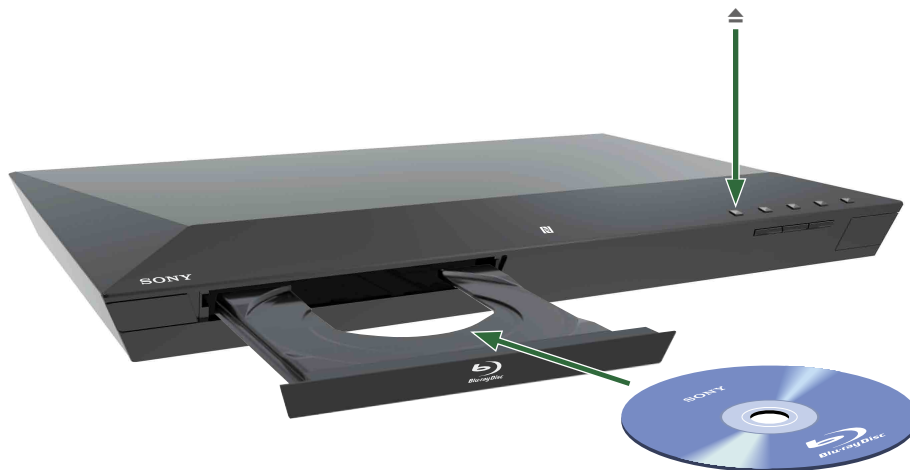

You can enjoy music on your smartphone, etc., via *Bluetooth* communication from your system.

You can pair/connect your *Bluetooth* device by either:


- ➊ pressing the **BLUETOOTH** button, or
- ➋ using the **NFC** function (for NFC compatible devices only). Download the application and simply hold your device near to the **N** mark on the main unit. For further details, visit: <http://support.sony-europe.com/>



To access more features, simply press
HOME.

Examples:

- A** Listen to the radio through the system's speakers
- B** Preset radio stations
- C** Access Internet content
- D** Play files on the connected USB device

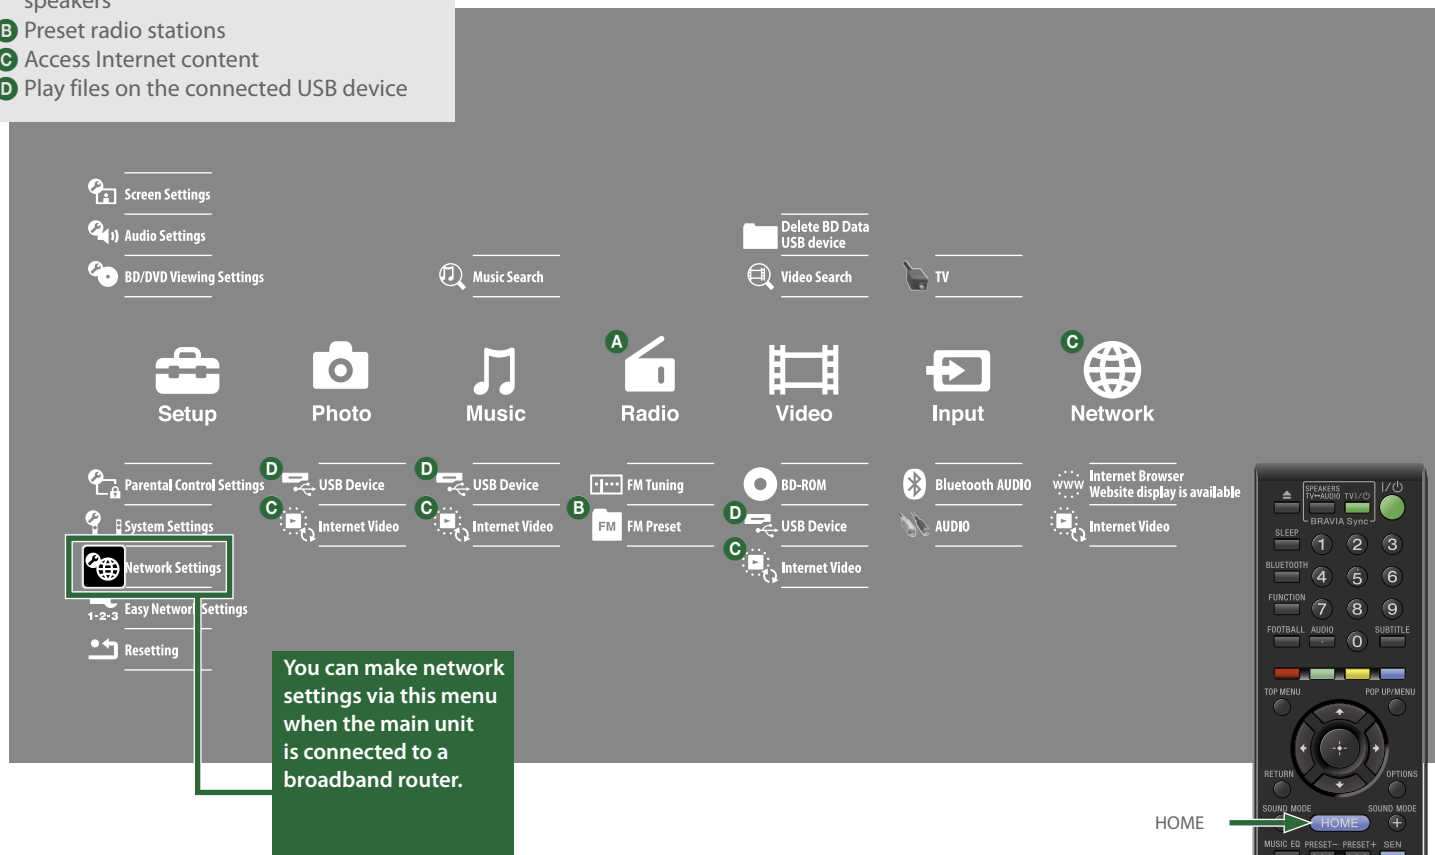


Presetting radio stations

- 1 Press FUNCTION repeatedly until "FM" appears in the front panel display.
- 2 Press and hold TUNING +/- until auto scanning starts.
- 3 Press OPTIONS.
- 4 Press \uparrow/\downarrow to select [Preset Memory], then press \oplus .
- 5 Press \uparrow/\downarrow to select the preset number you want, then press \oplus .
- 6 Repeat Steps 2 to 5 to store other stations.

Selecting a preset station

- 1 Press FUNCTION repeatedly until "FM" appears in the front panel display.
- 2 Press PRESET +/- repeatedly to select the preset station.

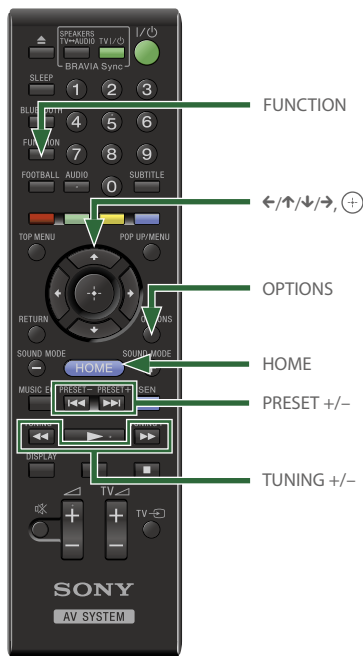

Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs.

Also consult the Operating Instructions on the following website:
<http://support.sony-europe.com/>

The power does not turn on.

- Check that the AC power cord (mains lead) is securely connected to the wall outlet (mains).

The system does not work normally.

- Disconnect the AC power cord (mains lead) from the wall outlet (mains), then reconnect after several minutes.





The system does not output sound of the TV program when connected to a set-top box.

- Check the connections.
- Select the correct input of the system to which the set-top box is connected.

A disc does not play.

- The region code of the disc does not match the system.
- Moisture has condensed on the lenses inside the main unit.
Remove the disc and leave the main unit turned on for about half an hour.
- The disc is not correctly finalized.

Reducing power usage to less than 0.3 W in Standby Mode

Press HOME, and then press     to select [Setup]. Check that the following settings are made:

- Select [System Settings] > [HDMI Settings] > [Control for HDMI], then set [Control for HDMI] to [Off].
- Select [System Settings] > [Quick Start Mode], then set [Quick Start Mode] to [Off].
- Select [Network Settings] > [Remote Start], then set [Remote Start] to [Off].



This quick start guide saves paper

To save natural resources, Sony has drastically reduced paper by no longer including full printed manuals. However, full operating instructions, and more, can be found online:

<http://support.sony-europe.com/>

4-446-740-11(1)

