

DVD Home Theatre System

Operating Instructions



©2013 Sony Corporation Printed in China

DAV-DZ350/DAV-DZ650/DAV-DZ950

GB

Playable Types of Files

File format	Extensions
MPEG4 Video ¹⁾	"mp4", "m4v"
Xvid Video	"avi"


File format	Extensions
MP3 (MPEG1 Audio Layer 3) ²⁾	"mp3"
WMA ³⁾	"wma"
AAC ⁴⁾	"m4a"

- It may take time to read files in the following cases:
 - there are many folders or files,
 - the memory capacity of the USB device that you are using is very large,
 - the memory of the USB device that you are using is fragmented.

- Music**
- File format Extensions
- MP3 (MPEG1 Audio Layer 3)²⁾ "mp3"
- WMA³⁾ "wma"
- AAC⁴⁾ "m4a"
- Photo**
- File format Extensions
- JPEG "jpg", "jpeg", "jpe"
- 1) AVC is not compatible.
 - 2) MP3PRO format is not compatible.
 - 3) WMA DRM, WMA Lossless or WMA PRO format are not compatible.
 - 4) AAC DRM and AAC Lossless formats are not supported.
- Note**
- Some files may not play depending on the format, the encoding, or recording condition.
 - Some USB devices may not work with this system.
 - The system supports ISO 9660 Level 1/ Level 2, or Joliet in DATA CD.
 - The system supports UDF (Universal Disk Format) in DATA DVD.
 - The system supports FAT12, FAT16, and FAT32 in USB device.
 - The system can recognize the following files or folders in DATA DVD, DATA CD and USB device:
 - up to 300 folders
 - up to 648 files

Connecting the Speakers

Caution
Do not use any speakers other than those supplied with this system.
Insert the speaker cords to match the color of the SPEAKERS terminals of the unit.

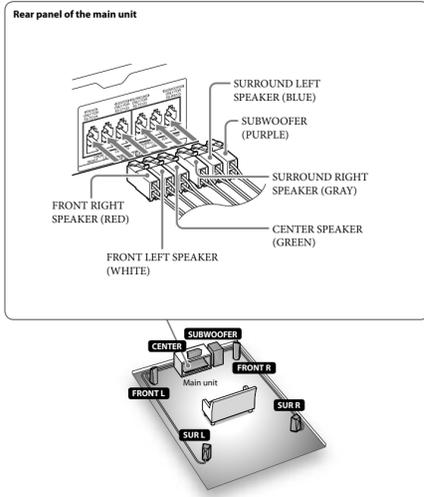

11

Color System Setup

- 1 Connect the AC power cord (mains lead).
- 2 Turn on the power of the main unit and TV.
- 3 Press **FUNCTION** repeatedly or **DVD/CD** to switch the function to **DVD/CD**. Playback starts automatically if a disc with an auto playback function is loaded. Press **■** twice to stop playback.
- 4 Switch the input selector on your TV to display "Home Theatre System."
- 5 Press **SETUP** in stop mode. The Setup Menu appears.
- 6 Press **←/→** repeatedly to select [Preference Page], then press **○**.
- 7 Press **↑/↓** repeatedly to select [TV Type], then press **○**.
- 8 Press **↑/↓** repeatedly to select [PAL] or [NTSC] from the displayed list, then press **○**.
- 9 Press **SETUP** to turn off the Setup Menu.

Note
• The display on the TV screen may be interrupted momentarily after changing the color system as described above.

16

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance. To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles). As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately. Do not install the appliance in a confined space, such as a bookcase or built-in cabinet. Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire. The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

CAUTION
The use of optical instruments with this product will increase eye hazard.

For customers in India
Disposal of Old Electrical & Electronic Equipment
(Applicable in the European Union and other European countries with separate collection systems)


For customers in Singapore
Complies with IEC Standards DB00353

Unpacking

- Checking the supplied items**
- Main unit (1)
 - Remote commander (remote) (1)
 - Speaker packages
 - DAV-DZ350
 - Speaker assembly parts for the tall speakers For DAV-DZ350 (2)
 - DAV-DZ650
 - Speaker assembly parts for the tall speakers For DAV-DZ650 (8)
 - DAV-DZ950
 - Speaker assembly parts for the tall speakers For DAV-DZ950 (16)
 - FM wire antenna (aerial) (1) • R6 (size AA) batteries (2)
 - Video cord* (1)
 - High Speed HDMI cable* (1)
 - Operating Instructions (this manual)
- * High Speed HDMI cable and video cord are included only in certain areas.


7

Connecting your TV

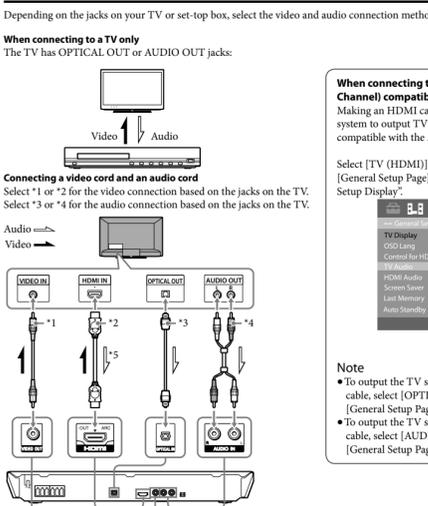

12

Parts and Controls

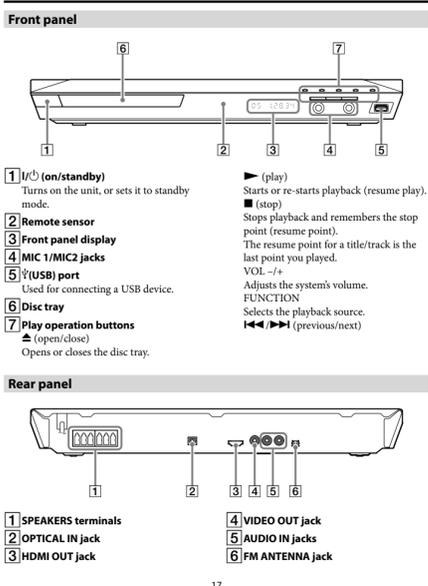

17

Trademarks
This system incorporates with Dolby™ Digital and Dolby Pro Logic adaptive matrix surround decoders.
* Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
This system incorporates High-Definition Multimedia Interface (HDMI™) technology. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
DVD is a trademark of DVD Format/Logo Licensing Corporation.
"PlayStation" and "PS3" are registered trademarks of Sony Computer Entertainment Inc.
"BRAVIA" is a trademark of Sony Corporation.
MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
All other trademarks are trademarks of their respective owners.

About these Operating Instructions

"DVD" may be used as a general term for a DVD VIDEO, DVD+RW/DVD+R, and DVD-RW/DVD-R.
The system enters standby mode automatically.
When the system is in pause, stop, open, or no disc mode, the system will enter standby mode automatically after 20 minutes.

3

Bluetooth wireless technology

Bluetooth wireless technology is a short-range wireless technology linking digital devices, such as personal computers and digital cameras. Using the Bluetooth wireless technology, you can operate the units involved within a range of about 10 meters. The Bluetooth wireless technology is commonly used between two devices, but a single device can be connected to multiple devices.
You do not need wires to get connected as you do with a USB connection, and you do not need to place the devices face to face as you do with wireless infrared technology. You can use the technology with one Bluetooth device in your bag or pocket.
Bluetooth wireless technology is a global standard supported by thousands of companies. These companies produce products that meet the global standard.

Supported Bluetooth version and profiles

Profile refers to a standard set of capabilities for various Bluetooth product capabilities. This system supports the following Bluetooth version and profiles.
Supported Bluetooth version: Bluetooth Standard version 2.1 + EDR (Enhanced Data Rate)
Supported Bluetooth profiles: A2DP (Advanced Audio Distribution Profile) AVRCP (Audio Video Remote Control Profile)
Note
• For you to use the Bluetooth function, the Bluetooth device to be connected must support the same profile as this system. Even if the device supports the same profile, the functions may differ because of the specifications of the Bluetooth device.

• The audio playback on this system may be delayed from that on the Bluetooth device because of the characteristics of the Bluetooth wireless technology.
Effective communication range
Bluetooth devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.
• When a person, metal object, wall or other obstruction is between the devices with a Bluetooth connection
• Locations where a wireless LAN is installed
• Around microwave ovens that are in use
• Locations where other electromagnetic waves occur

4

Effects of other devices
Bluetooth devices and wireless LAN (IEEE 802.11b/g) use the same frequency band (2.4 GHz). When using your Bluetooth device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:
• Try connecting this system and Bluetooth mobile phone or Bluetooth device when you are at least 10 meters away from the wireless LAN equipment.
• Turn off the power to the wireless LAN equipment when using your Bluetooth device within 10 meters.
Effects on other devices
The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system, Bluetooth mobile phone and

5

Notes on playback operations of a DVD
Some playback operations of a DVD may be intentionally restricted by software producers. Since this system plays a DVD according to the disc contents the software producers designed, some playback features may not be available.
Note about double-layer DVDs
The playback picture and sound may be momentarily interrupted when the layers switch.
Region code (DVD VIDEO only)
Your system has a region code printed on the rear of the unit and will only play a DVD VIDEO (playback only) labeled with an identical region code of (R).
Note about Multi Session CD
You can play only the first session of a multisection disc.

6

Playable Discs

DVD	DVD-VIDEO DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
CD	CD-DA (Music CD) CD-ROM CD-R/CD-RW VIDEO CD Super VCD


A CD or DVD will not play if it has not been correctly finalized. For more information, refer to the operating instructions supplied with the recording device.
Discs that cannot be played
• Blu-ray Discs
• HD DVDs
• DVD-RAMs
• DVD Audio discs
• PHOTO CDs
• Super Audio CDs
• Data track of CD-Extras
• Audio material side on DualDiscs
• DVD-R/DVD-RW/DVD+R/DVD+RW in VR (Video Recording) mode
• CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content tagged as "Copy once"

Notes on discs
This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this product.

7


Assembling the tall-type speakers (DAV-DZ650/DAV-DZ950 only)

Spread a cloth on the floor to avoid damaging the floor when you assemble the speakers.
Note
• The upper part of the front speakers can be directly wall mounted (the lower parts are not used). In this case, the below assembly is not required.

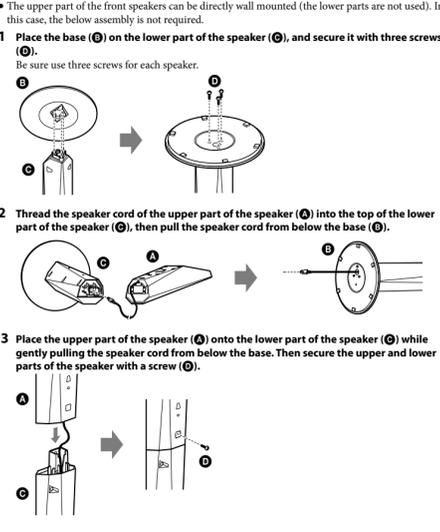

8


4 Remove any slack of the speaker cord in the speaker by gently pulling it from below the base (A).

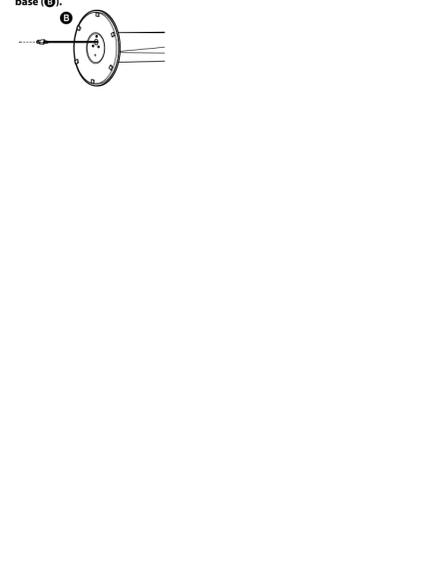

9

Connecting the FM wire antenna (aerial)

Note
• Supplied only in certain areas. This is the basic connection via video cord (yellow).
• Supplied only in certain areas. Picture quality will be improved compared to a video cord.
• Sold separately. Sound quality will improve compared to audio cord.
• Sold separately. To listen to TV audio via the system, connect with an audio cord (red and white).
• Available only when your TV is compatible with the ARC function.

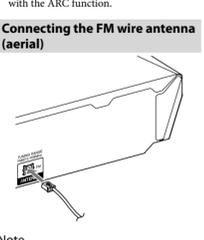


Note
• Find a location and an orientation that provide good reception, and then set up the antenna.
• Set up the antenna away from the AC power cord (mains lead), other cables, and metal objects such as windows.



10

When Installing the Speakers on a Wall

 Caution
• Contact a screw shop or installer for information regarding the wall material or screws to be used.
• Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws vertically and flat wall where reinforcement is applied.
• Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength or improper screw installation, natural calamity, etc.






  1 Prepare screws (not supplied) that are suitable for the hole on the back of each speaker. See the illustrations below.




11

  
2 Fasten the screws to the wall, then hang the speaker on the wall.

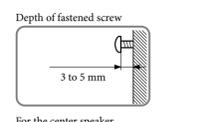

12

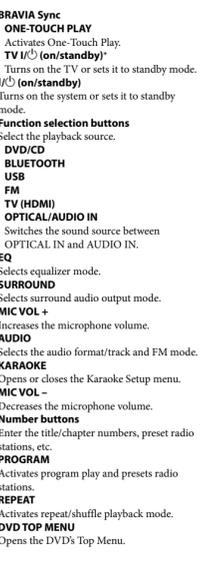

18

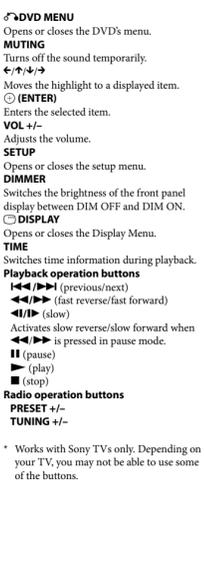

19

* Works with Sony TVs only. Depending on your TV, you may not be able to use some of the buttons.

20

Playing a Disc

- Press **DVD/CD**. You can also select this function by pressing FUNCTION repeatedly.
- Press **⏏** to open the disc tray.
- Place a disc on the tray, then press **⏏**.



With the label side up.

- Press **▶** to start playback.
- Press **VOL +/-** to adjust the volume.

Playing Files on a Disc/USB Device

- Press **DVD/CD** or **USB**.
 - DVD/CD: For a disc.
 - USB: For a USB device.

You can also select the function by pressing FUNCTION repeatedly.
- Load the source.**
 - For a disc** Place a disc on the tray by pressing **⏏** to open/close the disc tray.
 - For a USB device** Connect a USB device to the Ψ (USB) port.

- Press $\blacktriangleleft/\blacktriangleright$ to select a folder, then press **○** and select a file.
- Press **▶** to start playback.
- Press **VOL +/-** to adjust the volume.

NOTE

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the system off when connecting or removing the USB device.
- Depending on the disc/USB device, files may not play back.



Enjoying Karaoke

- Plug a microphone into the MIC jack.



- Press **KARAOKE**. The Karaoke Setup menu appears.
- Press $\blacktriangleleft/\blacktriangleright$ to select [Echo Level], then press **○**.
- Press $\blacktriangleleft/\blacktriangleright$ to change the echo level. To cancel the echo effect, select echo level "0".

Note

- If howling occurs:
 - Move the microphone away from the speakers.
 - Lower the microphone volume or echo level.
 - Lower the overall volume.

Changing the key of a song (Key Control)

You can change the key to suit your vocal range, except when the system is in stop mode.

- Press **KARAOKE**. The Karaoke Setup menu appears.
- Press $\blacktriangleleft/\blacktriangleright$ to select [Key Control], then press **○**.
- Press $\blacktriangleleft/\blacktriangleright$ to change the key.
 - Depending on the source, you may not be able to change the key.
 - The key returns to the original when:
 - the unit is turned off.
 - the playback source is changed.
 - a disc or a USB device is removed.

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.

Passwork Setup Page

- Press $\blacktriangleleft/\blacktriangleright$ to select a rating level from 1 to 8 or [Off], then press **○**.
- Press and hold **SHIFT**, then press the number buttons to enter your 6-digit password.

■ **[Default]** This feature enables you to reset all the setup menu options and your personal settings to the factory defaults, except for your password for the [Password] and [Parental] items. Press **○** to confirm the default reset.

Password Setup Page

- [Password]** The default password is "000000." To change the password:
- Press and hold **SHIFT**, then press the number buttons to enter "000000" or your last set 6-digit password in the [Old Password] section.
- Press and hold **SHIFT**, then press the number buttons to enter a new 6-digit password in the [New Password] section.
- Press and hold **SHIFT**, then press the number buttons to enter the new 6-digit password again in the [Confirm PWD] section to confirm your entry.
- Press [OK] to exit the menu.

■ **[Parental]** You can restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes.



Specifications

Amplifier Section

POWER OUTPUT (rated):
Front L + Front R 100 W + 100 W (at 3 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference):
Front L/Front R/Center/Surround L/ Surround R: 167 W (per channel at 3 ohms, 1 kHz)
Subwoofer: 165 W (at 3 ohms, 100 Hz)

Inputs

AUDIO IN and OPTICAL IN jacks

CD/DVD System

Laser Diode Properties
Emission Duration: Continuous
Laser Output*: Less than 44.6 μW

* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.

USB Section
 Ψ (USB) port:
Maximum current: 500 mA

Bluetooth section
Communication system
Bluetooth Specification version 2.1 + EDR (Enhanced Data Rate)

Video Section
Output
Bluetooth Specification
Power Class 2
Maximum communication range
Line of sight approx. 10 m*

9

Using the Bluetooth function

You can listen to music from your *Bluetooth* mobile phone or *Bluetooth* device over a wireless connection. This system supports the *Bluetooth* A2DP and AVRCP profiles. For details on *Bluetooth* wireless technology, see "Bluetooth wireless technology".

About the indicator for Bluetooth

The blue indicator on the front panel display, lights or flashes to show the *Bluetooth* status.

System status	Indicator
The system is pairing/ waiting	Flashes quickly.
The system is connecting with a <i>Bluetooth</i> device	Flashes slowly.
The system has established a connection with a <i>Bluetooth</i> device	Lights up.
The system is not in the <i>Bluetooth</i> mode	Turns off.

Note

- For details on operation of the connected devices, refer to the operating instructions supplied with the devices.
- The *Bluetooth* devices to be connected must support A2DP (Advanced Audio Distribution Profile).

About pairing
Pairing is an operation where *Bluetooth* devices are registered with each other beforehand. Use the procedure below to pair the system with your *Bluetooth* device. Once a pairing operation is performed, it does not have to be performed again. However, pairing is to be repeated in the cases listed below.

- Pairing information is deleted by repairing the system.

Using a Tuner

To preset radio stations

You can preset 20 FM stations. You can then tune in any of those stations simply by selecting the corresponding preset number.

- Press **FM**.
- Press and hold **TUNING +/-** for 2 seconds to start tuning until you find the desired radio station. "SEARCH +" or "SEARCH -" appears in the front panel display until a radio station with sufficient signal strength is found.
- Press and hold **SHIFT**, then press **PROGRAM**. "P 01" flashes in the front panel display.
- Press and hold **SHIFT**, then press the number buttons to select a preset number.
- Press **○** to store the station frequency.

To select a preset radio station

- Press **FM**.
- Press **PRESET +/-** to select a preset number.

You can also select a preset number by pressing and holding **SHIFT**, then pressing the number buttons.

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.

PRESET AUDIO. "STEREO": Stereo reception. "MONO": Monaural reception.

Precautions

On placement

- At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place heavy objects on the system.

On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- On cleaning**
 - Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.
 - If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

• This system can be paired with up to eight devices. If a further device is paired, the pairing information of the device with the oldest connection date is overwritten with new information.

- The connection history with this system is deleted on the TV's remote control.
- The system is reset to its default status.

Pairing this system with a Bluetooth device

- Place the system and a *Bluetooth* device within 1 meter of each other.
- Press **BLUETOOTH**. "BT READY" appears in the front panel display.
- Set the *Bluetooth* device in pairing mode.

For details on setting the *Bluetooth* device in pairing mode, refer to the operating instructions supplied with the device.

- Select "SONY DVD HOME THEATRE SYSTEM" in the *Bluetooth* device display. On some *Bluetooth* devices, the list may not be displayed. If a Passkey is requested, enter "0000". Perform this step within 5 minutes, otherwise pairing will be canceled.
- Once pairing is completed, the device is automatically connected to the system. When the *Bluetooth* connection is made correctly, the indicator of the front panel display lights and the pairing information is stored in the system.



Convenient Functions

About the Control for HDMI function ("BRAVIA" Sync)

You can control a TV compatible with the Control for HDMI function by connecting it to the system via an HDMI cable.

- One-Touch Play** With one touch of ONE-TOUCH PLAY on the remote control, the system and your TV automatically turn on and the TV's input is switched to the system; playback of a disc starts automatically.
 - System Power Off When you turn the TV off by using the I/O button on the TV's remote control or TV I/O on the system's remote control, the system turns off automatically.
 - System Audio Control You can switch the audio output to either the TV speakers or this system's speakers via the TV's menu.

You can set the system to turn off at a preset time, so you can fall asleep listening to music.

Press and hold **SHIFT**, then press **SLEEP**. Each time you press this button, the minute display (the remaining time) changes by 10 minutes.

A countdown of the last 20 seconds until the unit turns off appears in the front panel display.

To check the remaining time
Press and hold **SHIFT** and **SLEEP** for 3 seconds. The remaining time until the unit turns off appears in the front panel display.

Note

- Use a *Bluetooth* device such as *Bluetooth* mobile phone in an easily visible place in the same room where the main unit is placed.
- If Wi-Fi equipment is used, *Bluetooth* communication may become unstable. In that case, use the *Bluetooth* device as close as possible to the main unit.
- Sound may be interrupted because of a problem with the *Bluetooth* device.
- "Passkey" may be called "Passcode," "PIN code," "PIN number" or "Password," etc., depending on the device.
- The pairing standby status of the system is canceled after about 5 minutes and the indicator on the front panel display turns off. If pairing is not successful, repeat the procedure from step 1.

Listening to music with the Bluetooth connection

The system supports SCMS-T content protection. You can listen to a *Bluetooth* device that supports SCMS-T content protection. Before starting music playback, check the following:

- The *Bluetooth* function on the *Bluetooth* device is on.
- The pairing procedure is completed on both this system and *Bluetooth* device.

- Press **BLUETOOTH**. "BT AUDIO" appears in the front panel display.
- Start the *Bluetooth* connection from the *Bluetooth* device. The indicator of front panel display lights when the *Bluetooth* connection is established.

To cancel the sleep timer function

Press and hold **SHIFT**, then press **SLEEP** repeatedly until "OFF" appears in the front panel display.

To view information about the disc

You can check the playing time and remaining time of the current title, chapter, or track. Press and hold **SHIFT**, then press **TIME** repeatedly. Each time you press and hold **SHIFT**, then press **TIME** while playing the disc, the displayed time changes depending on the disc.

To change the Brightness of the Front Panel Display

You can change the brightness of the front panel display.

Press and hold **SHIFT**, then press **DIMMER**.

Sleep timer
You can set the system to turn off at a preset time, so you can fall asleep listening to music.

Press and hold **SHIFT**, then press **SLEEP**. Each time you press this button, the minute display (the remaining time) changes by 10 minutes.

A countdown of the last 20 seconds until the unit turns off appears in the front panel display.

To check the remaining time
Press and hold **SHIFT** and **SLEEP** for 3 seconds. The remaining time until the unit turns off appears in the front panel display.

Other Playback Operations

- To change angles** Press \square [DISPLAY] during playback to select the desired angle. (This applies to DVD VIDEOS only.)

To display subtitles

Press \square [DISPLAY] during playback to select the desired subtitle language. (This applies to DVD VIDEOS only.)

To audio the sound

Press \square [DISPLAY] repeatedly during playback to select the desired audio signal. — When the system is playing a DVD VIDEO recorded in multiple audio formats (PCM, Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language. — With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

Finishing the Bluetooth connection

Terminate the *Bluetooth* connection by any of the operations listed below.

- Operate the *Bluetooth* device to terminate the connection. For details, refer to the operating instructions supplied with the device.
- Turn off the *Bluetooth* device.
- Turn off the system.
- Select any function except "BT AUDIO".

Using the Setup Display

You can make various adjustments to items such as picture and sound. Displayed items vary depending on the country model. The default setting is underlined.


- Press **DVD/CD**, then eject the disc.
- Press **SETUP**. The setup menu appears.
- Press $\blacktriangleleft/\blacktriangleright$ to select one of the setup menu categories, then press **○**.
- Press $\blacktriangleleft/\blacktriangleright$ to select a setup item, then press $\blacktriangleleft/\blacktriangleright$ or **○**.
- Select the option you wish to change and press **○** to confirm and go back to the previously selected item.
- Press **SETUP** to turn off the menu. Selected category Setup categories

TV Display	On	Off	4:3 Letter Box
OSD Lamp	On	Off	4:3 Pan Scan
Control for HDMI	On	Off	
TV Audio	On	Off	
HDMI Audio	On	Off	
Screen Saver	On	Off	
Last Memory	On	Off	
Auto Standby	On	Off	

Selected setting Options

General Setup Page

 - [TV Display]** This function is available when you connect a wide-screen TV or a TV with a wide mode function.



9

To change angles

Press \square [DISPLAY] during playback to select the desired angle. (This applies to DVD VIDEOS only.)

To display subtitles

Press \square [DISPLAY] during playback to select the desired subtitle language. (This applies to DVD VIDEOS only.)

To audio the sound

Press \square [DISPLAY] repeatedly during playback to select the desired audio signal. — When the system is playing a DVD VIDEO recorded in multiple audio formats (PCM, Dolby Digital, or MPEG audio), you can change the audio format. If the DVD VIDEO is recorded with multilingual tracks, you can also change the language. — With a VIDEO CD or CD, you can select the sound from the right or left channel and listen to the sound of the selected channel through both the right and left speakers.

To play a VIDEO CD with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC
In stop mode, press and hold **SHIFT**, then press the number buttons to select the track number you want.



[4:3 Letter Box]: Displays a wide picture with black bands on the top and bottom.



[4:3 Pan Scan]: Displays a full-height picture on the entire screen, with trimmed sides.



■ **[OSD Lang] (On-Screen Display)**
You can switch the display language on the TV screen.

■ **[Control for HDMI]**
This function is available when you connect the system and a TV that is compatible with the Control for HDMI function via an HDMI cable. [On]: You can operate mutually between components that are connected via an HDMI cable. [Off]: Off.

■ **[TV Audio]**
This function is available when you connect the system and a TV that is compatible with the Control for HDMI function, via an HDMI cable. [TV (HDMI)] The system can receive the digital audio signal of the TV via an HDMI cable.

■ **[HDMI Audio]**
This setting is only required if you are using the HDMI OUT jack for an audio connection. [On]: Turns off HDMI audio output. You can still enjoy sound output via the speaker system. [All]: The HDMI audio output format will be same as the audio stream being played. If the playback audio format is not supported, the audio output will be changed to PCM automatically. [PCM]: HDMI audio output will be downmixed to linear PCM (2-channel).

■ **[Screen Saver]**
[On]: The screen saver image appears if you do not operate the system for about 15 minutes. [Off]: Off.

■ **[Last Memory]**
This system recalls the point where you stopped the disc the last time it was played and resumes playback from that point the next time you insert the same disc. [On]: The system stores the resume points in memory. [Off]: The system does not store the resume points in memory. Playback restarts at the resume point only for the current disc in the unit.

Bluetooth
There is no sound.

- Make sure this system is not too far from the *Bluetooth* device, or this system is not receiving interference from a Wi-Fi network, other 2.4 GHz wireless device, or microwave oven.
- Check that the *Bluetooth* connection is made properly between this system and the *Bluetooth* device.
- Pair this system and the *Bluetooth* device again.
- Keep this system away from metal objects or surfaces.
- Make sure this system is in *Bluetooth* mode.

Sound skips or the correspondence distance is short.

- If a device that generates electromagnetic radiation, such as a Wi-Fi network, other *Bluetooth* device(s), or a microwave oven is nearby, move away from such sources.
- Remove any obstacle between this system and *Bluetooth* device, or move away from the obstacle.
- Locate this system and *Bluetooth* device as near as possible.
- Re-position this system.
- Re-position the *Bluetooth* device.

Connecting cannot be done.

- Perform pairing again.

Pairing cannot be done.

- Bring this system and the *Bluetooth* device closer together.
- Delete the system from your *Bluetooth* device and perform pairing again.

Power

- The power is not turned on.**
 - Check that the AC power cord (mains lead) is connected securely.

Sound

The sound doesn't output from the surround speakers.

- Press **SURROUND** repeatedly and select "DOLBY PL" (PRO LOGIC) to output sound from all speakers. (Depending on the media, sound may not be output from the surround speakers.)

The (Speaker Setup Page) items cannot be changed.

 
- Press **DVD/CD**, then eject the disc.

There is no sound. Severe hum or noise is heard.

- Remove the speaker cords from the SPEAKERS terminals, straighten and extend the contact area of each speaker cord, then reconnect the speaker cords to the SPEAKERS terminals.
- Clean the disc.

The sound loses stereo effect when you play a VIDEO CD or CD.

- Set the audio setting to [Stereo] by pressing **AUDIO**.



Design and specifications are subject to change without notice.

* Valid when the system is in the following status. — [Control for HDMI] is set to [Off].

Dimensions (approx.) 430 mm × 54 mm × 306 mm (w/h/d) incl. Mass (approx.) 2.7 kg

Dimensions (approx.) 392 mm × 272 mm × 97 mm (w/h/d) incl. projecting parts Mass (approx.) 0.65 kg

Dimensions (approx.) 260 mm × 1,125 mm × 260 mm (w/h/d) incl. projecting parts Mass (approx.) 2.7 kg

Dimensions (approx.) 241 mm × 92 mm × 85 mm (w/h/d) incl. projecting parts Mass (approx.) 0.60 kg

Dimensions (approx.) 91 mm × 203 mm × 92 mm (w/h/d) incl. projecting parts Mass (approx.) 0.55 kg

Dimensions (approx.) 230 mm × 365 mm × 360 mm (w/h/d) incl. projecting parts Mass (approx.) 6.3 kg

Dimensions (approx.) 220 V - 240 V AC, 50/60 Hz Power consumption On: 70 W Standby: 0.3 W*



9

To search for a title/chapter/track/scene, etc.

- When playing a DVD/VCD**
 - Press \square [DISPLAY] during play. The Display Menu appears on the TV screen.

- Press $\blacktriangleleft/\blacktriangleright$ to select an option, then press **○**.

- Press and hold **SHIFT**, then press the number buttons to jump to the desired option.

■ **When playing a CD**

- Press \square [DISPLAY] during play. The selection display appears on the TV screen.

- Press and hold **SHIFT**, then press the number buttons to select the desired track.