

User guide

Stereo Headset STH32

Contents


Getting started	3
Introduction	
Overview	
Learning the basics	4
Wearing the headset	
Using the remote	4
Legal information	6

Getting started

Introduction

The Stereo Headset STH32 is a water-resistant, open-ear headset which uses highquality audio. This device enables hands-free calling and music listening.

Overview

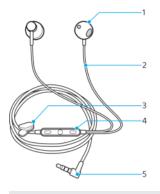

- 1 Headphone
- 2 Cord
- 3 Clip
- 4 Remote
- 5 Input plug

Learning the basics

Wearing the headset

 
To wear the headset



- Attach the clip to the headset cord below the remote. Position the clip so that you can speak into the microphone for taking calls hands-free, once the headset is fastened to your clothes.
- If you need to adjust the clip, remove the clip and reposition it on the cord.

Using the remote

Remote overview



- 1 Volume +
- 2 Center button
- 3 Volume -
- 4 Microphone

To control the volume

- 1 Press the Volume + to raise the volume.
- 2 Press the Volume to lower the volume.
- If you are connected to an iOS device, adjust the volume directly on the iOS device. The volume buttons on the remote control are only compatible with Android[™] devices.

To answer or reject a call

- 1 To answer a call, press the center button. Press this again to end the call.
- 2 To reject a call, press and hold down the center button for one second.

To pause or skip music tracks

- 1 When listening to music, press the center button to pause the music track. Press it again to resume.
- Press the center button twice to skip to the next track.
 Press the center button three times to restart the current song. To return to the previous track press it three times again.

To start the voice search & actions

• Hold down the center button to start to talk to Google/Siri.

Legal information

Sony STH32

Prior to use, please read the Important information leaflet separately provided.

This User guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©2017 Sony Mobile Communications Inc.

4-12-3 Higashi-Shinagawa, Shinagawa-ku, Tokyo, 140-0002 Japan

Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium Sony is the trademark or registered trademark of Sony Corporation. All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

CE