

Welcome to the future of play.

Quick Start Guide


English

CHIL-2116A / CHIL-2116B

Let's get started

1 Connect to your TV.

Follow steps 1 to 4 below to connect your PlayStation 4 system to your TV.

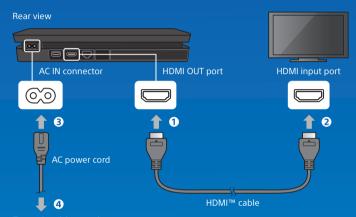

To an electricity supply


You can transfer saved data from your current PS4™ system to your new PS4™ system. If you intend to do this, we recommend completing the data transfer during the initial set up process for your new system. If you do it later, any saved data on the new system will be lost. For guidance on transferring data and the types of data you can transfer, refer to the User's Guide. manuals.playstation.net/qb/04.html



2 Connect to the Internet.

We recommend use of a LAN cable (sold separately) for a more stable network connection.

If you prefer to use a wireless connection (Wi-Fi), don't connect a LAN cable.

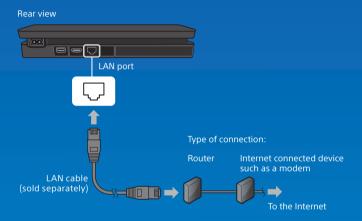

Get the most out of your PS4™ system by connecting to the Internet. You'll be able to play games online and connect with Friends.*1

- 3 Turn on your TV and set the input to HDMI.
- Turn on your PS4™ system by pressing the () (power) button.


The power indicator blinks blue, and then turns white.



If your TV does not display a picture when the power indicator turns white, restart your system. Press the \bigcirc (power) button for at least 7 seconds to turn off your system, and then turn it on again.

5 Connect your DUALSHOCK_®4 wireless controller to your system using the USB cable, and then press the (PS) button.

Your controller pairs with your system and turns on.

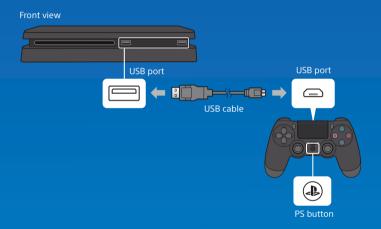

- You'll need to pair a controller when you use it for the first time and when
 you use your controller on another PS4™ system. If you want to use two or
 more controllers, you must pair each controller.
- After you've paired your controller, you can disconnect the USB cable and use your controller wirelessly.
- It's possible to use up to four controllers at the same time. When you press
 the (a) (PS) button, the light bar glows in your assigned colour. The first
 controller to connect is blue, with subsequent controllers glowing red, green,
 and pink.

6 Make it your own.

You're almost done! Follow the on-screen instructions to set up an Internet connection, set the date and time, and configure other settings - then select [Start Now] from the setup screen.

After you set up your Internet connection, a system software update may automatically download. Future updates will improve performance and add new features.

Will a child be using your PS4™ system? If so, be sure to read the "Parental controls" section.

To later change any settings that you skipped, select (Settings) from the function screen.

Parental controls

If children will be using the PS4™ system, parents or guardians can restrict access to certain content or features using parental controls

For details on what can be restricted and how to set restrictions, refer to the User's Guide.

manuals.playstation.net/gb/01.html



You can restrict the use of games that have age limitations by setting the parental control level according to the following table.

Europe, Africa and India

Player's Age	Under 3	3-6	7-11	12-15	16-17	18 and over
PS4™ Parental Control Setting	1	2	3	5	7	9
Highest game age rating		3 mmc, peginto	NAME DESIGNATE	12 www.seguinto	16	18 www.zegi.wio

Germany

Player's Age	Under 6	6-11	12-15	16-17	18 and over
PS4™ Parental Control Setting	1	3	5	7	9
Highest game age rating	ÜSK	ůsk Ĝ	12 12	16	18

Portugal

Player's Age	Under 4	4-5	6-11	12-15	16-17	18 and over
PS4™ Parental Control Setting	1	2	3	5	7	9
Highest game age rating		4 www.peglinto	6 www.poglato	12	16	18

Take a look around



Function screen

Access PS4™ system features, including notifications, your Friends, and settings.



Up button

Down button



Home screen

Content area

Access your games and other content.



Up button

Down button



Content info screen

The latest information about the selected content is displayed.

Let's play

Start the game

Insert a disc. Select the game from the content area to start playing.

Front view



Return to the home screen from a game

To return to the home screen without ending a game, press the $\textcircled{\textbf{}}$ (PS) button.

To resume playing the game, select it from the content area.

End the game

Press and hold the (PS) button, and then select [Close Application] from the quick menu that appears.

Eject the disc


Press the **△** (eject) button.

Front view




Connect the mono headset

For in-game voice chat, plug the mono headset into your controller's stereo headset jack.

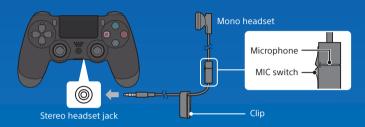

Charge your controller

With your PS4™ system either on or in rest mode, connect your controller using a USB cable. For details on rest mode, read the "Shutting down" section.

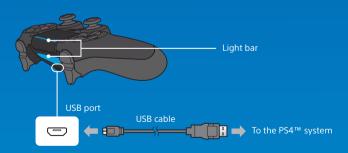

To charge your controller while your system is in rest mode, select an option other than [Off] in (Settings) > [Power Saving Settings] > [Set Features Available in Rest Mode] > [Supply Power to USB Ports].

Share your gaming experience

Share your gameplay online

Press the SHARE button and choose one of these options for sharing your gameplay online.





Upload a screenshot

Capture a screenshot of your gameplay and upload it to your social networks, or use \P (Messages) to send it to Friends.



Upload a video clip

Your PS4™ system continuously records the last 15 minutes of gameplay. You can upload a video clip of the recorded gameplay to your social networks.



Broadcast your gameplay live

Broadcast your gameplay to a live streaming service so others can watch your adventures.

View shared gameplay

Use **!!!** (Live from PlayStation) to view broadcasts, video clips, or screenshots shared by other players.



Play a game together

Use (Share Play) to share the game screen with another player and play the same game together. 2



For details on the share feature, refer to the User's Guide. manuals.playstation.net/gb/02.html



Sign in to PlayStation™Network

PlayStation™Network is an online service that lets you expand your enjoyment of your PS4™ system. When you sign in, you can use the share feature as well as a wide variety of other features and services.



To sign in to PlayStation™Network, you must have a Sony Entertainment Network account. For details on signing in, refer to the User's Guide.
manuals.playstation.net/gb/03.html



PlayStation™Network, PlayStation™Store and PlayStation®Plus subject to terms of use and country and language restrictions. Users are responsible for Internet service fees. Charges apply for some content and / or services. Users must be 7 years or older and users under 18 require parental consent. Additional age restrictions may apply. Service availability is not guaranteed. Online features of specific games may be withdrawn on reasonable notice eu.playstation.com/gameservers. Full terms apply: PSN Terms of Service at eu.playstation.com/legal.

Shutting down



Disconnect the AC power cord from the electrical outlet only when the power indicator is off. If you disconnect it while the power indicator is lit or blinking, data might be lost or become corrupted, and you might damage your system. Be sure to read the "Turn off your system completely" section below.

Put your system in rest mode

When your system is in rest mode, it keeps operating, but at a lower power consumption. You can configure your system to download files and charge a controller while it's in rest mode.

Select (b) (Power) from the function screen, and then select [Power Options] > [Enter Rest Mode]. The power indicator blinks white, and then turns orange.

To exit rest mode, press the (PS) button.

Turn off your system completely

Select (b) (Power) from the function screen, and then select [Turn Off PS4]. The power indicator blinks white, and then turns off.

Power indicator

White	System is on.
Orange	System is in rest mode.
Off	System is off.

Further information

User's Guide

Find out about everything your PS4™ system can do. Learn how to configure settings and how to use each function.

Select क (Settings) > ♣ (User's Guide/Helpful Info) > ♣ (User's Guide) from the function screen.

You can also view the User's Guide by visiting: manuals.playstation.net/document/gb/ps4/

You must have an Internet connection to view the User's Guide.



Safety Guide

Learn how to use your PS4™ system safely. This manual also contains information about specifications. Be sure to read it before using your system.

- 1 PlayStation®4 online multiplayer requires paid-for PlayStation®Plus subscription. PlayStation®Plus subscription only available to Sony Entertainment Network account holders with access to PlayStation™Store and high-speed Internet. PlayStation®Plus content and services vary by subscriber age.
- ²² Share Play: Unlimited 60 minute sessions. PlayStation Plus membership, high-speed Internet (2 Mbps upload recommended), PS4™ and Sony Entertainment Network account required. Country, game and other restrictions apply: eu.playstation.com/shareplay.

"基", "PlayStation", "アプイ", "DUALSHOCK" and "⑥ ⑥ ⑧ 🗓 " are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

"SONY", " The main and "Sony Entertainment Network" are registered trademarks or trademarks of Sony Corporation.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Design and specifications are subject to change without notice.

Information about system functionality and images published in this document may vary from those for your system, depending on the system software version in use. Also, the illustrations and screen images used in this guide may vary from the actual product.

The information contained in this guide is subject to change without notice.

