SONY

* 4 7 3 5 1 3 5 2 1 * (1)
4-735-135-**21**(1)

Home Theatre System

Startup Guide

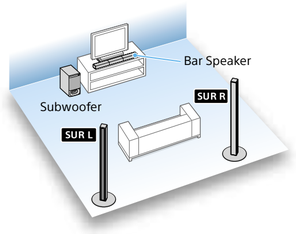

HT-S700RF

To set up the remote control

What's in the box

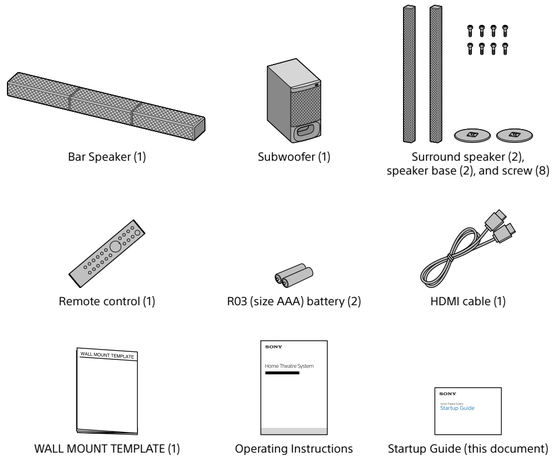

1 Installing the surround speakers (SUR L/SUR R) on the floor

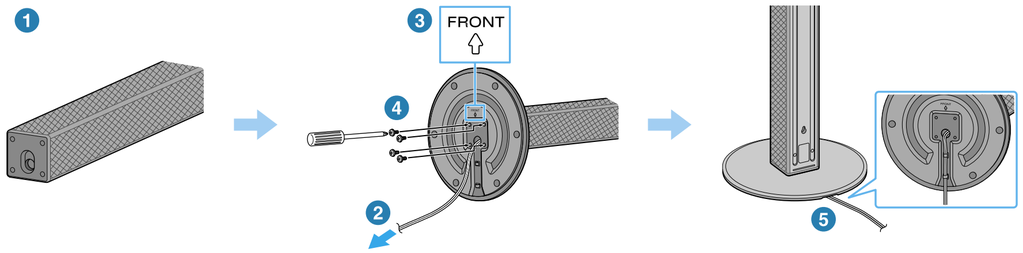

1. Place the surround speaker on the floor with the front side facing up.
2. Thread the speaker cord from the surround speaker through the hole in the speaker base.
3. Position the speaker base so that "FRONT ⇧" points upward.
4. Secure the speaker base and the surround speaker with four screws.
5. Slide the speaker cord into the slot at the speaker base.

Note

- Spread a cloth on the floor to avoid damaging the floor when you assemble the surround speakers.

2 Connecting the speakers

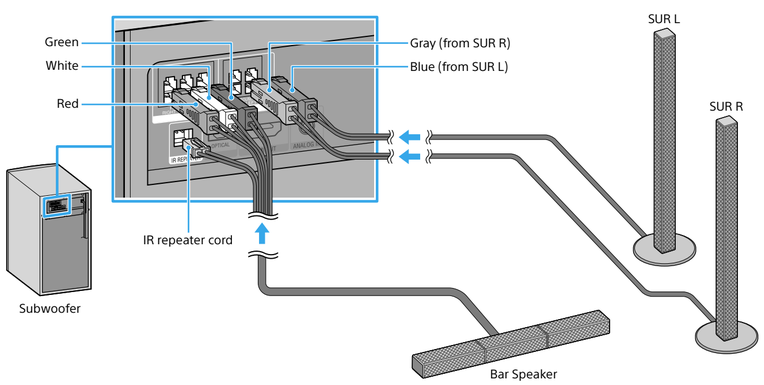

Note

- Place the subwoofer 5 cm or more away from a TV rack, walls, etc.
- Connect the speaker cords to the matching color of the SPEAKERS jacks on the rear panel of the subwoofer.

3 Connecting with a TV

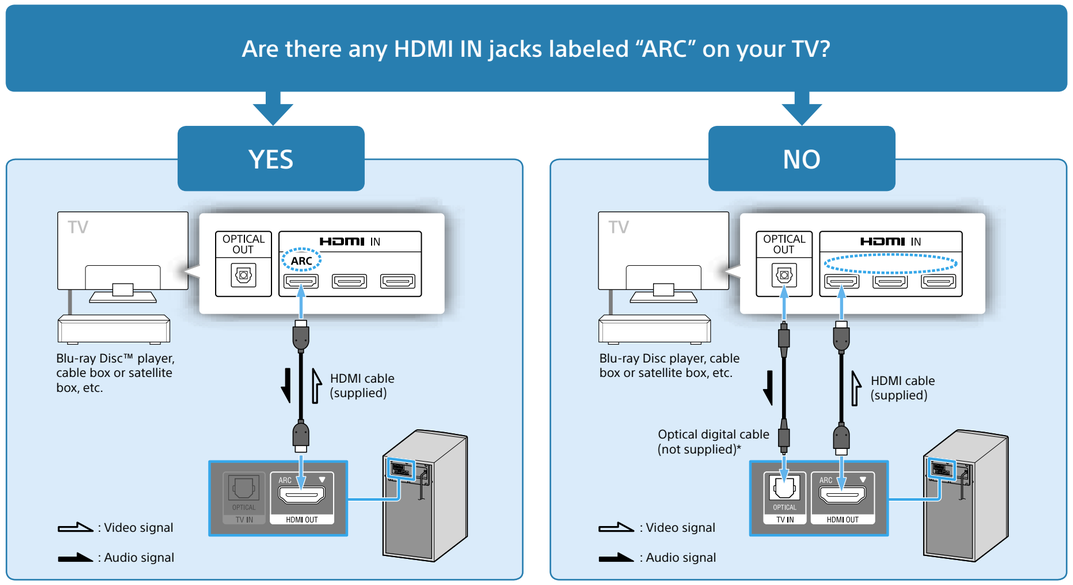

* If your TV does not support the ARC (Audio Return Channel) function, connect an optical digital cable (not supplied) to listen to the TV sound.

4 Turning on the system

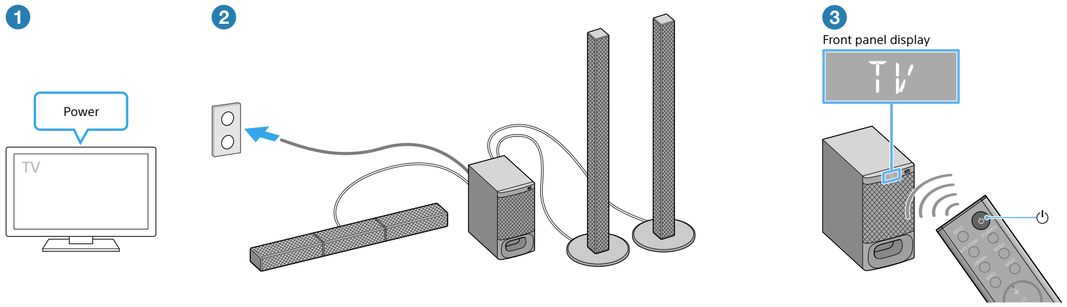

1. Turn on the TV.
2. Connect the AC power cord (mains lead) of the subwoofer to the wall outlet (mains).
3. Press ⏻ (power) on the remote control of the system.
   The front panel display lights up.

5 Listening to the sound

1. Press INPUT repeatedly until the input source you want appears in the front panel display.
   To listen to TV audio, make sure that "TV" is displayed in the front panel display, then select the program you want using the TV remote control. When "TV" is not displayed in the front panel display, press INPUT on the remote control of the system to select the TV input.
2. Press ◿ +/– to adjust the system volume and press SW◿ +/– to adjust the subwoofer volume.

Note

- Depending on the order in which you turn on the TV and the system, the system may enter muting mode. In this case, turn on the TV first, then the system.

© 2018 Sony Corporation Printed in China

SONY

Home Theatre System

Guide de démarrage

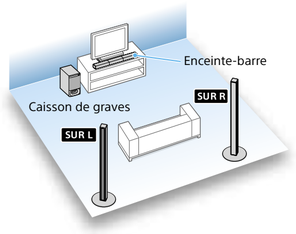

HT-S700RF

Pour configurer la télécommande

Contenu de l'emballage

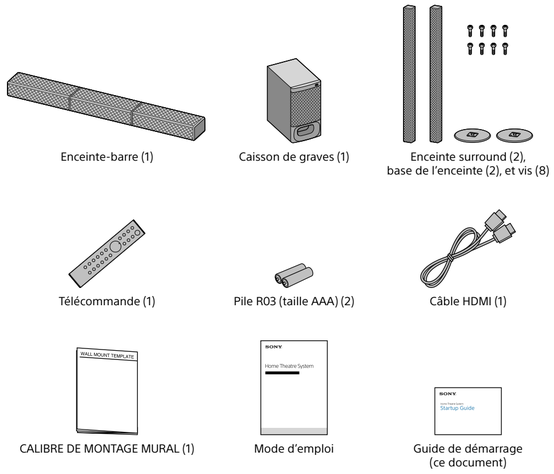

1 Installation des enceintes surround (SUR L/SUR R) sur le sol

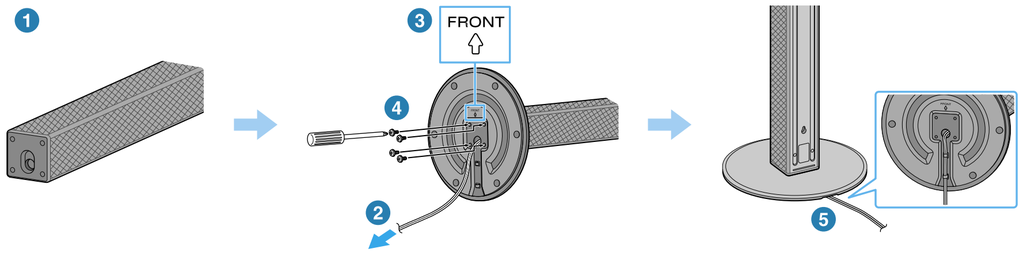

1. Placez l'enceinte surround sur le sol en orientant la face avant vers le haut.
2. Faites passer le cordon de l'enceinte surround à travers l'orifice situé sur la base de l'enceinte.
3. Positionnez la base de l'enceinte de manière à ce que la mention « FRONT ⇧ » soit orientée vers le haut.
4. Fixez la base de l'enceinte et l'enceinte surround à l'aide de quatre vis.
5. Glissez le cordon de l'enceinte dans la fente située sur la base de l'enceinte.

Remarque

- Étalez un tissu sur le sol pour éviter d'endommager ce dernier lorsque vous assemblez les enceintes surround.

2 Raccordement des enceintes

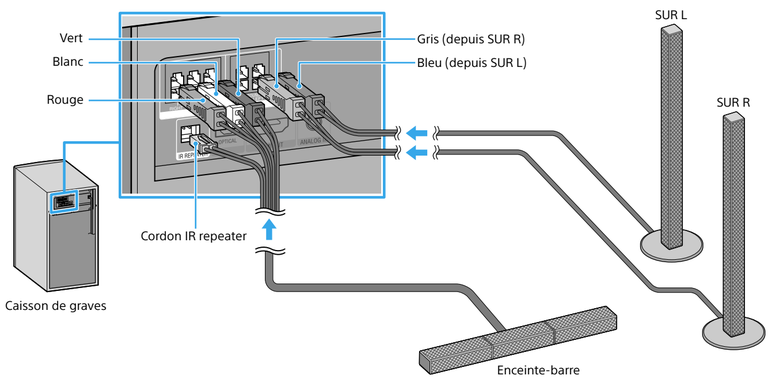

Remarque

- Éloignez le caisson de graves de 5 cm ou plus de la baie du téléviseur, des murs, etc.
- Raccordez les cordons des enceintes aux prises SPEAKERS des couleurs correspondantes situées sur le panneau arrière du caisson de graves.

3 Raccordement à un téléviseur

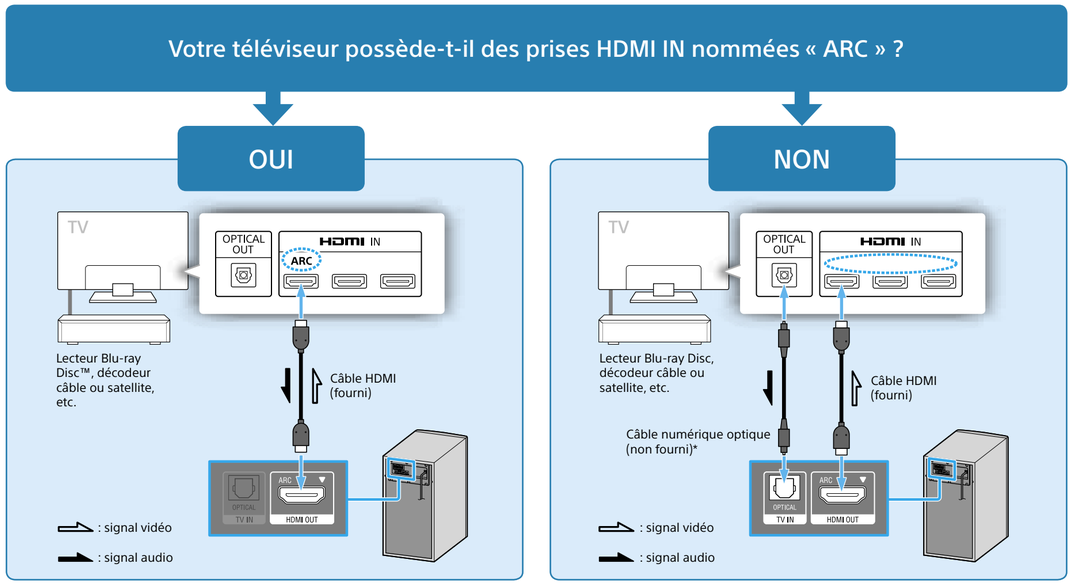

* Si votre téléviseur ne prend pas en charge la fonction ARC (Audio Return Channel), raccordez un câble numérique optique (non fourni) pour pouvoir entendre le son du téléviseur.

4 Mise sous tension du système

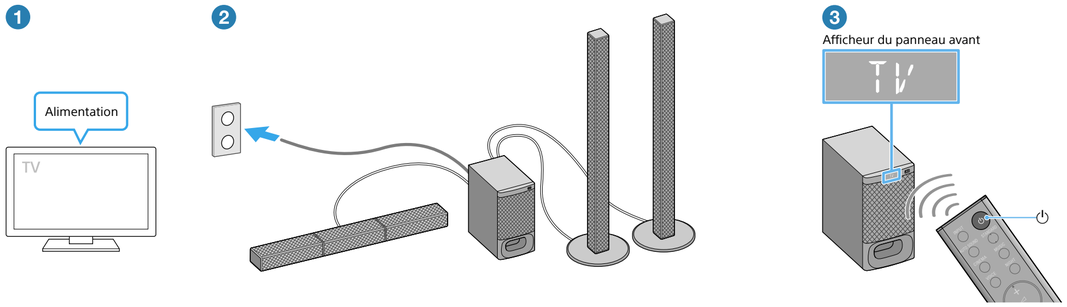

1. Mettez le téléviseur sous tension.
2. Raccordez le cordon d'alimentation secteur du caisson de graves à la prise secteur.
3. Appuyez sur la touche ⏻ (alimentation) de la télécommande du système.
   L'afficheur du panneau avant s'allume.

5 Écoute du son

1. Appuyez plusieurs fois sur INPUT jusqu'à ce que la source souhaitée en entrée apparaisse sur l'afficheur du panneau avant.
   Pour écouter le son du téléviseur, vérifiez que la mention « TV » apparaît sur l'afficheur du panneau avant, puis sélectionnez le programme que vous souhaitez regarder à l'aide de la télécommande du téléviseur. Lorsque la mention « TV » n'apparaît pas sur l'afficheur du panneau avant, appuyez sur INPUT sur la télécommande du système pour sélectionner l'entrée TV.
2. Appuyez sur ◿ +/– pour régler le volume du système et appuyez sur SW◿ +/– pour régler le volume du caisson de graves.

Remarque

- Selon l'ordre dans lequel vous mettez sous tension le téléviseur et le système, ce dernier peut passer en mode Silencieux. Dans ce cas, mettez d'abord le téléviseur sous tension, puis le système.